

# BOOMRANG™

## INSTRUCTION GUIDE

### 1) POWER ON / OFF

To power on the BOOMRANG slide the switch which is located on the side of the BOOMRANG. A blue light will flash and a power up start will alert you of its power on. The device will start searching for a Bluetooth device to connect to automatically.

To power off the device slide the switch located on the side the side of the BOOMRANG, all lights will turn off and an alert sound will indicate that it has switched off.

### 2) BLUETOOTH CONNECT

Once the BOOMRANG has been turned a searching sound will indicate Bluetooth is activated. If you don't hear the sound you can switch to Bluetooth mode by pressing 'M' button which will switch the mode of the BOOMRANG into Bluetooth mode.

### 3) RADIO

To tune in the radio you can do this by enabling the radio mode by pressing the 'M' button. Once the device has been put into radio mode once in radio mode press the 'PLAY' button once. The Boomrang will start to tune in the radio automatically, press the 'PLAY' button again to find your favorite radio station.

### 4) BLUETOOTH TRACK SKIPPING

To skip music backwards on your Boomrang hold down the 'VOLUME DOWN' button for 2 seconds. To skip music forwards hold down the 'VOLUME UP' button for 2 seconds.

### 5) HOW DO I ANSWER AND DISCONNECT CALLS FROM BOOMRANG?

If you receive a call on your mobile phone and your Boomrang is connected to answer the call press the 'PLAY' button, to disconnect the call press the button again.

### 6) HOW TO MAKE A CALL TO THE LAST PERSON

To make a call to the last person you called or received a call from hold down the 'PLAY' button the BOOMRANG will start calling.