

hollis+morris



bolt
pendant 5'
product installation + specifications



bolt pendant

product code:

BOLTpendant

materials:

- + solid W.Oak or Walnut
- + 24V LED extrusion
- + suspension hardware

finish:

- + hardwax oil
- + stainless steel hardware

input:

- + 120V 50/60 Hz (Canada + US)

output:



- + 52 Watts (19.5 W/metre)
- + 3000K with CRI of 95 or higher
- + 2775 lumens
- + equivalent incandescent - 75-100W

driver:

- + 120V - 24V fully dimmable
- + driver included w/ canopy

suspension:


- + cord length: 10' standard
(custom length available)
- + 3-point ceiling connection

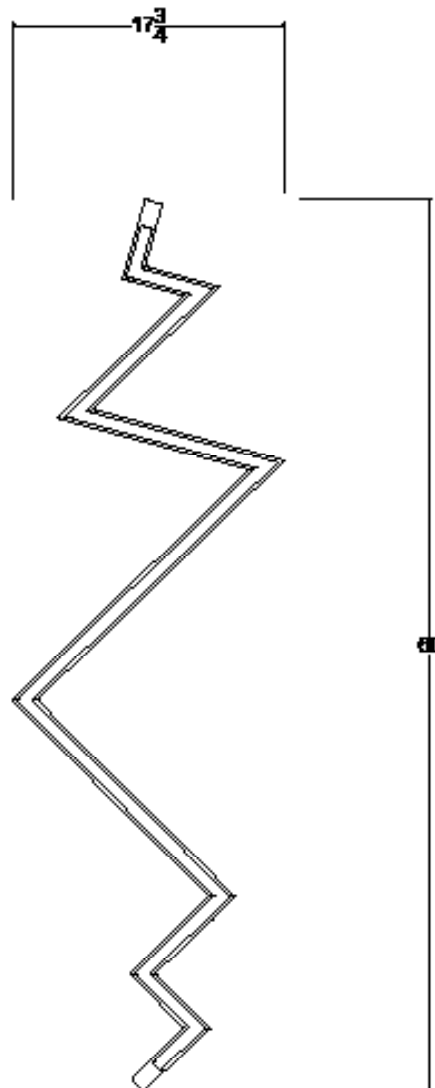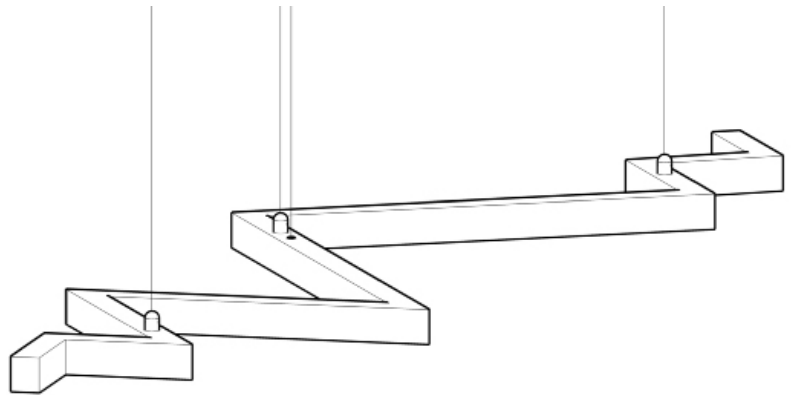

certification:




dimensions + installation

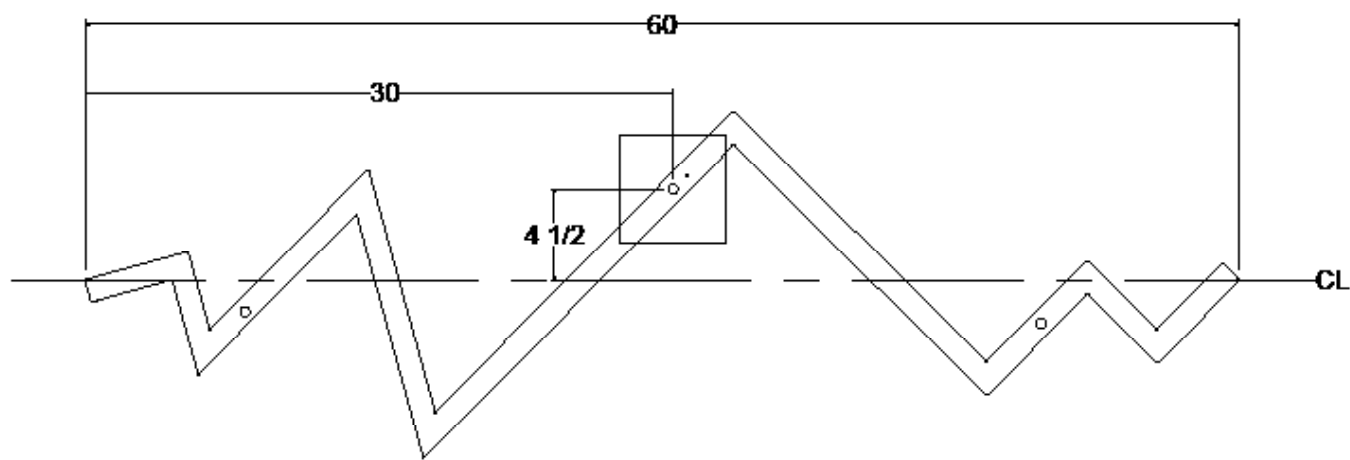

plan view - canopy & centre support location

1. Locate desired canopy location on ceiling and have a certified electrician supply and install to 120V power.
2. Connect braided suspension cable from fixture to ceiling or canopy as illustrated on pg. 4
3. Feed insulated power line into canopy as illustrated on pg. 4
4. Connect +/- leads to 24V transformer w/in canopy.
5. Secure all connections.

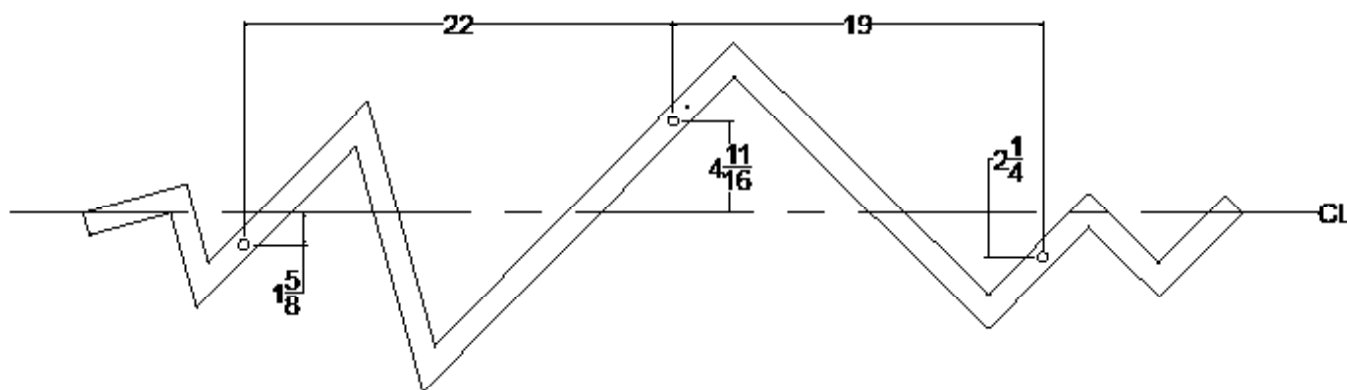


plan view - outer hanger locations




1. Locate remaining suspension cable points on ceiling as per drawing.
2. Install using supplied suspension hardware
3. Use hardware to adjust for vertical height and horizontal plane

dimensions + installation

Option A - Support from canopy

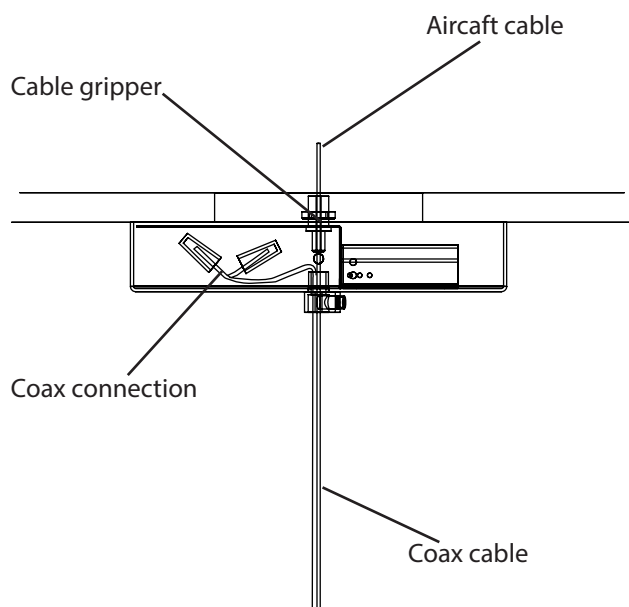

Option B - Support from ceiling

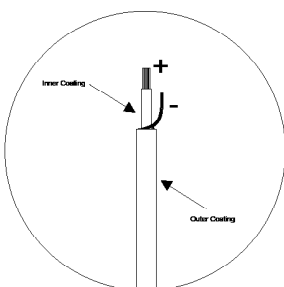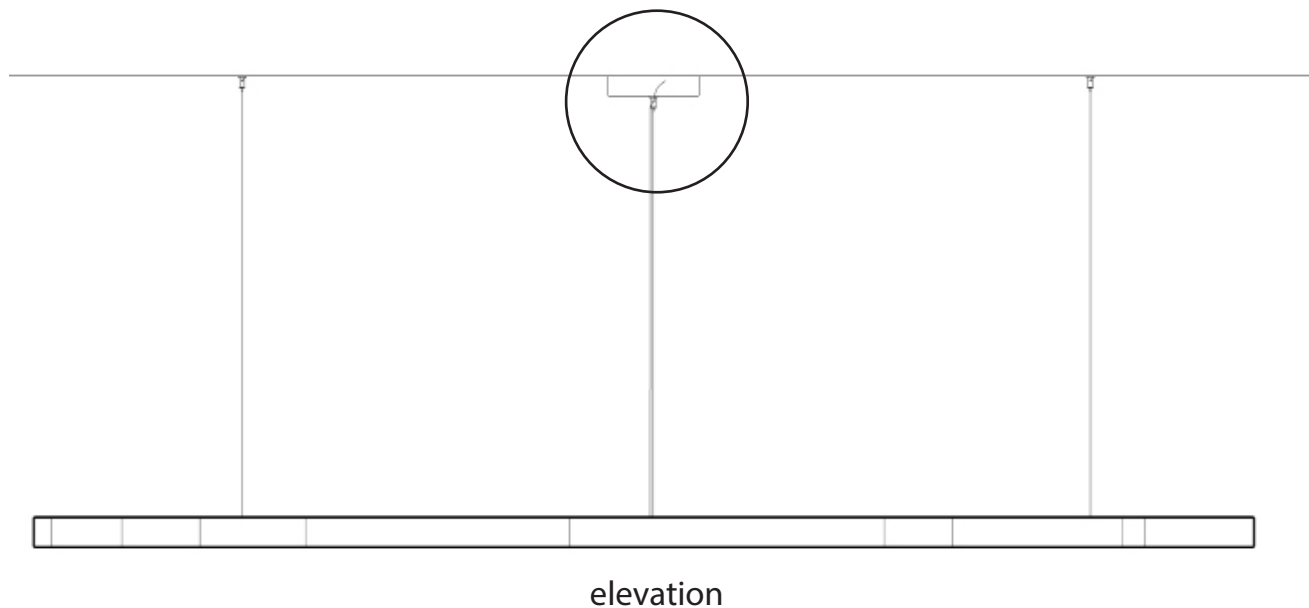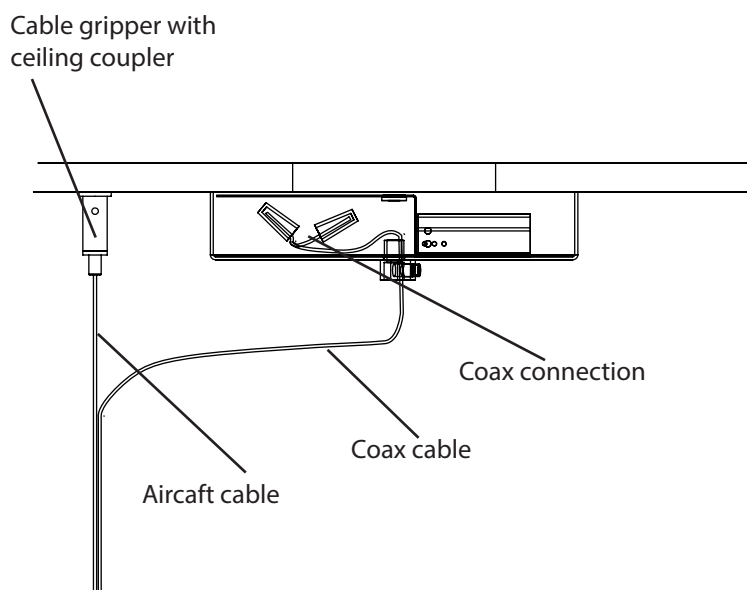


*** COAX CABLE

coax cable requires stripping of outer and inner coatings to access positive and negative connection wires

dimensions + installation

SINGLE FIXTURE CANOPY CONNECTION


Coax runs into canopy

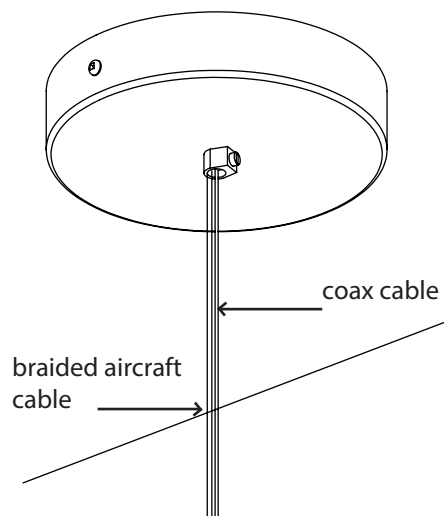

MULTIPLE FIXTURES CANOPY CONNECTION

A Coax runs into canopy

B Second coax runs up to ceiling and drops over to enter power feed canopy

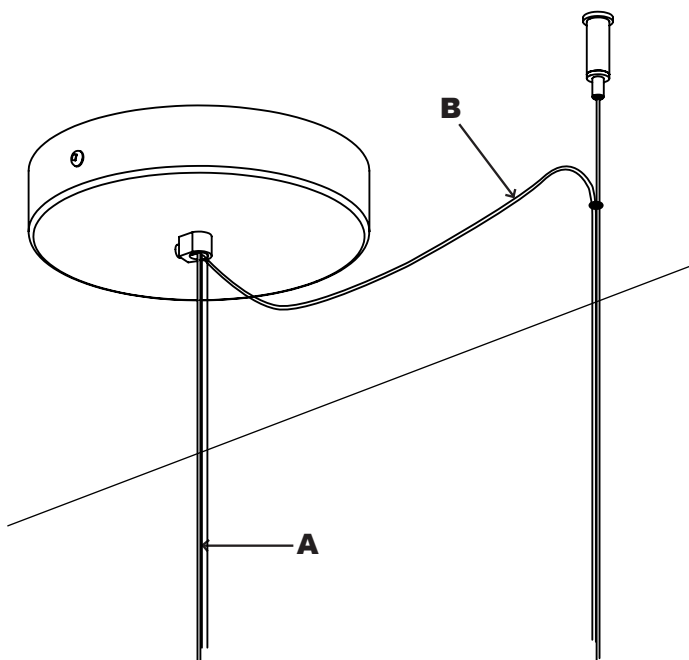


SINGLE FIXTURE CONNECTION INTO REMOTE DRIVER

A Coax from fixture runs up into ceiling to connect to remote driver (B)

B Remote driver (supplied w/ fixture) installed in ceiling

C Remote driver connects to power supply

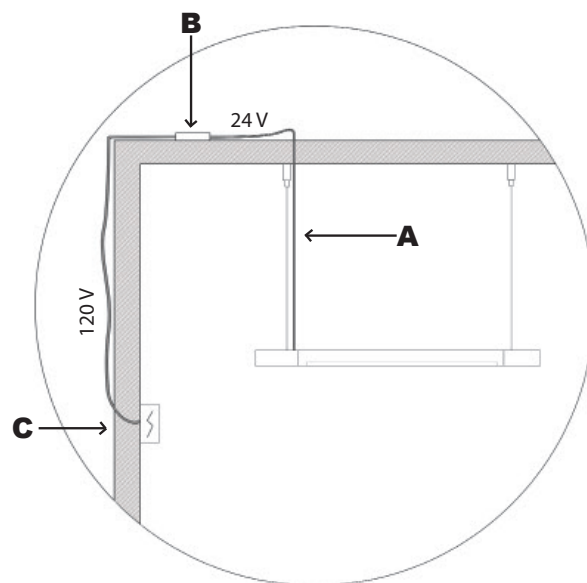


MULTIPLE FIXTURES INTO REMOTE DRIVER

A Coax from multiple fixtures runs up into ceiling to connect to remote driver (B)

B Remote driver (supplied w/ fixture) installed in ceiling

C Remote driver (B) connects to remote driver (C)

D Remote driver (C) connects to power supply

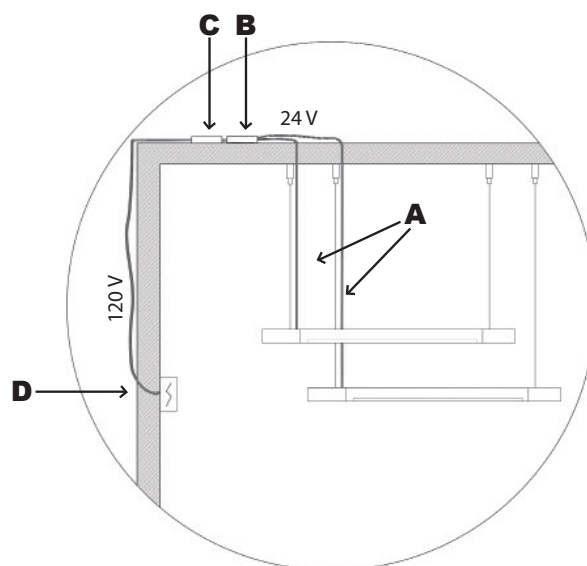

dimensions + installation

PENDANT GRIPPER ASSEMBLY

