 


hollis+morris

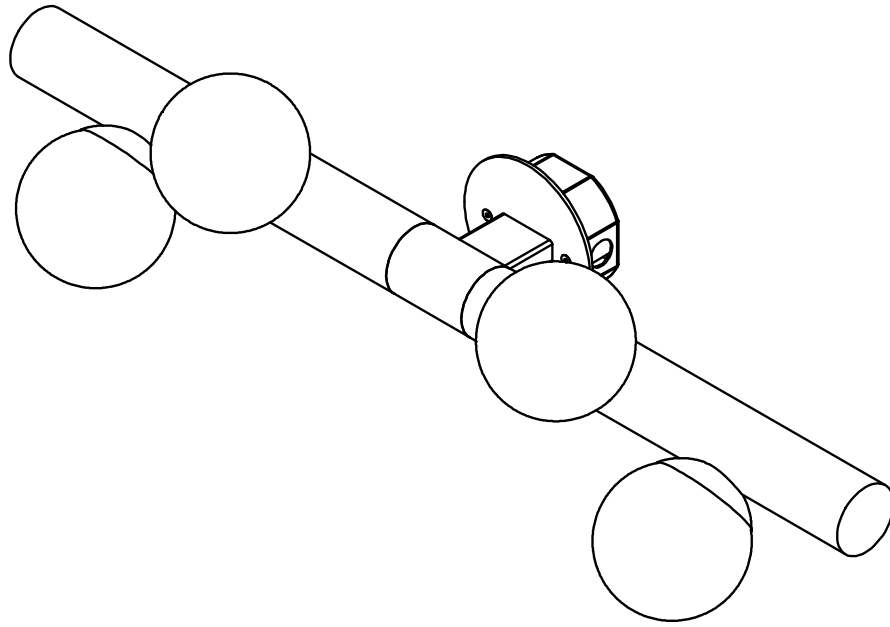

willow
wall light

product installation + specifications



willow wall light

product code:
WILOWall

materials:

- + solid wood
- + hand blown glass
- + metal
- + 12V G4 light bulb

finish:

- + hardwax oil
- + powder coated or plated steel

input:

- + 120V 50/60 Hz (Canada + US)

driver:

 
 
- + 12V phase dimmable driver
- + driver included with canopy
- + 277 VAC- 0-10V (upon request)

output:

- + 8 W (2 W / bulb)
- + 480 lm (170 lm / bulb)
- + 3000K with CRI of 95 or higher

mounting:

- + junction box connection
- + single driver connection

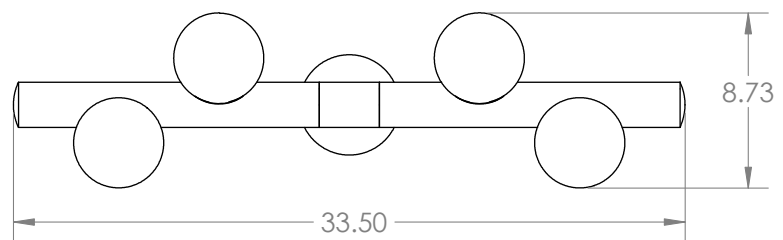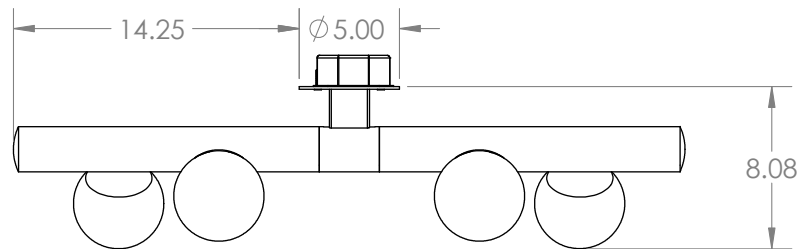


certification:



hardware component list



Component	Quantity	
Constellation Wall	1	
8-32, 1" Flat Head Screw	2	
Universal Junction Plate	1	
B+L Driver	1	
8-32, 1" Round Head Screw	2	

 hardware installation assembly

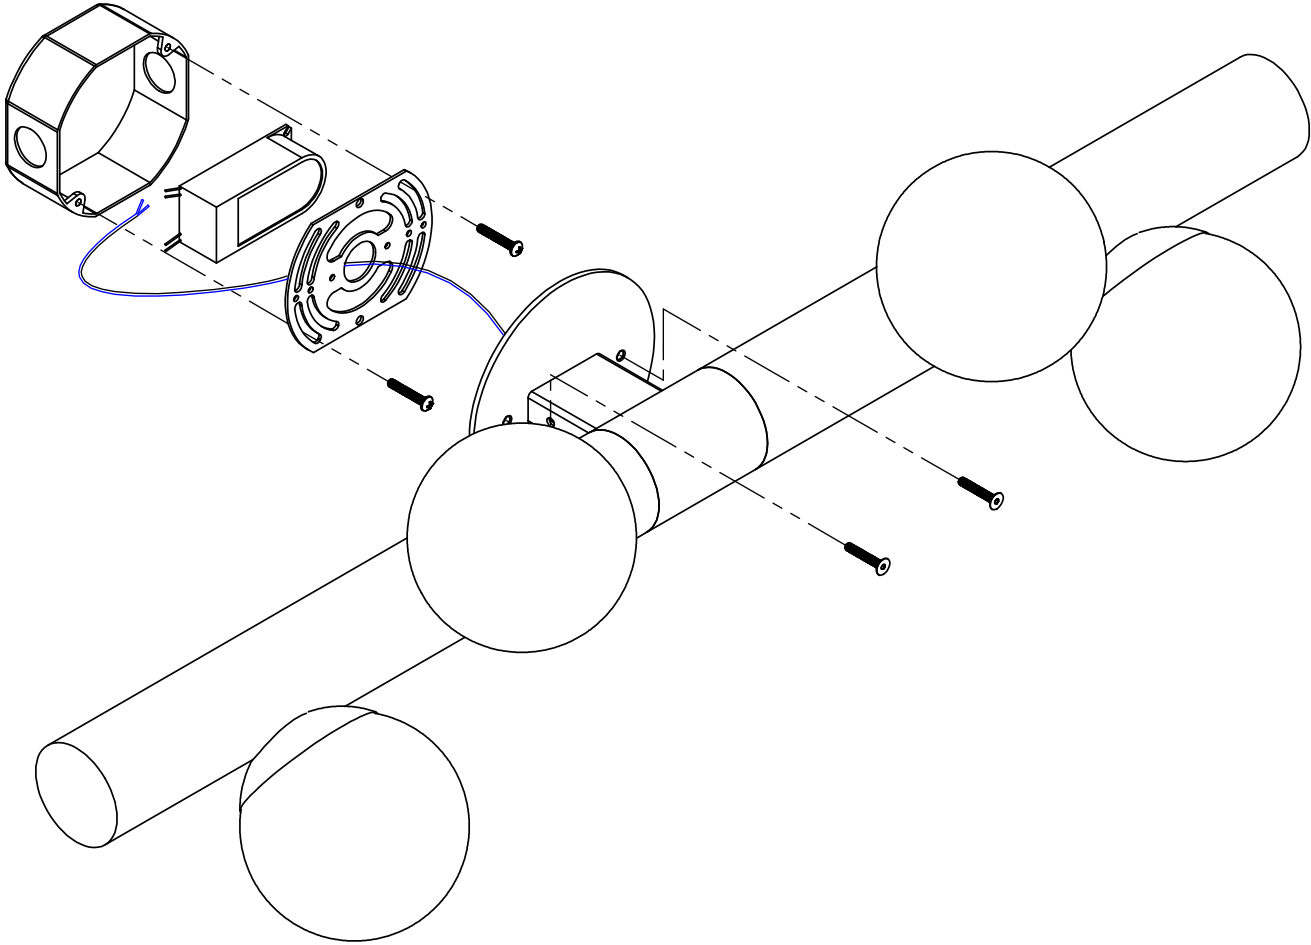


COAX CABLE

  coax cable requires stripping of outer and inner coatings to access positive and negative connection wires

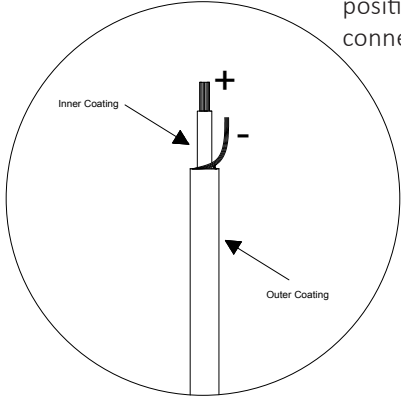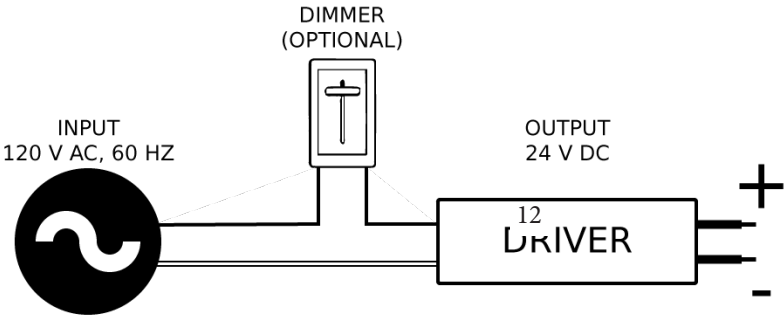

hardware installation

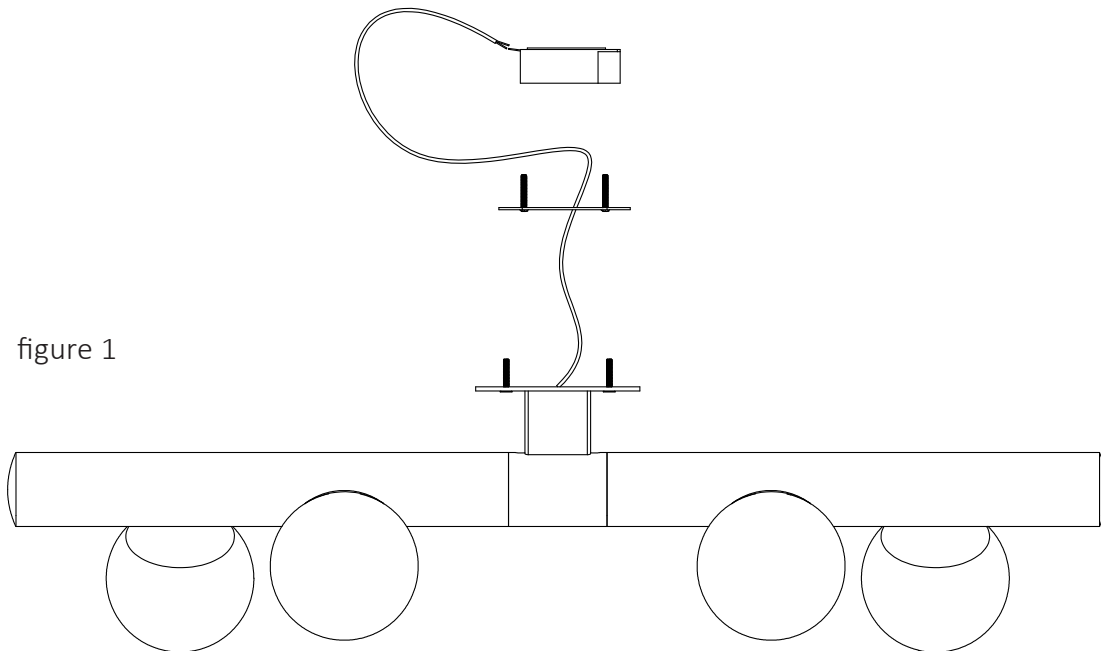 

1. Connect the driver to the junction box using the adhesive tape applied to the back of the driver.
2. Place the fixture on the wall as intended and mark the fixture mounting point.
3. Feed the coax power cable through the universal junction plate so that it can be wired to the driver as shown in figure 1. Then have a certified electrician connect this driver to 120 V domestic power.
4. With the driver in the junction box, fasten the universal junction plate to the box with the round head 8-32 screws.
5. The fixture can now be mounted to the junction box plate using the flat head 8-32 screws.