



Mr. Christmas


Alexa Compatible LED Christmas Tree

7.5ft -Item # 68333 / 68337
9ft -Item # 68334 / 68338

Instruction Manual

FOR INDOOR USE ONLY

Step 1 : Check the contents of your box

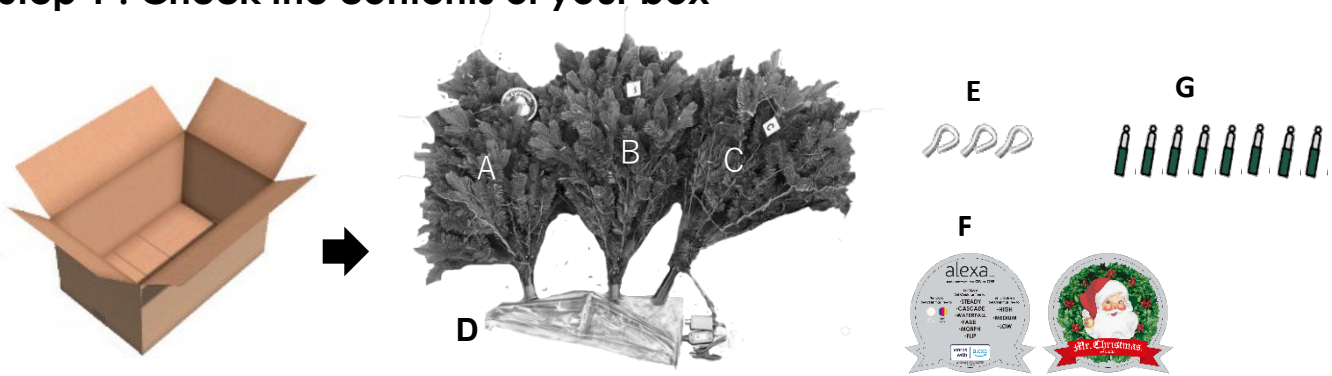

Before starting assembly, be sure to check all contents and lay out the various tree parts accordingly.

There are:

- A. Top tree section
- B. Middle tree section
- C. Bottom tree section, includes control box and power cord with adaptor.
- D. Tree stand.
- E. Three pins for the tree stand.
- F. "Ornament" with voice activated command list.
- G. Spare bulbs: 8 pieces for 7.5' tree, 9 pieces for 9' tree
(in the polybag attached to the end of the light strand inside the tree).

Step 2 : Expand Stand

Figure A



Figure B


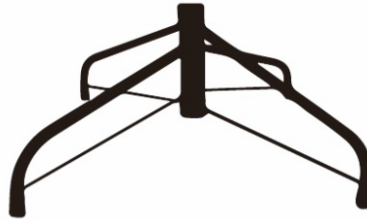


Figure C

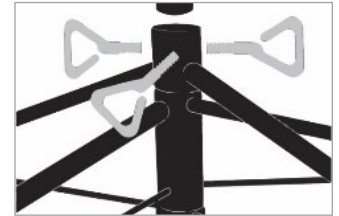

1. Take the tree stand and pull apart the legs (Figure A), open to full Position (Figure B)
2. Take the fully opened tree stand and insert pins into the pre-drilled holes, tightening the pins part way (complete tightening in Step 3-1).

Step 3-1 : Tree Assembly

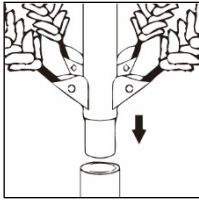


Figure A

1. Take the tree section labeled "C" and insert into the top of tree stand.
(Figure A)
2. Fully tighten the 3 pins into place (Figure B).
Secure the tree base firmly to the tree stand.


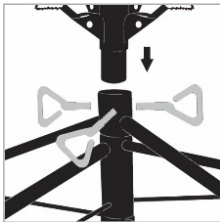



Figure B

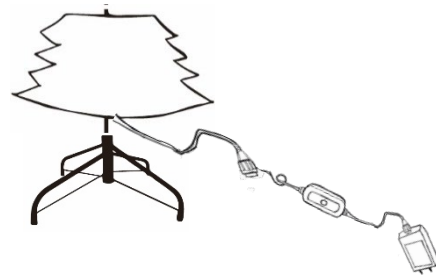

Section C



Step 3-2 : Tree Assembly

Take the tree section labeled "B" and insert into the top of the pole of section "C".

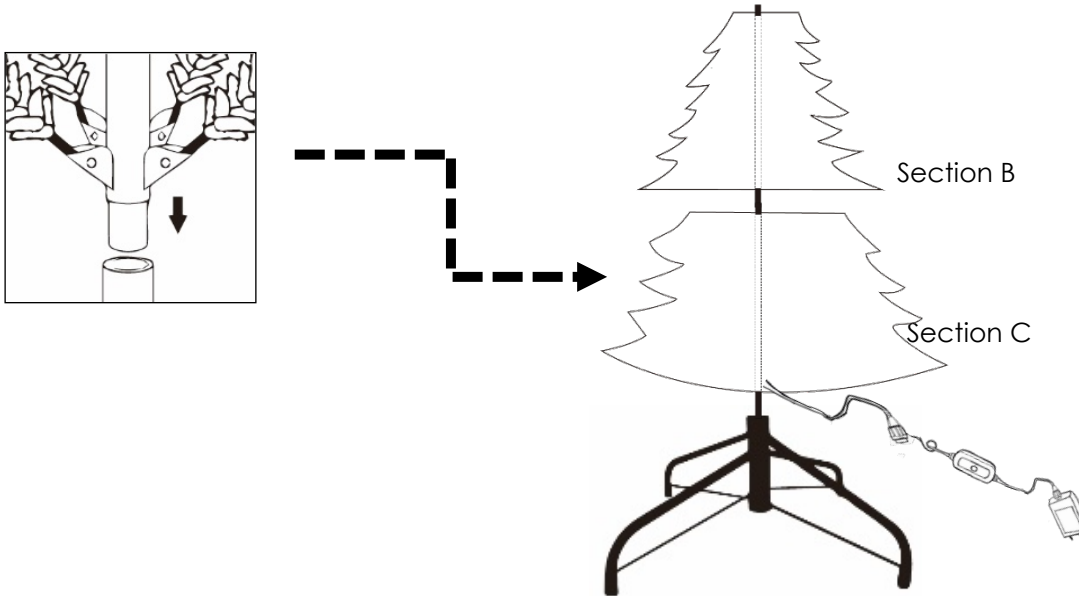

Step 3-3 : Tree Assembly

Take the tree section labeled "A" and insert into the top of the pole of section "B".

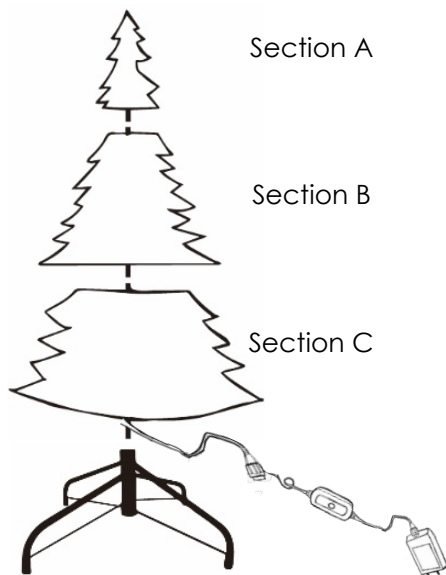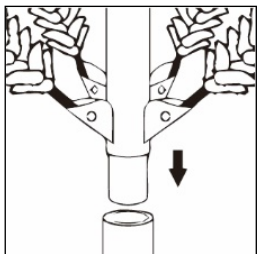


IMPORTANT TREE SET UP TIPS:

1. Shake the tree well after assembly to ensure the branches are extended.
2. Some shaping of the tree may be required for best appearance.
3. Spare bulbs are included in a small bag inside the tree. Remove from the tree and keep in case replacement is needed.

Step 4 : Connect to AC Power

Attach the power cord with adaptor to the control box, plug the adaptor into an AC power source.

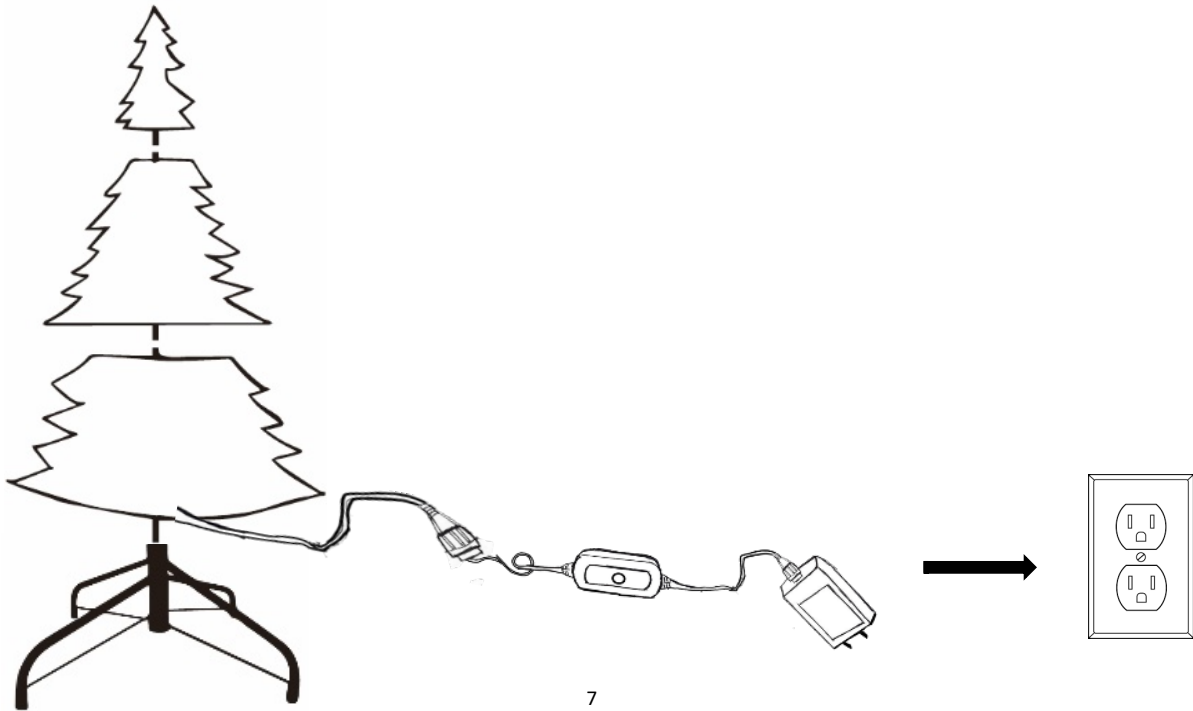

Step 5: Connect to Alexa

1. Download the “Amazon Alexa” application from the app store on your mobile device .
2. Install and open the “Amazon Alexa” application.
3. Go to the settings menu. ☰
4. Select “Add Device”
5. Select “Christmas Tree” and follow the on-screen instructions.
6. To set up a second tree, select “Second Christmas Tree” and follow the instructions.
Alexa will ask for clarification if a command does not target a specific tree.

Barcode Scanning & Location

Note that during device setup you may be asked to scan a device barcode. You can find this on the back of the controller, shown in Figure A.



Figure A

Step 6-A: Change your Christmas Tree LED lighting Mode using Alexa

Follow the voice commands for a list of functions to achieve up to 10 lighting functions.

Figure A



Color options

Command – “Set Christmas tree to” :

1. White
2. Multi-color

Pattern functions

Command – “Set Christmas tree to” :

- a. Steady
- b. Fade
- c. Cascade
- d. Waterfall
- e. Morph
- f. Flip

Brightness Options


Command – “Set Christmas tree to” :

- a. High
- b. Medium
- c. Low

Refer page 12-15 for examples of commands.

Step 6-B : Manually change your Christmas Tree LED lighting mode

Push Button on Control Box to switch Christmas Tree LED Light Mode.
The order of each button is as follows :

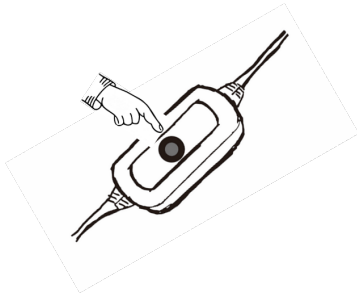


1. Power On-Demo Mode
2. White Steady
3. Multi-color Steady
4. White Fade
5. Multi-color Fade
6. White Cascade
7. Multi-color Cascade
8. White Waterfall
9. Multi-color Waterfall
10. White Morph
11. Multi-color Morph
12. White Flip
13. Multi-color Flip
14. Power Off

Demo Mode : The Demo mode will start and play all 12 lighting functions every 15 seconds.

Step 6-C : Automate your Christmas Tree with Routines

Alexa Routines allow you to automate your Christmas Tree Functionality. With Routines, you can turn your tree on with custom commands (i.e. Good Morning) or turn the tree on/off at scheduled times (i.e. every day at 10AM)

How to Enable Routines with Alexa.

1. Open the Alexa app.
2. Go to the menu and select "Routines"
3. Select Plus 
4. Select "When this happens", and then choose how to begin your Routine (i.e. "Good Morning, or a scheduled time).
5. Select "Add Action", select "Smart Home", and then select "Christmas Tree".
Configure the desired LED lighting mode for your selected action.

Example 1 : Turn Christmas Tree on



“Turn Christmas Tree ON”



Example 2 : Set lighting mode to Multi-color



“Set Christmas Tree to : Multi-color”



Example 3 : Set lighting mode to Fade



“Set Christmas Tree to : Fade”



Example 4 : Set lighting mode to Low



“Set Christmas Tree to : Low”



Example 5 : Set lighting mode to Demo mode



“Turn Christmas Tree DEMO ON”



Example 4 : Turn Christmas Tree off



“Turn Christmas Tree OFF”



Example 5 : Turn Christmas Tree on with Routine



“Good Morning / Good Night”



Connectivity Troubleshooting

Common connectivity troubleshooting steps.

1. I can't connect my device to Alexa.

- Check that your Alexa device and the Alexa app have the latest software version.
- Make sure that your Alexa device and the light strand are connected to the same Wi-Fi network.
- Check that your device is within 30 ft. (9 m) of the light strand.
- Try setting your Christmas Tree LED light Mode to “STEADY” and then proceed with the pairing process.
- Perform a factory reset : Press and hold the button on the control box of the tree for 10-11 seconds. The tree lights will flash white 3 times. This indicates that the instructions were received. Follow the instructions on page 8 to set up your device with Alexa app.

2. I can't get the light strand barcode to successfully scan.

- During the Alexa mobile app setup process, select “Don't Have a Barcode”
- Follow the on-screen instructions.

3. My Light Strand stopped working with Alexa.

- Try a power cycle: Unplug your Christmas Tree from the outlet, and then plug it back in.
- Perform a factory reset : Press and hold the button on the control box of the tree for 10-11 seconds. The tree lights will flash white 3 times. This indicates that the instructions were received. Follow the instructions on page 8 to set up your device with Alexa app.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the Following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided contact a qualified for proper installation.
- c) This seasonal use product is not intended for permanent Installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let bulbs rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type bulbs. Do not twist bulbs.
- n) Read and follow a instructions that are on the product or provided with the product.
- o) **Save these instructions.**


User Servicing Instructions

Replace the bulb.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Pull bulb and plastic base straight out of bulb holder
3. Replace bulb with only 3 Volt 0 , 06 Watt LED type bulb (provided with product).

If the new bulb base does not fit in bulb holder, follow the steps below before step 3.

- a) Remove the base of burned out bulb by straightening bulb leads and gently pull bulb out.
- b) Thread leads of new bulb through holes in old base with one lead in each hole.
- c) After bulb is fully inserted into base, bend each lead up like other bulbs in the light set. so that the leads will touch the contacts inside the bulb holder.

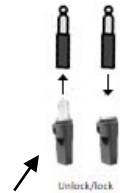

CAUTION

1. To reduce the risk of fire or electric shock do not attempt to replace bulbs or modify string.
2. To reduce the risk of fire and electric shock : a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

Model No : 68333 / 68334 / 68337 / 68338

Made by Mr. Christmas Inc.

customerservice@mrchristmas.com

Customer Service Phone: 1-800-453-1972

Made in China