

# baby jogger®













## city select® 2

Stroller















©2021 Baby Jogger NWL0001214745C 10/21

USE POSITIONS (accessories sold separately)

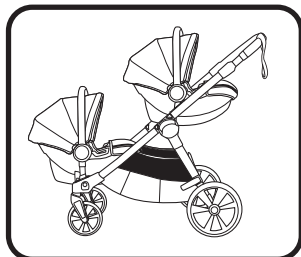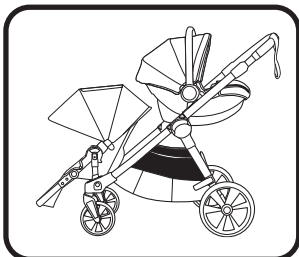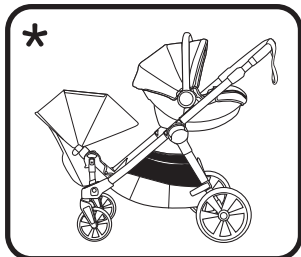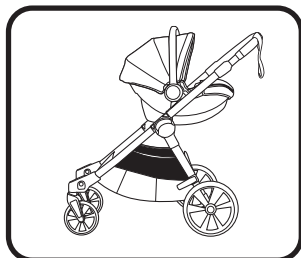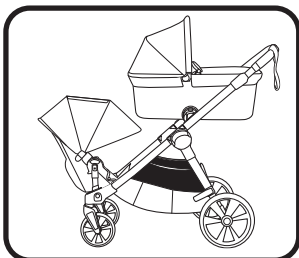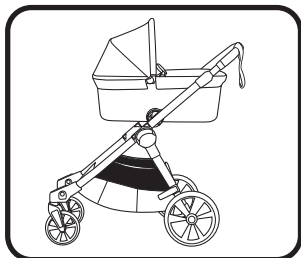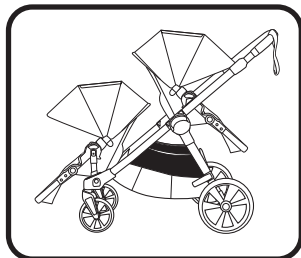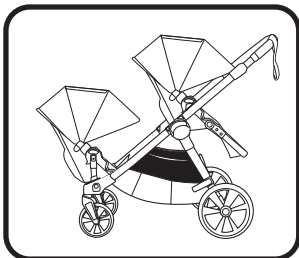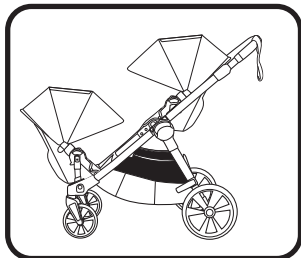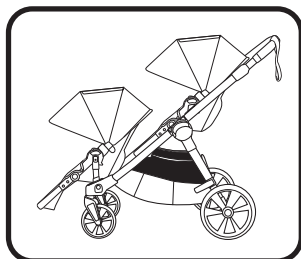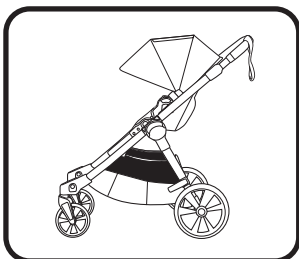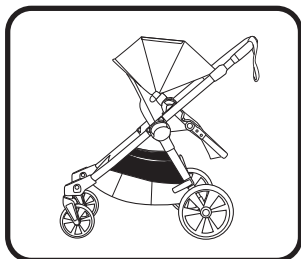

USE POSITIONS with glider board (accessories sold separately)

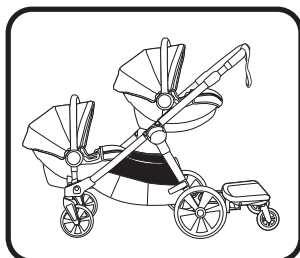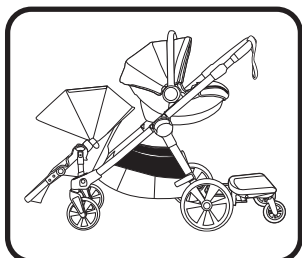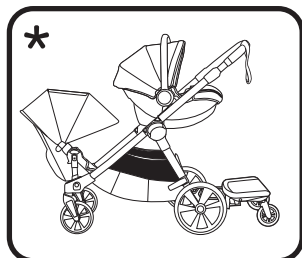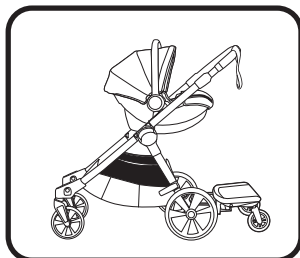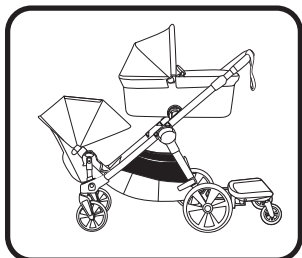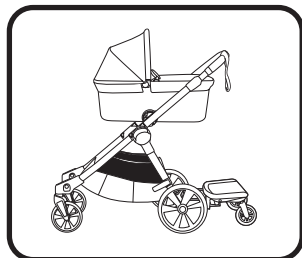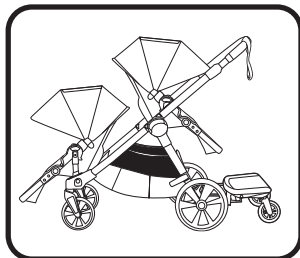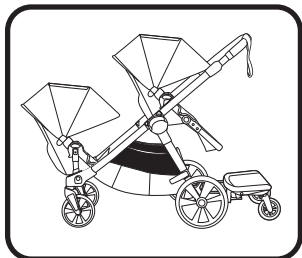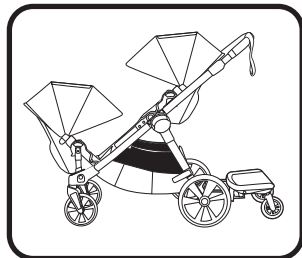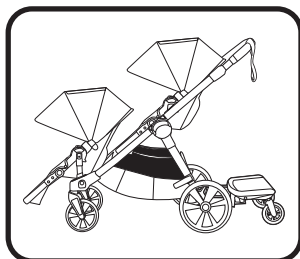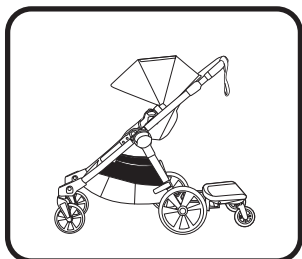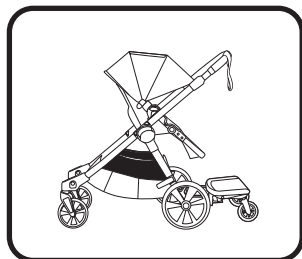

# WARNING

**IMPORTANT** - Keep these instructions for future reference.

Read these instructions carefully before use. Your child's safety may be affected if you do not follow these instructions.

- This stroller is suitable for child up to 20 kg (45 lb) in weight and 101.6 cm (40 in) in height.
- The maximum recommended loads are 20kg (45lb) in the seat, 1kg (2lb) in the seat back pocket, 7kg (15lb) in the basket and 5kg (11lb) in the basket pocket. Excessive weight may cause a hazardous unstable condition to exist.

**WARNING:** TO AVOID INJURY OR DEATH:

- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.

**WARNING:** USE THE STRAP TO STOP THE STROLLER ROLLING AWAY.

**WARNING:** NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD. THE HARNESS CAN FORM LOOPS THAT POSE A STRANGULATION HAZARD TO THE CHILD.






**WARNING:** USE THE HARNESS AT ALL TIMES.

- This stroller is not suitable for running, jogging, skating or rollerblading.
- Never leave your child unattended.
- Check that the pram body or seat unit attachment or car seat attachment devices are correctly engaged before use.
- To avoid injury, ensure that your child is kept away when unfolding and folding this product.









- Do not let your child play with this product.
- Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- Any load attached to the handle and/ or on the sides of the stroller affects the stability and folding mechanism of the stroller.
- Ensure that all the locking devices are engaged before use.
- Lock the brakes before loading and unloading your child and whenever the stroller is not moving.
- This seat should be used in the most reclined position until a child can sit up unaided, roll over, or push itself up on its hands and knees.
- Stroller is not meant to be used for transporting children up or down stairs or escalators. Damage resulting to stroller will not be covered under warranty.
- Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, heaters, etc, in the near vicinity of the stroller.
- This stroller is designed for use on flat or gently sloping surfaces. Be aware that the possibility for tipping occurs if this product is used on higher sloping and uneven surfaces.
- Always keep fingers away from moving parts when folding, unfolding, or adjusting the stroller to prevent finger/ body part entrapment or pinching.
- Before lifting and carrying the folded stroller, make sure the storage lock is properly secured.
- This stroller does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot, or bed.
- Accessories which are not approved by Baby Jogger shall not be used.
- Watch out for cars - never assume that a driver can see you and your child.









# WARNING

- The passenger shall remain seated (no standing in the stroller).
- It may be unsafe to use replacement parts other than those supplied or approved by Baby Jogger.
- DO NOT use the lower seating position with a second seat, infant car seat, or pram without the upper seating position also being occupied.
- DO NOT remove, reverse or carry the seat while child is in it.
- DO NOT lift or carry stroller by the seat including footwell, child tray and belly bar.




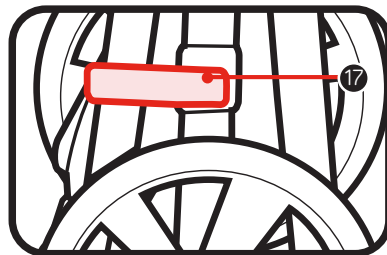
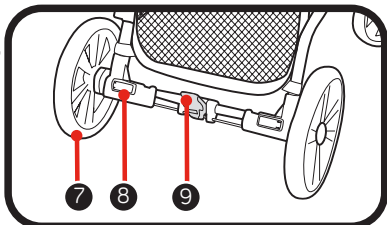
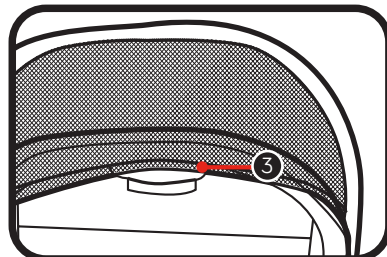
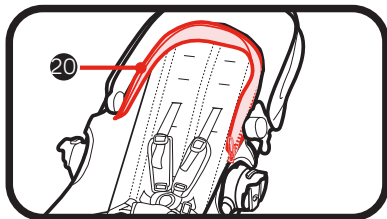
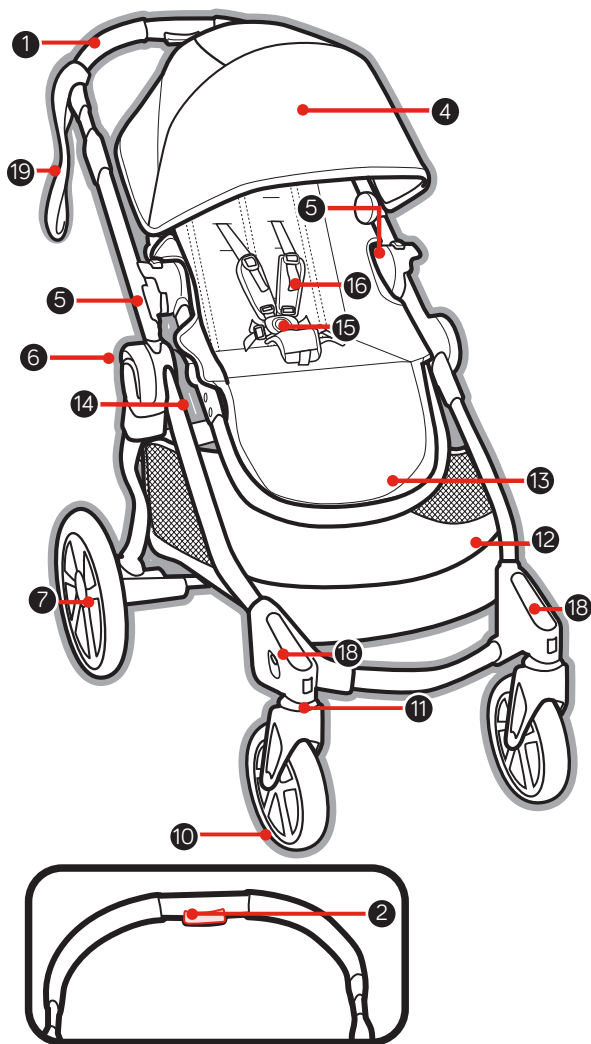


- |    |                             |    |                              |
|----|-----------------------------|----|------------------------------|
| 1  | Handlebar                   | 11 | Front Wheel Release Button   |
| 2  | Handlebar Adjustment Button | 12 | Storage Basket               |
| 3  | Seat Recline Button         | 13 | Footwell                     |
| 4  | Canopy                      | 14 | Footwell Adjustment Button   |
| 5  | Seat Mounting Bracket       | 15 | Harness Buckle               |
| 6  | Quick Fold Handles          | 16 | Harness Pads                 |
| 7  | Rear Wheel                  | 17 | Storage Lock                 |
| 8  | Rear Wheel Release Button   | 18 | 2nd Seat Adapter Mount Cover |
| 9  | Parking Brake               | 19 | Wrist Tether                 |
| 10 | Front Wheel                 | 20 | Head Barrier                 |

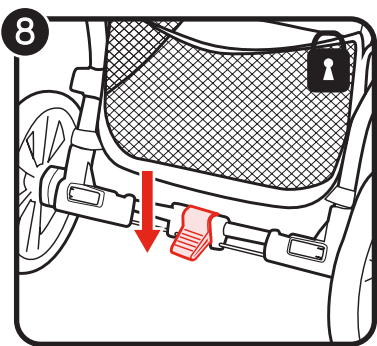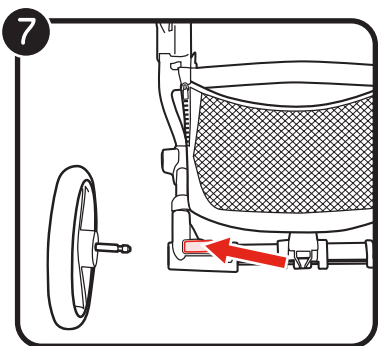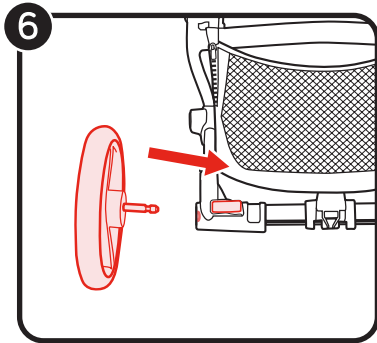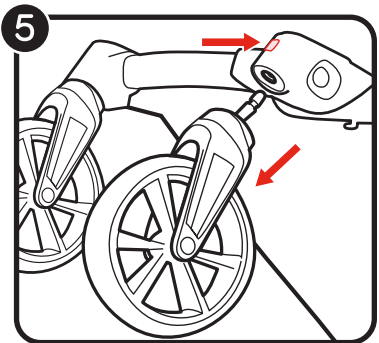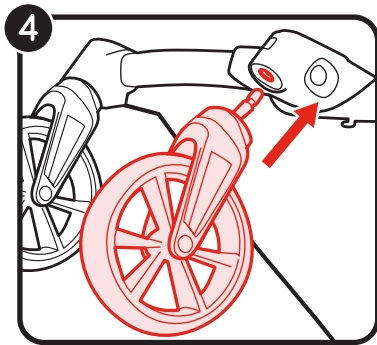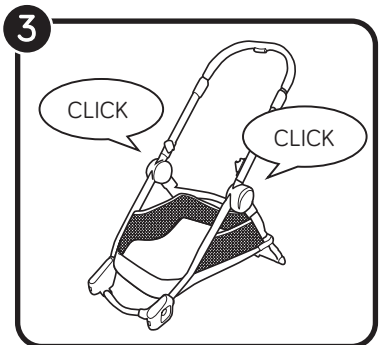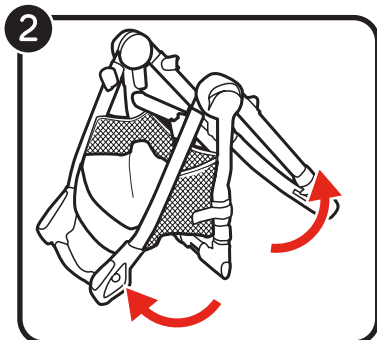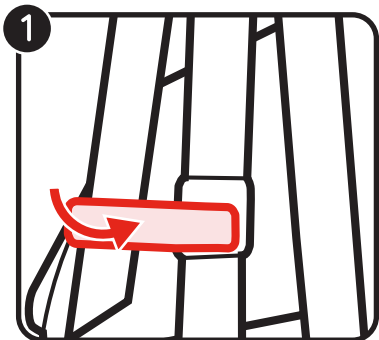


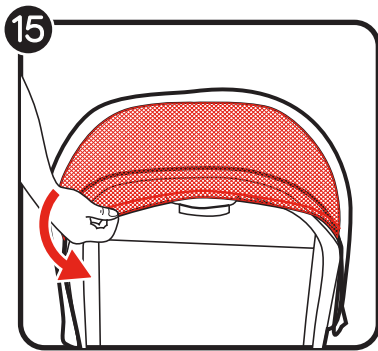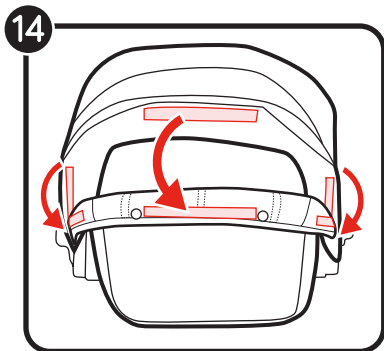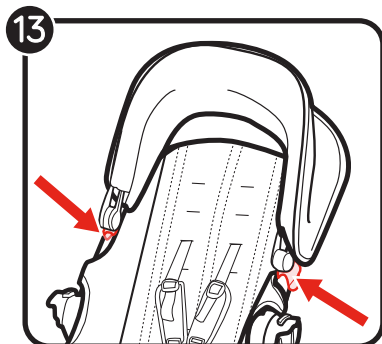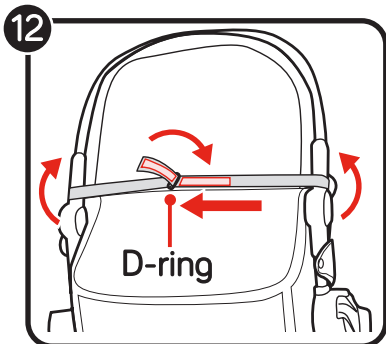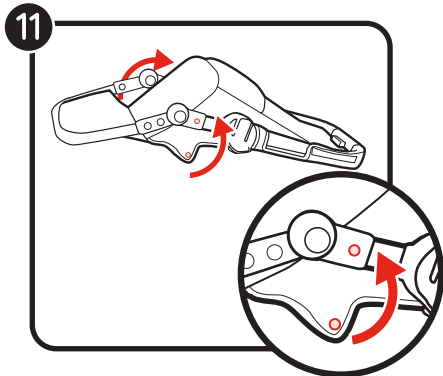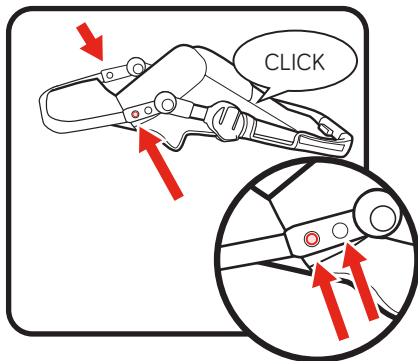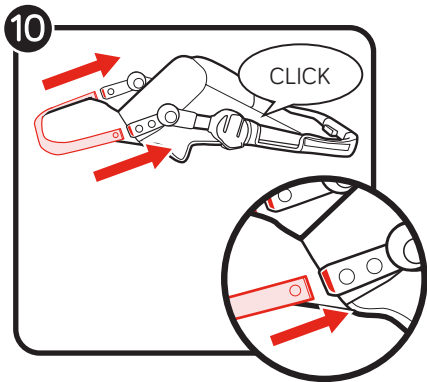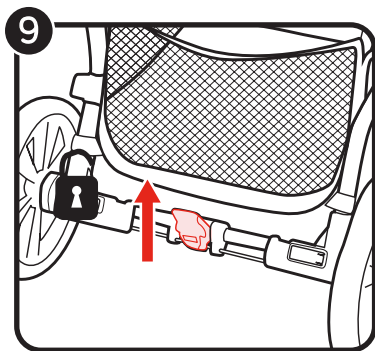





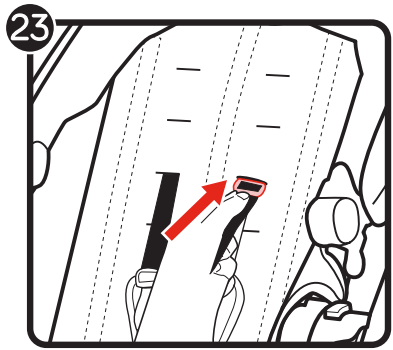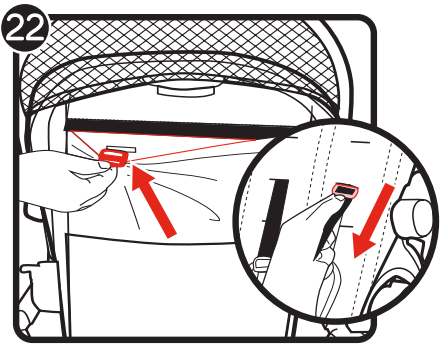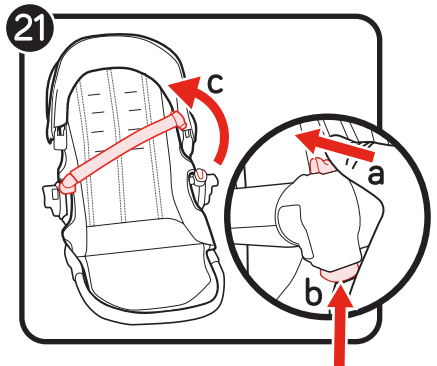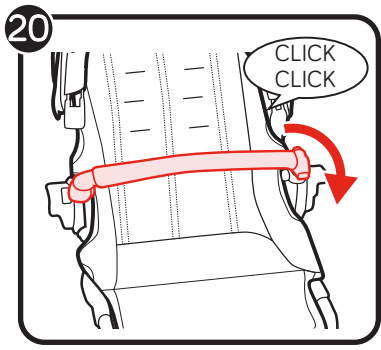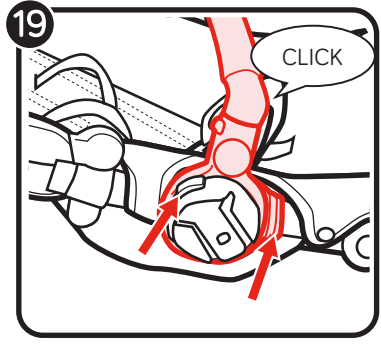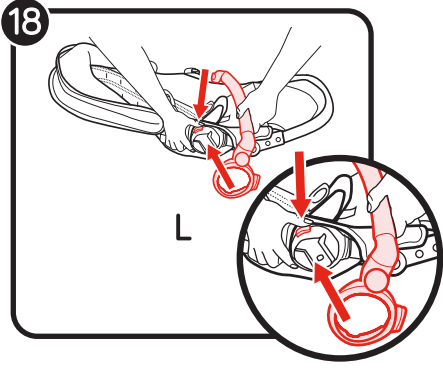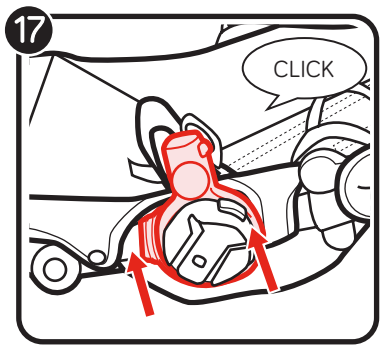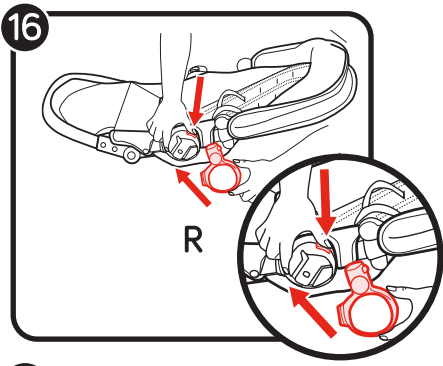


24

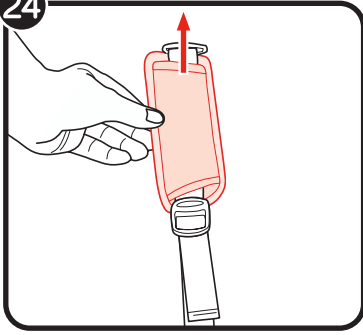 


25

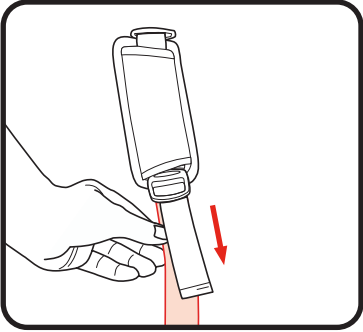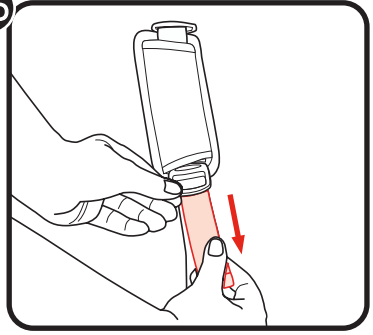  


26

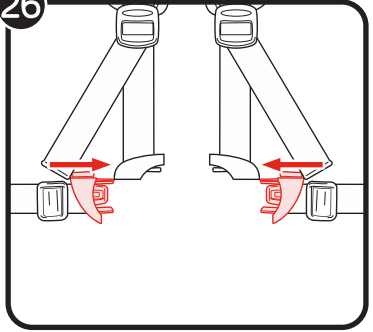 


27

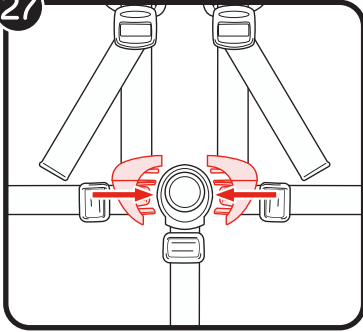 


28







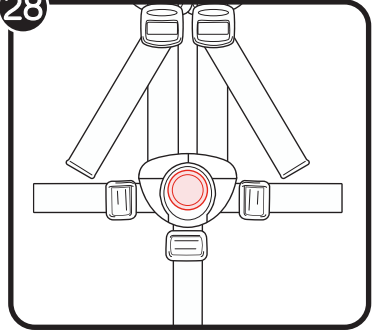 










29








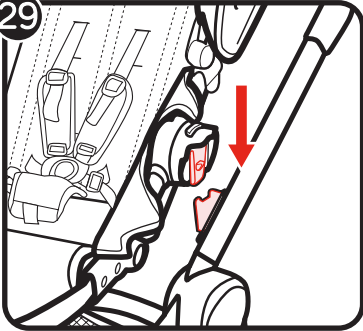 


30

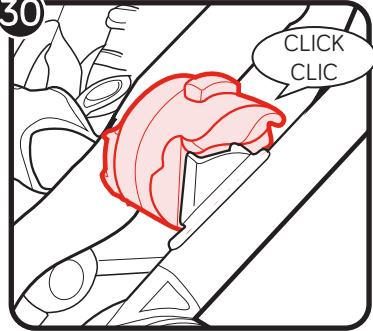 


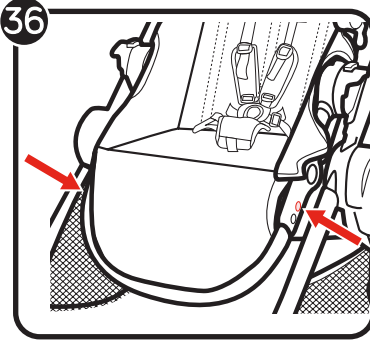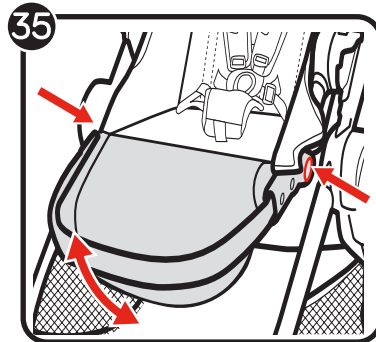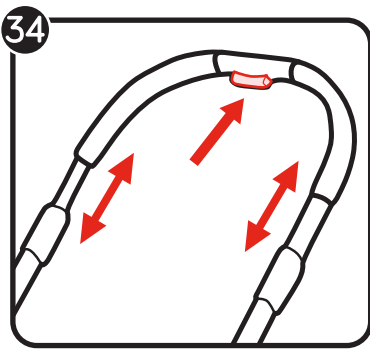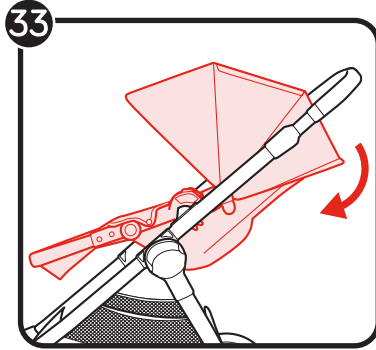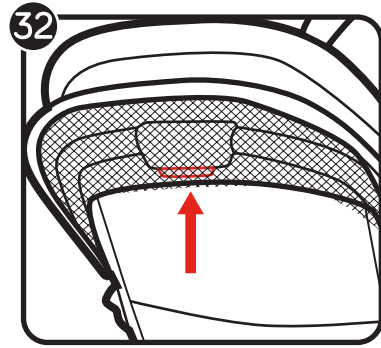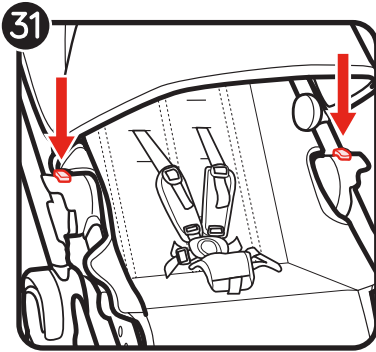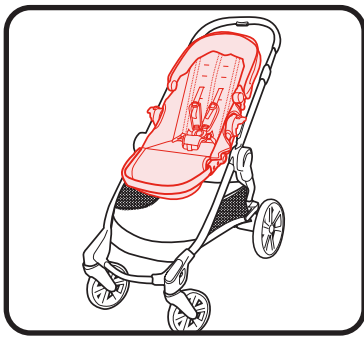       

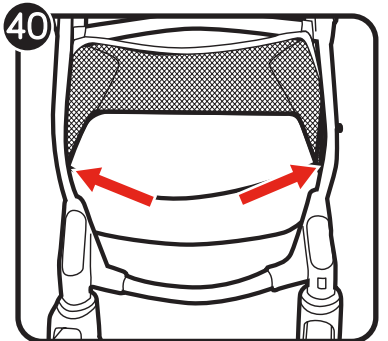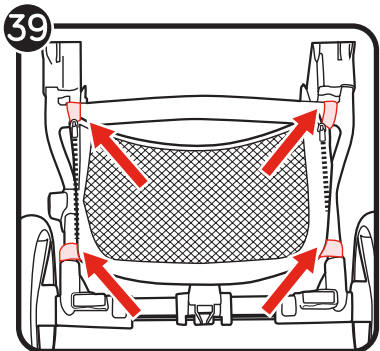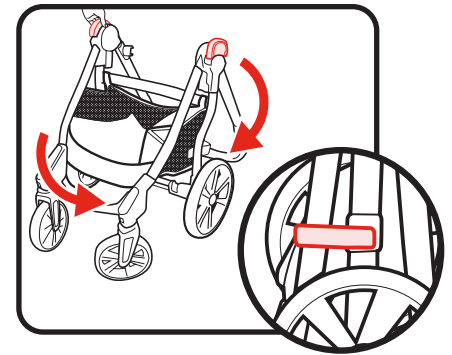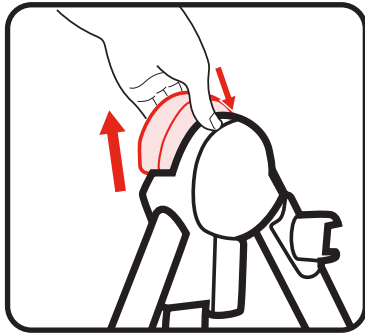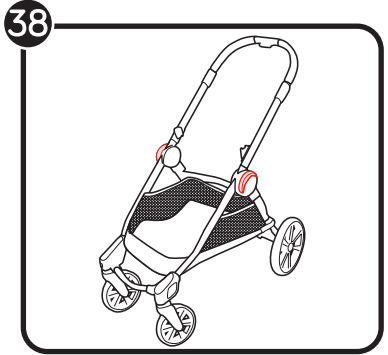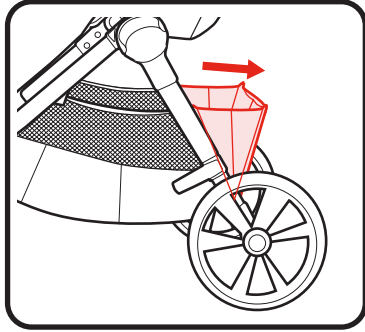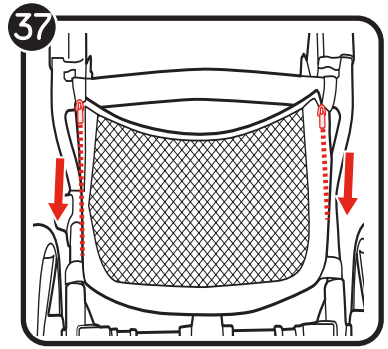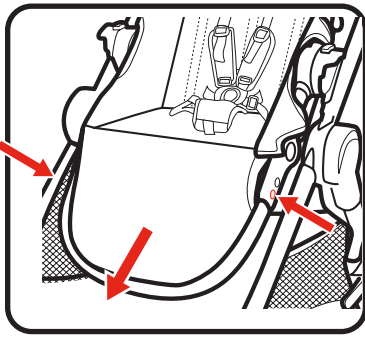        

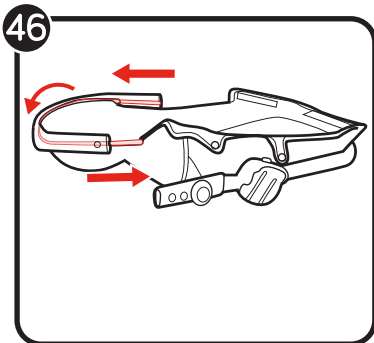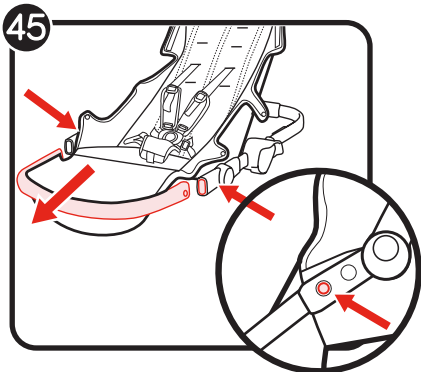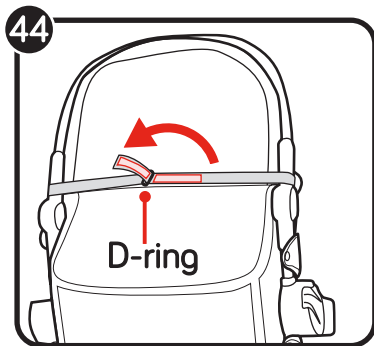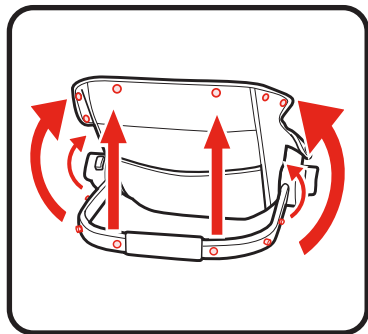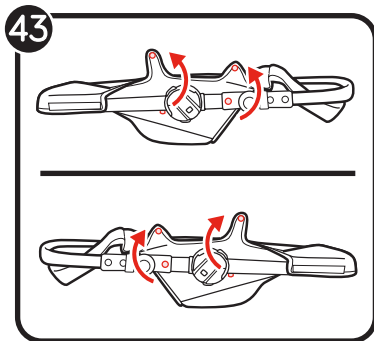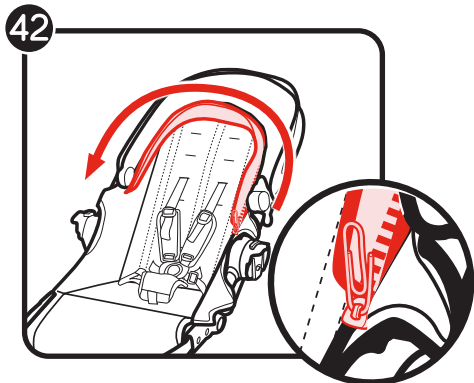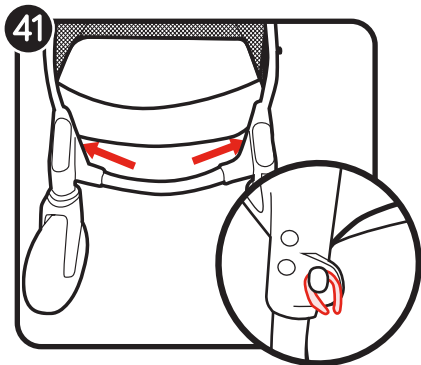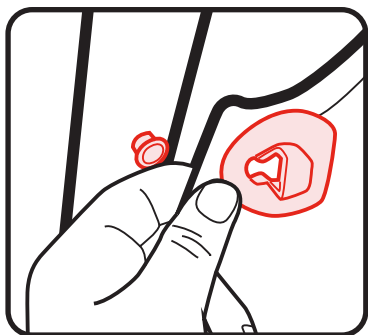        


47

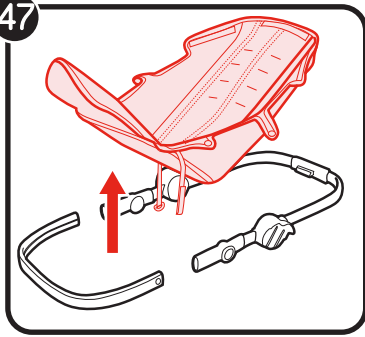 

## FRAME

- 1 Unpack the stroller frame from the box and set the wheels aside. Unlock the stroller by pulling the storage lock lever.
  - 2 Lift the handlebar away from the lower frame. The stroller will click into place.
  - 3 Place the stroller in the upright position.
-  **WARNING:** Ensure that all the locking devices are engaged before use.


## FRONT WHEEL

- 4 Installation
  - Lay stroller on its back so the handlebar is resting on the floor.
  - Attach the front wheel by sliding it into the front wheel mount until it clicks. Gently pull on the front wheel to make sure it is properly attached.
- 5 Removal
  - While pressing the front wheel release button, gently slide the front wheel out of the front wheel mount.

## REAR WHEELS

- 6 Installation
  - Align the rear wheel axle with the wheel mount on the stroller frame and insert it into the wheel mount until it clicks into place.
  - Gently pull on the rear wheel to make sure it is properly attached.
- 7 Removal
  - While pressing the wheel release button, gently slide the rear wheel out of the wheel mount.

## BRAKE

- 8 To lock the brakes: push the brake lever down to engage the brakes.
  - 9 To release the brakes: lift the brake lever up.
-  **WARNING:** Lock the brakes before loading and unloading your child and whenever the stroller is not moving.

## SEAT

- 10 Insert the footwell bar into the footwell adjustment mounts on the lower portion of the seat frame. Press buttons on outside of foot bar and slide the foot bar into the bracket until it clicks into place.
- 11 From the back of the seat, fasten snaps to seat frame.
- 12 From the back of the seat, fasten the hook-and-loop by slide the strap through the D-ring.



## CANOPY

- 13 Attach the canopy to the seat frame: Attach the canopy's brackets to the sides of the seat frame.  
**NOTE: canopy position can be adjusted up and down the seat frame tube.**
- 14 Attach the 3 fastening strips on the canopy to the top of the seat.
- 15 Ensure that canopy mesh is covering the seat back.

## ATTACHING BELLY BAR (on certain models)

- 16 Attach belly bar mount over RIGHT seat mount by pushing seat mount button in and sliding belly bar mount over seat mount.
- 17 Push belly bar mount toward seat frame until it clicks into frame and behind seat mount button.
- 18 Attach belly bar over LEFT seat mount by pushing seat mount button in and sliding belly bar over seat mount until it secures to frame.
- 19 Push belly bar toward seat frame until it clicks into frame and behind seat mount button.
- 20 To secure, rotate belly bar down to connect to belly bar mount.
- 21 To open belly bar, (a) slide button release on top of belly bar end, then (b) press the button on bottom of belly bar and (c) rotate up from mount.

## ADJUSTING SAFETY HARNESS

- 22 From the back of the seat, undo the fastening strip and open the pocket to locate the plastic square stopper. Turn stopper and pass through the openings in the PE board and seat fabric.
  - 23 Reinsert stopper at seat opening closest to child's shoulders. Pass back through seat fabric and PE board. Tug on strap to ensure stopper is locked. Repeat on both sides.
-  **WARNING:** Avoid serious injury from falling or sliding out. Always properly adjust and fasten safety harness.
-  **WARNING:** Always use the crotch strap in combination with the shoulder straps and waist belt.
- 24 Slide the harness pads up to access plastic guide on strap.
  - 25 Hold the plastic guide and pull strap to tighten or loosen.

## USING SAFETY HARNESS

- 26 Insert side strap buckle into harness buckle on both sides.
- 27 Insert connected harness and side strap buckles into the sides of therotch buckle.
- 28 Press button on crotch buckle to release.

## PLACE THE SEAT ON THE FRAME

- 29 Align the accessory mounting brackets with the mounting brackets on the stroller frame.
- 30 Insert the seat onto the brackets until it clicks into place. Ensure that both sides of the seat are securely fastened into the frame before use.  
NOTE: The seat may be installed either forward-facing or rear-facing.

## REMOVE THE SEAT

- 31 Press gray tabs on mounting brackets and pull up.  
**WARNING:** Always remove your child from the seat before removing the seat from the frame.

## RECLINE THE SEAT

- 32 Squeeze the seat recline button located at the top of the seat, behind the canopy.
- 33 Pull down to lower the seat and pull up to raise the seat until it clicks into the desired position.

## HANDLE HEIGHT ADJUSTMENT

- 34 Squeeze the handle adjustment button and slide the handle up or down to the desired length.

## ADJUSTABLE FOOTWELL

- 35 Adjust the angle: Press the adjustment buttons on the footwell and move it up or down until it clicks into the desired position.
- 36 Adjust the length: press the bottom buttons on the footwell and slide it in or out until it clicks into place.

## EXTENDABLE BASKET

- 37 To expand the basket, unzip the back of the basket.

## FOLDING

- Remove your child from the seat.
- The stroller may be folded with or without the seat attached.
- DO NOT fold product with rear facing seat.

- For the most compact fold, place seat in the forward-facing position with seat back most upright.
  - Always recline the seat to its most upright position and place it in the forward-facing for the most compact fold.
- 39 Pull up on the quick fold handles and let the frame collapse. Push down on the stroller frame with your thumb to make lifting the quick fold handles easier. Make sure the storage lock lever clicks into place.

## BASKET REMOVAL

- 40 Unfasten the top snaps of the basket around the middle support bar of the frame. Then unfasten the bottom snaps around the side support bars of the frame.
- 41 Unhook the top front plastic attachment loop from over the metal knob on the front of the frame. Repeat for the opposite side.
- 42 Remove basket by unhooking webbing loop from the front wheel mount.

Reverse the steps to reattach the basket to the frame.

## REMOVING THE SEAT FABRIC

- 42 To remove the head barrier: Insert a paper clip into the hole on the zipper slide. Using the paper clip as the zipper pull, unzip the head barrier from the seat.
- 43 Unsnap the seat fabric from the seat frame.
- 44 From the back of the seat, unfasten the hook-and-loop and slide the strap through the D-ring.
- 45 Press the footwell adjustment buttons and pull out on the footwell to remove the footwell bar from the seat frame. Pull the seat fabric out of the channel in the Footwell bar.
- 46 Pull the seat fabric out of the channel in the footwell bar.
- 47 Remove seat pad.  
Reverse the steps to reattach the seat pad to the seat frame.



# CARE AND MAINTENANCE

To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

## WASHING

### Seat Fabric/Canopy

- Refer to your care tag on the seat pad for washing instructions.
- Do not use solvents, caustic or abrasive cleaning materials.
- Do not press, iron, dry clean, tumble dry or wring the fabric.
- If the seat covers need to be replaced, only use parts from a Baby Jogger Authorized Dealer. They are the only ones that are guaranteed to have been safety tested and designed to fit this seat.

### Plastic/Metal Parts

- Wipe clean using a mild soap and warm water.
- You must not remove, dismantle or alter any part of the seat folding mechanism or brakes.

### Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

## STORING

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks.
- DO NOT store outside.
- Ensure that the stroller is dry before storing for prolonged periods.
- Always store the stroller in a dry environment.
- Store the stroller in a safe place when not in use (i.e. where children cannot play with it).
- DO NOT place heavy objects on top of the stroller.
- DO NOT store the stroller near a direct heat source such as a radiator or fire.

# Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.


Your stroller comes with a limited lifetime warranty on the frame and a 12 month warranty on textiles and mechanical components. Visit [www.babyjoggerstrollers.com.au](http://www.babyjoggerstrollers.com.au) to register your new stroller and we'll extend your warranty by a further 12 months.

## THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design.
- Accidental or intentional damage, abuse or neglect, or use on stairs, travelators or escalators.
- Commercial use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your State's Attorney General.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

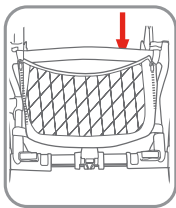

**NOTE:** When contacting Baby Jogger distributor regarding your stroller, please have your stroller's serial number ready. It can be found on the inside of crossbar above basket.

### IN AUSTRALIA CONTACT:

**Call:** 1300.661.885

**Fax:** 03.9873.1433

**Mail:** The Amazing Baby Company  
7-9 Maurice Court  
Nunawading, Victoria 3131  
Australia

### IN NEW ZEALAND CONTACT:

**Call:** (64) 03.338.7613

**Fax:** (64) 03.338.7615

**Mail:** Baby First Limited  
25 Nga Mahi Road  
Sockburn Christchurch, 8024  
New Zealand

PLEASE DO NOT CONTACT THE PLACE OF PURCHASE FOR PARTS OR WARRANTY ISSUES

# Notes

**The Amazing Baby Company**

7-9 Maurice Court • Nunawading VIC 3131 • Australia  
Tel. 1300 661 885 - Tel. 03 8872 6772 • sales@tabc.com.au  
www.babyjogger.com.au

**Baby First Limited**

25 Nga Mahi Road • Sockburn Christchurch, 8042 • New Zealand  
Tel. 64 03 338 7613 • www.babyjogger.co.nz



Baby Jogger, LLC

6655 Peachtree Dunwoody Rd. NE • Atlanta, GA 30328

1.800.241.1848 • www.babyjogger.com