

Assembly Instructions

HIGH PERFORMANCE STROLLERS



City Elite Single

Amazing 360° Turns
Make For Extreme Maneuverability

This product complies with BS EN 1888:2003 inc. A1,2,3: 2005

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.



We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



For the sake of your precious cargo, please read these warnings before using your stroller.



• **WARNING:** DO NOT exceed 3mph. – this stroller is not designed for running, jogging, skating or roller blading.



• **WARNING:** Prevent serious injury to your child by always using the safety harness.



• WARNING: Any load attached to the handle affects the stability of the stroller.



• **WARNING:** It may be dangerous to leave your child unattended.



• **WARNING:** Recommended weight for seat pocket is 2 pounds and basket is 4.4 pounds. Excessive weight may cause a hazardous unstable condition to exist.



- **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller will not be covered under warranty.
- Accessories which are not approved by the manufacturer or distributor should not be used.
- The passenger should remain seated (no standing in the stroller).
- Watch out for cars never assume that a driver can see you and your child.
- This stroller is suitable to be used from birth.
- Total weight load recommended for this stroller is 75 lbs. / 34 kg. (combined passenger and baggage weight.)
- This stroller seats one passenger.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.

Contents



Warnings 1
Frame 3
Front Wheel4
Rear Wheels5
Safety Harness 6
Brake 7
Reclining Seat 8
Seat 9
Raised Kicker 10
Basket 10
Canopy11
In Motion 12
Stroller Care13



WARNING: Ensure all locking devices are engaged before use.

Frame



 Unpack stroller from box and set rear wheels aside. Ensure that storage strap is not fastened around frame before unfolding stroller.



2. Note that the front wheel is stored in the under basket for packaging. Lift kicker, and place front wheel aside.



3. Adjust handlebar downwards so it is touching the floor. Place canopy aside.



4. Pull front wheel fork tips up from underneath the handlebar. Then, pull bottom of frame up and away from handlebar.



5. Lay stroller flat so that both ends are resting on the floor. The stroller will frame will click and lock into place.



6. Turn stroller over.

To fold: Unsnap safety strap from frame and pull up on fold strap.

Front Wheel



1 To install front wheel, lay stroller back so the handle is resting on the floor. Lock front wheel to prevent the forks from swiveling.



2 Insert the front wheel into the fork tips by aligning the axle flats with the fork tip flats.



3 Tighten by turning the wheel lever clockwise while holding the opposite side.



4 Close the wheel lever making sure that it is flush with the tubing. *Be sure not to overtighten.*

4

Rear Wheels





1 To install, gently slide the rear wheel's axle into the hole in the frame until the wheel clicks into place.




2 To remove, simply press the wheel button while gently sliding the wheel away from the frame.

Safety Harness



1 Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to your child's shoulder height.

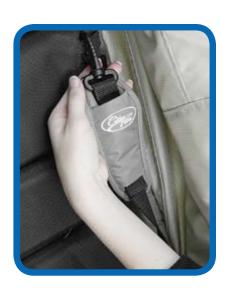



2 To adjust the shoulder and crotch strap length: Remove the shoulder pads and slide the plastic guide up or down to lengthen or shorten.





WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.



3 To buckle the harness: Simply push side buckle into center buckle until it locks into place.

To unbuckle: Push one side of the center button and pull the corresponding side buckle away from the center buckle. Repeat to unbuckle other side.



Brake





 Simply push brake pedal down to engage rear parking brake and lift up to release.



WARNING: Engage parking device before loading and unloading passenger.

Reclining Seat







1 *To recline:* Pinch the clamps behind the seat and on the mesh section of the seat, and slide them down to desired recline. Pull seat down on both sides to match recline position of clamps.



 Weather Cover: If desired, pull weather cover down and over the seat back mesh. Secure firmly over both sides of seat. When not in use, roll weather cover up and fasten with elastic loop and barrel provided under top of the seat fabric.

Reverse steps to return to the upright position.

Seat



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!



1 Secure seat fabric to frame by lining up snap placement on frame and fabric.



2 Secure seat straps around the bottom of the frame, behind the front wheel. Thread one seat strap through the D ring of the other strap, and fasten both Velcro sides firmly together.



3 Secure safety straps to both sides of the frame before use.



4 Be sure that fold strap rings are secured to the frame before use.



To fold stroller:
Remove child from seat. Unsnap safety straps from frame and pull upwards on the fold strap with a gentle tug.



Raised Kicker



1 To use the raised kicker, pull up on seat flap above the footplate, and remove the kicker stand from storage pocket. Attach the kicker stand to the seat with the hooks provided under seat flap.



2 Attach kicker stand by wrapping both sides of the webbing under the footplate. Thread one side of the velcro webbing through the D ring of the other side, and secure velcro together.



3 When not using the raised kicker, tuck the kick stand and the webbing straps into the pocket provided under the seat.

Basket



1 The Elite basket is sewn onto the base of the seat. To secure the seat basket to the frame, simply secure the velcro flap around the wheel tube.

Attach the basket to the front of the stroller frame, around the footplate, with the velcro strap that is at the front of the basket. If the seat is already assembled on the frame, you will need to lift up the seat fabric at the footplate in order to attach the basket.

10

Canopy



1 To attach canopy to frame, simply slide canopy axle into top hole of the bracket on the frame, until you hear it click into place. The bottom hole can be used for accessories (sold separately), and they should be inserted into bracket the same way as the canopy.



To remove canopy: stand facing the stroller and press the bracket buttons with index finger while removing canopy from the bracket.



2 Snap webbing together around top of frame.



3 Secure canopy around frame with velcro tab.



4 Once canopy is in place, attach the console by aligning the velcro strips on the console and canopy.

In Motion

Steering

• Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

In the Dark

• Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.





Stroller Care

Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame from the back of the seat before washing.



Wheel Care

• The wheels can be cleaned using a damp cloth.

They will need to be dried completely with a soft towel or cloth.

Storing

• Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

www.babyjogger.com



Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227 T: 800.241.1848 • F: 804.262.6277 www.babyjogger.com

BJC CES 10.1.07