



Popcorn Machine Instructions

Almighty Rentals Damage Protection Program is meant to provide protection for the customer from unintentional damage or theft of rented equipment while in the customers' possession. In consideration of the additional charge paid by the customer, their responsibility for loss or damage to the equipment, as stated on the rental contract, shall be modified as follows:

1. Before use, securely station the popper on a dry, level surface that is away from a pool or any water.
 - a. ****Before first use, be sure to clean the popper's glass surfaces and wipe down the interior with a clean, damp sponge.**
2. Hang the pot on the popper so that its roller bar is on the door side of the machine.
3. Plug the power cord into a properly grounded electrical outlet.
4. Turn the light and heater to the ON setting before adding butter or oil to the pot. It is recommended that the amount not be more than .5 oz. Only use butter or oil with this popper. Liquid sugar or honey can cause damage to the pot, smoking, and even injury.
5. Allow the kettle to preheat for 3-4 minutes, or until you see steam exiting the pot. 6. Open the lid and add kernels into the pre-heated pot. Use provided measuring cup (1 scoop per batch) when dealing with bulk kernels. Close lid. At this point, the lid WILL BE HOT. Use caution.
6. If using the 8 oz. popper, turn on the stirrer via its switch – disregard this step when working with the 4 oz. model. Once that step is completed, safely close the main unit's doors. Popcorn will begin popping after 2 to 3 minutes.
7. When popping has finished, turn the stirrer (on 8 oz. model) and pot heater to OFF.
8. Gently turn the roller bar to completely empty the contents of the pot.
9. At this point, only the spot light warmer should be switched to ON. This will keep your popcorn warm and dry until it is served.
10. Remove and serve popcorn with the scoops provided. If more butter or seasoning is desired, complete this step outside of the main unit in a separate bowl or container.
11. When finished, be sure to unplug the machine from its power supply.