



Tower Boot Dryer User Manual

SAFETY

WARNING! Read and understand all instructions before using this product. Failure to do so may result in electrical shock, fire and/or serious personal injury.

Use the Tower Boot Dryer only in dry, indoors areas, well clear of other objects.

Keep the appliance away from other heat sources.

For household use only.

- Do NOT operate in the presence of flammable materials, including liquids, gases or dust.
- Do NOT override the timer switch.

- Do NOT operate in standing water.
- \cdot Do NOT overload with garments.
- \cdot Do NOT restrict air circulation.
- Do NOT expose to rain or snow.

Use of attachments not recommended or sold by Mountain Lab Gear may result in the risk of fire, electrical shock or injury.

When in use, position the boot dryer in such a way that the cord will not be stepped on, tripped over or otherwise subjected to damage or stress.

The Mountain Lab Tower Boot Dryer features a polarized plug (one blade is wider than the other) that is intended to be fit into an outlet only one way. Do not attempt to modify the plug in any way. To reduce the risk of damage to the electrical cord, pull by the plug rather than the cord when disconnecting from the electrical outlet.

RESPONSIBILITY

Mountain Lab Gear is not responsible for any consequences, damage or injury that might result directly, indirectly or accidentally from the use or misuse of its products.



TOWER BOOT DRYER

The Tower Boot Dryer circulates a light, warm breeze to effectively dry gear from the inside without risk of damage. It is not designed to force a powerful current of hot air like a hair dryer.

FIRST USE

Locate the folding feet inside the packaging. Install the feet onto the bottom four corners of the appliance by pushing the foot into position facing inwards, then rotating outwards. The feet may later be folded inwards to reduce size for storage and transportation.

NORMAL OPERATION

1. Plug the Tower Boot Dryer into a standard household 120 v electrical outlet.

- 2. To expand the towers as desired, press the buttons on the side of the tower, then pull the tower upwards and release the buttons. The towers will automatically click and lock into their extended position. To collapse the towers, reverse the process.
- 3. Slide garments onto the towers, taking care not to restrict air flow at the bottom of the towers or block air flow into the blower assembly.
- 4. To use with heat, ensure the heat selector switch adjacent to the timer knob is set to the on position (up). To use without heat, set the selector switch to the off position (down).
- 5. To turn on the boot dryer and set the time, turn the timer knob clockwise all the way on to the 180 minute mark, then turn it back counter-clockwise to the desired time. In this way, the appliance can be set to run from 30 minutes to 180 minutes (3 hours). At the end of the time, the boot dryer will automatically turn itself off.

MAINTENANCE

Clean the outer surface of the boot dryer with a damp cloth and mild soap. Never allow liquid to enter the inside of the appliance.

TIPS FOR USE

- · When placing gear on the drying towers, ensure that air circulation is not closed off.
- · Smaller footwear and garments will dry faster than larger items.
- · Large boots fit best on the expanded rear towers, with toes pointing out to the sides.
- Drying time depends on how wet the gear is, as well as the humidity in the air.
- In order to ensure accuracy when setting the timer, be sure to the turn the timer dial clockwise to 180 minutes first, then back counter-clockwise to the desired time.

WARRANTY

For warranty inquiries, contact warranty@mountainlabgear.com