

MIXX™

CHARGE



Ultra Fast10 or Ultra Fast20

Power Bank

QUICK START GUIDE

LET'S START

What's in the box?



Type C Charging Cable



MIXX Ultra Fast Power Bank



- 1 Micro USB Input
- 2 Battery Digital Display Screen
- 3 Power Delivery (PD) USB Type C Input / Output
- 4 Power Button
- 5 2x Fast Charging USB Outputs
- 6 LED Indicator Light

LET'S QUICK CHARGE YOUR DEVICE USING THE USB PORTS

If your device supports Quick Charging Technology, the MIXX Power Bank will automatically charge it at a faster rate.

If your device does not support Quick Charging Technology, the MIXX Power Bank will charge your device at a standard rate.

Using the USB fast charging cable that came with your smartphone, wireless headphones or earphones, speaker etc. and connect the USB end into either of the 2x Fast Charging USB Outputs **5** of your MIXX Ultra Fast power bank. Then place the other end of your fast charging cable into your device.

A GREEN LED Light **6** will come on next to the number on the display screen. The device is automatically charging.

If your device does not charge automatically then **short press** the Power Button **4**.


Ensure that your MIXX Ultra Fast is charged by viewing the Battery Digital Display Screen **2**.

LET'S FAST CHARGE USING THE PD TYPE C PORT

The MIXX power bank is designed to support the latest USB Power Delivery (PD) technology for fast charging than a standard power bank. Provides up to 18 watts charge for PD compatible smartphones and tablets. This PD Type C port will safely charge non-PD or standard devices at the normal charging rate.

The PD Type C port is also a power input to fast charge this MIXX power bank.

LET'S CHECK THE ULTRA FAST BATTERY STATUS

Easily view how much charge is remaining on your MIXX Ultra Fast with a **short press** of the Power Button . A digital number will show to let you know how much power you have left. To read the numbers correctly lay your power bank with the MIXX Charge logo facing down.

The charging times will vary depending upon the capacity size of your power bank and the power source you are using.

LET'S CHARGE YOUR MIXX ULTRA FAST

Using the Type C charging cable supplied, plug it into the Type C Charging Port **3** of your MIXX Ultra Fast. Connect the other end of the charging cable into a suitable 5V USB power source, such as, a USB wall charger, a USB port of a computer or a laptop.

Once connected to a power source the digital number on the Battery Digital Display Screen **2** will begin to flash BLUE to show that your MIXX power bank is charging.

LET'S POWER ON/OFF

Power On

Short press the Power Button **4** to turn on your MIXX power bank.

Power Off

Double press the Power Button **4** to turn off your power bank. The Battery Digital Display Screen **2** will switch off after a few seconds.

LET'S BE SAFE

It's important that you read this section completely, especially the '**Warning, Caution and Safe Usage**' instructions.

For your protection

Before charging digital devices using the product please ensure they are correctly connected, using manufacturer's original specification cables.

Please keep the product out of reach from children and animals.

Do not drop, short circuit, disassemble or continue to use this product if damaged.

Do not place in close proximity to strong magnetic fields or strips such as, ID cards, bank cards etc.,

Keep at least 20cm away from implantable medical devices (such as pacemakers and cochlear implants) to prevent potential magnetic interference.

We recommend

To refer all servicing to qualified persons. Servicing may be required when the product has been damaged in any way, does not operate normally or has been dropped.

The operating temperature range for this product is 5° - 40° Celsius.

WARNING

If the battery is ballooning, discharged or faulty, please stop using it immediately.


Please refer to the information on the safety labels on the product or its power supply before installing or operating the device.

This product and the USB Type C cable connector are not water resistant and should not be exposed to rain, moisture, any splashing or liquid spills.

This may cause excessive heat that may lead to fire damage or personal injury.

CAUTION: This product contains a Lithium battery. Incorrect disposal of this battery may result in explosion.

LET'S RECYCLE

This product can be recycled. Products bearing this symbol  must NOT be thrown away with normal household waste. Take the product to a collection point designated for recycling of electronic devices. Find out more about return and collection points through your local authority.

CONTACT US

Feedback is welcome simply email us on support@mixx-io.com or visit mixxcharge.com for more information.

DEVICE CHARGING TIMES

The number of times this power bank can charge your smartphone or device is dependent upon the device's battery size. For example, if your phone has a 1500mAH battery it would be possible to charge it a maximum of 4 times.

FEATURES	Ultra Fast10	Ultra Fast20
Charges your smartphone*	Up to 4 times	Up to 8 times
Charges your tablet	Up to 1.5 times	Up to 2 times

* Assuming the phone battery has a 1500mAH capacity.

THANKS!

Thanks for choosing our product.

All of our products come with a 2 year warranty for peace of mind.

TECHNICAL SPECS

TECHNICAL SPECS	Ultra Fast10	Ultra Fast20
Capacity:	10000mAh / 37Wh	20000MAH / 74WH
Total Output:	18W	18W
Micro Input:	5V = 2A	5V = 2A
USB C Input:	5V = 3A, 9V = 2A	5V = 3A, 9V = 2A
USB C Output:	5V = 3A, 9V = 2A, 12V = 1.5A	5V = 3A, 9V = 2A, 12V = 1.5A
2 x USB A Output:	5V = 3A, 9V = 2A, 12V = 1.5A	5V = 3A, 9V = 2A, 12V = 1.5A
Dims (H x W x D):	98 x 62 x 23mm	143.5 x 68 x 24mm
Weight:	193g	367g

SAFE USAGE INFORMATION

Only use the correct voltage power supply and cable for your device. Use a certified or device manufacturer's charging cables or quality cables such as MIXX Ultra Durable Cables.

MIXX™

CHARGE



support@mixx-io.com



mixxcharge.com

UFXX-QSG02