

ENTRY

A lever/knob set that locks/unlocks with a key on the outside and a turnpiece or push button on the inside. Often used on exterior doors and paired with a deadbolt.