

Premium Tornado Instruction for Use

SAFETY REQUIREMENTS

- KEEP OUT OF REACH OF CHILDREN.
- When using the Premium Tornado, small pieces of debris can be whirled into the air.
 Always wear protective goggles or glasses to prevent eye damage.
- The Premium Tornado nebulizes the cleaning liquid. Wear appropriate respiratory protection to prevent health hazards from inhalation.
- The Premium Tornado can cause considerable noise from air pressure. Please wear hearing protection at all times.
- Use in well-ventilated area.
- Do not exceed 110 psi.
- Do not use with acidic, flammable or combustible products.
- Do not point cleaning tool at face or body.
- Avoid breathing dust or handling debris that can be harmful to your health.
- Should you notice a tool malfunction, discontinue use and contact your supplier.
- Use caution when other people are in your surroundings and work area.
- Always disconnect the devise from the air supply when not in use and before changing accessories or when preforming routine maintenance.
- Always check the devise for leaking hoses, loose fittings or damaged parts.

AIR REQUIREMENT

The Premium Tornado cleaning tool requires a minimum air pressure of 75 to 90 psi, constant, for optimum performance. DO NOT EXCEED 110 psi.

NOTE: Constant air supply may vary depending on compressor size and capabilities. Always make sure tank and air lines are free from oil and water contamination.

INSTRUCTIONS FOR USE

Cleaning Fabric

- 1- Remove large debris and vacuum area to be cleaned
- 2- Turn liquid air valve to upright position to deliver cleaning solution
- 3- Hold cleaning nozzle 1 to 3 inches from area to be cleaned. Fully depress trigger. Begin with overlapping motion over area to be cleaned
- 4- Next turn valve to down position using just air and dry the area

Cleaning Dashboard and Hard Surfaces

- 1- Recommended air pressure set at 75 psi
- 2- Turn liquid valve to straight up vertical position, using an overlapping motion, spray area to be cleaned.
- 3- Allow cleaning liquid to remain on surface for 12-17 seconds.
- 4- Follow with air only by turning valve to the horizontal down position. Begin drying with overlapping motion followed with a soft dry towel.



CARE & MAINTENANCE

- Avoid dropping the gun on the floor, disconnect when not being used.
- Turn liquid valve to the horizontal position after use to avoid dripping from tip.
- Tighten the jar while holding the lid to avoid loosening or stripping fun assembly.
- Keep the cone of the gun clean by removing the cone and rinsing frequently

Note: After every use, place nozzle 2-3 inches into a bucket of soapy water while depressing the trigger once or twice to quickly remove dirt buildup in the come. This will prevent premature wear.

TROUBLESHOOTING

Problem

- Tip will not oscillate
- Tip moves slowly
- Tip drips fluid
- Will not dispense liquid

Solution

- Check for low air pressure
- Check for dirt build-up and clean
- Keep liquid valve in the horizontal position when not in use
- Check pickup tube for debris and rinse out