



- | | |
|-------------------------------------|--------------------|
| ① DIGITAL DISPLAY SCREEN | ⑥ HANDLE SLEEVE |
| ② THREE PIN SOCKET | ⑦ TEST BAR BIT |
| ③ FORWARD/REVERSE BUTTON | ⑧ DRILL BIT |
| ④ PLAY/PAUSE & SPEED CONTROL BUTTON | ⑨ ACRYLIC HOLDER |
| ⑤ HANDPIECE | ⑩ CHARGING BASE |
| | ⑪ AC POWER ADAPTER |


HOW TO USE

Connect the efile to the power supply using the ⑩ Charging Base. Plug the ⑤ Handpiece into the ③ Three Pin Socket.

Insert the desired ⑧ Nail Drill Bit by turning the set ring clockwise until you hear a 'click'. Remove the ⑦ Test Bar Bit and insert a desired nail drill bit.

Press ④ Play/Pause Speed Control Button to start. Adjust speed by turning the ④ Speed Control button.

Use ③ Forward/Reverse (F/R) button to change direction.

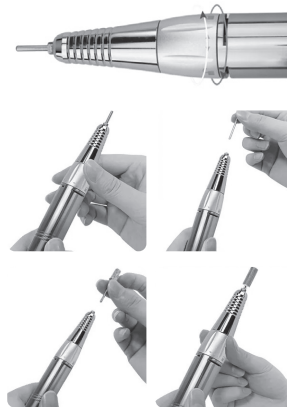

Loading the Drill Bit

navy[®]

INSTRUCTION MANUAL

This is an ideal nail drill machine for nail decoration. It has forward and reverse dual direction rotations for both left-handed and right-handed technicians. Adjustable speed from 0 to 35,000RPM, quiet & smooth operation with a flexible extension which are convenient to use for finishing nail artwork.

This CE approved nail drill machine has a broad speed adjustable extend, from 0-35,000RPM (min to max). The rechargeable and portable electric nail file can last 8-10 hours working time after 3 hours full charge.

The nail drill machine is perfect for trimming callous skin and removing hard gel.



TECHNICAL SPECIFICATION

Rotary Speed: 0-35,000 RPM

Power Rating: 45w

Output: 12V/2A

Input Voltage: 100-240V 50/60Hz

Li-Ion Battery: 18650 2500mAh 7.4V

Charging Time: 3hrs

Working Time: 8-10hrs

Handpiece will stop working when the overload protection function is started to avoid overheat due to improper operation. Just turn off the power and re-start the machine for continuous use. If the nail drill machine is re-started, the speed control dial needs to be adjusted to the speed '0' and the power supply will be restarted. The slight burning smell from the handle motor is normal due to the heat dissipation.

PRECAUTIONS

We do not recommend using on natural nails.

Stop the use if unusual movement/noise is detected during operation.


Adjust the speed gradually, not abruptly.

Do not touch any rotating part when the machine is working.

Stop the machine to change the rotation direction.

Do not obstruct ventilation sides and keep dust free.

Unplug from power supply when not in use.

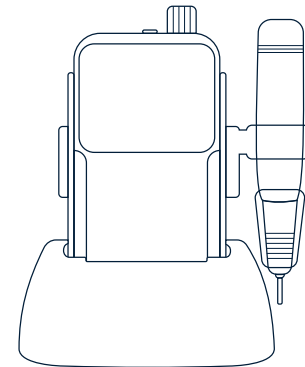

✓ VARIABLE SPEED

✓ PORTABLE

✓ LONG STANDBY TIME

DO WE PUT COMPANY DETAILS HERE,