
User Manual Solar Ground Mount

- 02 IMPORTANT TOOLS
- 03 INSTALLATION RULE
- 03 NOTICE
- **04** COMPONENTS
- 10 INSTALLATION STEPS

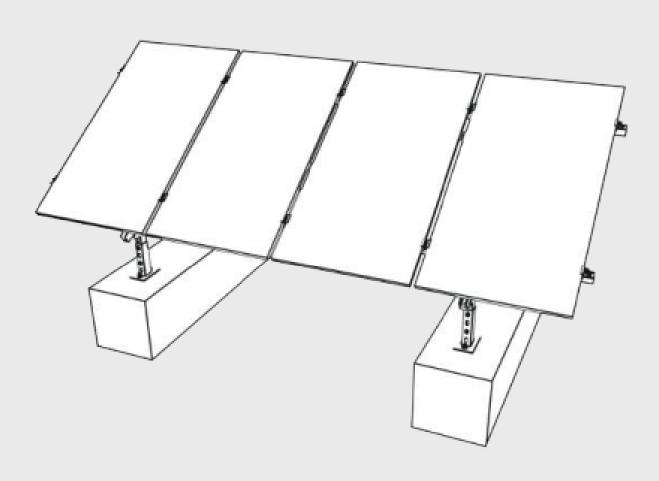

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR SOLAR GROUND MOUNT. PLEASE READ THIS MANUAL AND FOLLOW THE INSTRUCTIONS EXACTLY.

IMPORTANT TOOLS




INSTALLATION RULE

Installation of the framing shall conform to relevant local government standards, manufacturer's specifications and good building practice. The roof to which the panels are to be installed shall conform to the relevant local government standards.

- Follow the risk management process prior to commencing work-that is, identify all the hazards, assess their risks and eliminate or control them.
- Consult with those involved in the work.
- Develop safe work procedures for installing solar panels, using information from the risk management process, which would include reviewing the following information:
- Provide appropriate information and training to anyone involved in performing the work.
- Provide appropriate tools and personal protective equipment (PPE).
- Ensure that a system is in place to prevent or arrest falls.
- Ensure there are adequate first aid facilities.
- Ensure all employees are aware of the emergency procedures.

NOTICE

- Determine the installation distance between legs.
- Factors affect the distance
 - Solar panel dimension
 - The systems layout
 - Angle between solar panel and ground
 - Max wind speed in installation site
 - Max snow in installation site
 - Earthquake magnitude in installation site
- RICH SOLAR technology team could design the distance base on above factors and make the technology drawing to show the distance between legs.
- When you have project, please offer above factors for our engineer to design the distance.
- Please refer our technology drawing and below installation step to install the mounting system.

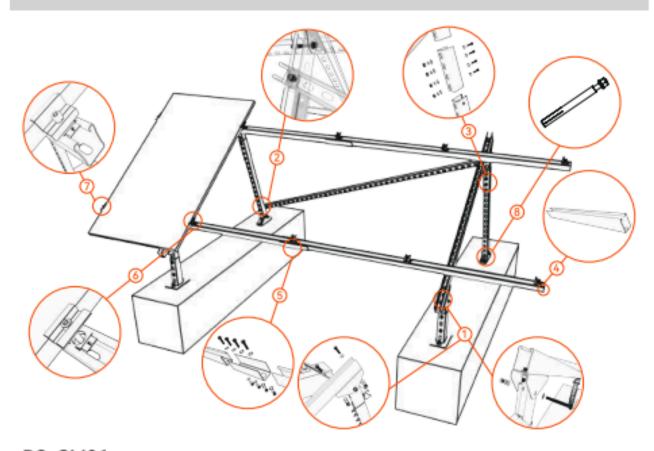

RS-GM01

No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
		1.01	Beam 950mm	1	
		1.02	Front leg 300mm	1	
	I	1.03	Rear Leg 250mm	1	2
		1.04	Rear Leg 750mm	1	
		1.05	U62 rear leg splice kit	1	
		1.06	adapter	3	
		1.07	Base rear foot	1	
1		1.08	Hex bolt M10*30*1	10	
		1.09	Flat washer M10*2	20	
		1.1	Spring washer M10*1	10	
		1.11	Hex nut M10*1	10	
		1.12	Hex bolt M10*70*1	3	
		1.13	Flat washer M10*2	6	
		1.14	Spring washer M10*1	3	
		1.15	Hex nut M10*1	3	<u> </u>

0.1

No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
	_	2.01	U41 Strengthen pile	1	
		2.02	M10 Plastic steel nut	2	
2		2.03	Flat washer M10*1	2	1
_		2.04	Spring washer M10*1	2	
		2.05	Hex nut M10*30*1	2	
		3.01	Hex bolt M10*30*1	1	
3		3.02	Flat washer M10*1	1	ا ہ ا
3	Z >>	3.03	Spring washer M10*1	1	4
		3.04	M10 Plastic steel nut	1	
4	E D	4.01	U62 Rail 1500mm	1	4
		5.01	U62 rail splice kit	1	2
		5.02	Hex bolt M10*30*4	4	
5	0000	5.03	Spring washer M10*4	4	
		5.04	Flat washer M10*8	8	
		5.05	Hex nut M10*4	4	
	oro	6.01	U-mid clamp	1	
	5	6.02	M8 nut	1	
6		6.03	hex bolt M8*45*1	1	6
		6.04	Spring washer M8	1	
	A.	6.05	Ground clip	1	
		7.01	U-end clamp	1	
7	NO.	7.02	hex bolt M8*35*1	1	4
'		7.03	M8 nut	1	
		7.04	Spring washer M8	1	
8	THE STATE OF THE S	8.01	expand bolt M12*150mm	1	8

RS-GM02

No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
		1.01	Beam 1400mm	1	
		1.02	Front leg 300mm	1	
		1.03	Rear Leg 250mm	2	
		1.04	Rear Leg 750mm	1	
		1.05	U62 rear leg splice kit	2	
	A	1.06	adapter	3	
	1	1.07	Base rear foot	1	
1	\\	1.08	Hex bolt M10*30*1	14	2
	(A)	1.09	Flat washer M10*2	28	
	π Σ	1.1	Spring washer M10*1	14	
		1.11	Hex nut M10*1	14	
		1.12	Hex bolt M10*70*1	3	
		1.13	Flat washer M10*2	6	
		1.14	Spring washer M10*1	3	
		1.15	Hex nut M10*1	3	
		2.01	U41 Strengthen pile	1	1
		2.02	M10 Plastic steel nut	2	
2		2.03	Flat washer M10*1	2	
		2.04	Spring washer M10*1	2	
		2.05	Hex nut M10*30*1	2	
		3.01	Hex bolt M10*30*1	1	
3		3.02	Flat washer M10*1	1	4
3	~_~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	3.03	Spring washer M10*1	1	~
		3.04	M10 Plastic steel nut	1	
4	E D	4.01	U62 Rail 1100mm	1	6
		5.01	U62 rail splice kit	1	
		5.02	Hex bolt M10*30*4	4	
5		5.03	Spring washer M10*4	4	4
	7-05-V	5.04	Flat washer M10*8	8	
		5.05	Hex nut M10*4	4	

No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
		6.01	U-mid clamp	1	
		6.02	M8 nut	1	
6		6.03	hex bolt M8*45*1	1	6
		6.04	Spring washer M8	1	
	A STATE OF THE PARTY OF THE PAR	6.05	Ground clip	1	
		7.01	U-end clamp	1	
	N° L	7.02	hex bolt M8*35*1	1	,
7		7.03	M8 nut	1	4
	The board of the b	7.04	Spring washer M8	1	
8	TB.	8.01	expand bolt M12*150mm	1	8


RS-GM03

No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
		1.01	Beam 1600mm	1	
		1.02	Front leg 300mm	1	
		1.03	Rear Leg 250mm	2	
		1.04	Rear Leg 750mm	1	
		1.05	U62 rear leg splice kit	2	
		1.06	adapter	3	
		1.07	Base rear foot	1	
1	\	1.08	Hex bolt M10*30*1	14	3
	M \\	1.09	Flat washer M10*2	28	
	π Σ	1.1	Spring washer M10*1	14	
		1.11	Hex nut M10*1	14	
		1.12	Hex bolt M10*70*1	3	
		1.13	Flat washer M10*2	6	
		1.14	Spring washer M10*1	3	
		1.15	Hex nut M10*1	3	
		2.01	U41 Strengthen pile	1	2
		2.02	M10 Plastic steel nut	2	
2		2.03	Flat washer M10*1	2	
		2.04	Spring washer M10*1	2	
	•	2.05	Hex nut M10*30*1	2	
		3.01	Hex bolt M10*30*1	1	
3		3.02	Flat washer M10*1	1	6
5	~_~~~	3.03	Spring washer M10*1	1	ľ
		3.04	M10 Plastic steel nut	1	
4	The state of the s	4.01	U62 Rail 1600mm	1	6
		5.01	U62 rail splice kit	1	
		5.02	Hex bolt M10*30*4	4	
5	0000	5.03	Spring washer M10*4	4	4
		5.04	Flat washer M10*8	8]
		5.05	Hex nut M10*4	4	


No	Picture	Part No.	Part name	Part qty Each pc	Part qty Each set
	6	6.01	U-mid clamp	1	6
		6.02	M8 nut	1	
6		6.03	hex bolt M8*45*1	1	
		6.04	Spring washer M8	1	
		6.05	Ground clip	1	
		7.01	U-end clamp	1	
,	No. I	7.02	hex bolt M8*35*1	1	4
′		7.03	M8 nut	1	4
	C. A. S.	7.04	Spring washer M8	1	
8	H	8.01	expand bolt M12*150mm	1	12

INSTALLATION STEPS

Step 1

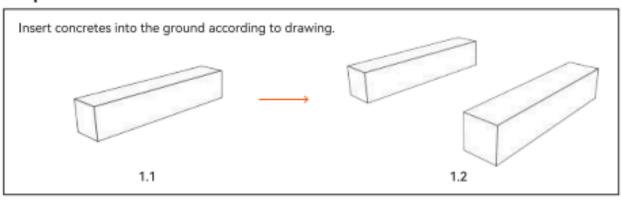


Step 2

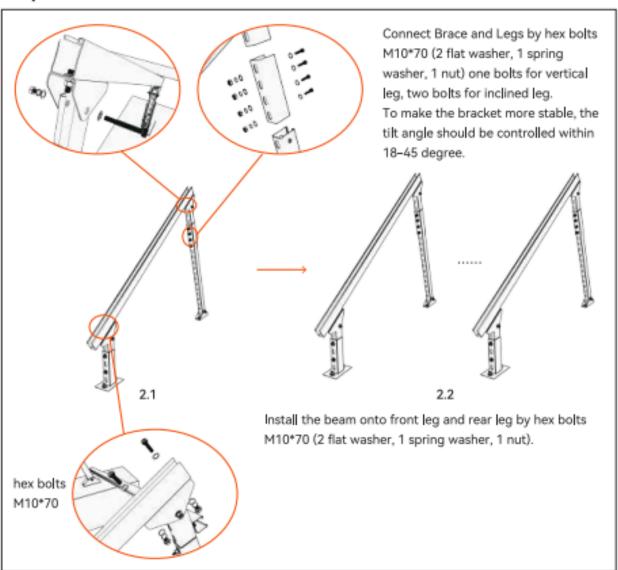


INSTALLATION STEPS

Step 3

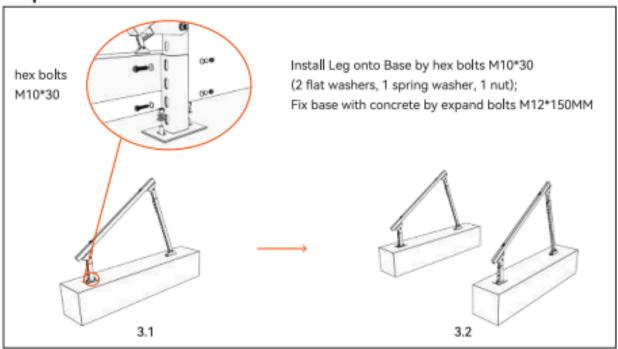


Step 4

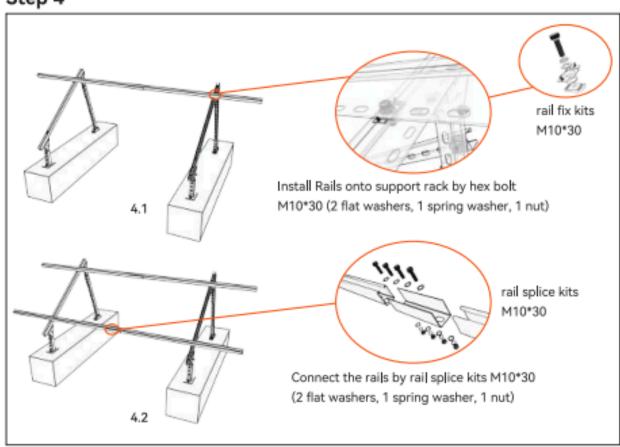

INSTALLATION STEPS

Step 5

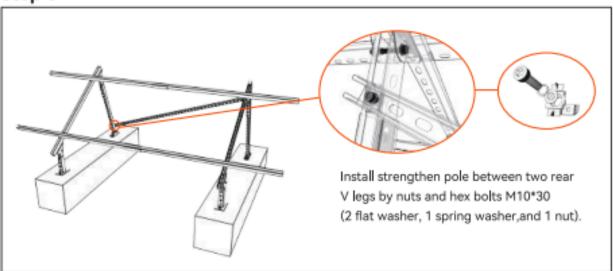

Step 6

