


### 1. LED Display Press the ON/OFF button to detect the power 188<sub>%</sub> USB-A level of the car jump starter. The screen shows 888<sub>V</sub> out the remaining battery power and the activated output port. Different numbers on the screen indicate different power levels. The number will reach 100% after charging is complete. 2. Jump starter charging instruction 1.Plug the charging cable to electronic devices(devices with QC3.0 output is recommended for fast charging ) . 2.Connect USB-C input port of jump starter to charge. 1). Plug the car adapter into the socket of cigarette lighter. 2).Connect USB-C input port of jump starter to the other end of car adapter. -04-

**Operation Instruction** 

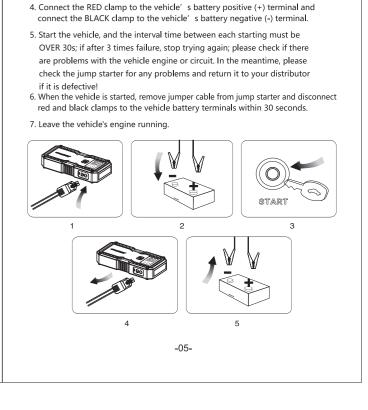

**Operation Instruction** 

2. Make sure that the remaining of power is not less than 80%, fully charged is suggested.

3. Jump start 12V vehicle instruction

3. Plug the cord of jumper cable into the jump start socket.

1. Fully charged before using for the first time.

**How To Get A Warranty Honored?** 

### **Operation Instruction**

-02-

#### 4. In any of following situations, the smart clamp will turn protections on

Indicator	Situations	
Flashing red and green indicator	Jumper cable connected	
Solid green indicator	Ready to start	
Solid red indicator	1.Low voltage protection—Recharge the product 2.Over-heating protection—Remove the clamps to let it cool 3.Timeout protection—Connecton timed out. Remove the clip within 30s after a successful start	
Solid red with discontinuous beeping	Reverse polarity protection  —Reverse the dips and ensure the correct connection	
Solid red with continuous beeping	Short circuit protection —Don't connect the dips together or to the same metal	

-06-

### **Operation Instruction**

-03-

### 5. Charging cell phone or tablet instruction

- 1. Plug the charging cable to USB or Type-C output port. 2. Select appropriate connector for your cell phone or pad.
- 3. Press the switch button to charge, the LED display will be on when the device

### 6. LED Lamp

Press the ON/OFF button 3 seconds to start the LED light. There are 3 modes for LED light appear in order (illumination, strobe, SOS )







## FAQ

### Q: How to turn off this appliance?

- A: This appliance will power off automatically when no load is found or charging is completed.
- Q: How many times can this appliance charge for my cell phone? A: 5 times for iphone mobile phone.
- Q: How long will this appliance take to charge my mobile phone full?
- Q: How many times can this appliance on a full charge to the start the vehicle? A: Approx 20 times.

-07-

Q: How long will the power of battery of this appliance remain? A: 3-6 months, however, we suggest to recharge it every 3 months.

### **Trouble Shooting**

Finding	Cause	Remedies
No response when pressing the switch button.	Low voltage protection of jump starter is started.	Plug the charging cable into the input port to recharge in order to activate.

### **Exemption of warranty**

- 1. The company undertake no responsibility for any problems caused by incorrect operation.
- 2. After the unauthorized disassemble, company does not undertake any
- responsibility.
- 3. The problem caused by wrong charger does not match the product, company does not undertake any responsibility.
- 4. Beyond the shelf life of products, company does not undertake any responsibility.

-08-

# Warning

- 1. Do remove the jump starter from the vehicle within 30s.
- 2. Do not connect the two clamps. Otherwise, it may be dangerous!
- 3. Do not disassemble the host. Otherwise, it may be dangerous!
- 4. This appliance is not intended for using by young or infirm persons
- without supervision. 5. Do not use as a toy.
- 6. Do not allow the appliance to become wet .
- 7. Do not immerse the appliance in water .
- 8. Do not operate the appliance in explosive atmospheres, such as in the presence of flammable liquids, gases or dust . 9. Do not modify or disassemble Jump starter. Only a suitably technician
- qualified may repair this unit.
- 10. Do not store in locations where the temperature may exceed 70°C.
- 11. Charge only at ambient temperatures between 0°C- 60°C.
- 12. Charge only using the charger provided with the appliance
- 13. Under extreme conditions, battery leakage may occur. Carefully wipe the liquid off using a cloth and avoid skin contact when you notice liquid on the batteries. In case of skin or eye contact, rinse immediately within clean water and seek medical attention.
- 14. At the end of its useful life, discard the appliance with due care for our environment .

-09-