

DEAR CUSTOMER,

 
Thank you for choosing our product. Please read this user manual before installing your product to avoid damage caused by improper use.

Included

Hand shower
1 pcs (A)




Shower holder
1 pcs (B)



Rubber ring
2 pcs (C)



 Hose
1 pcs (D)

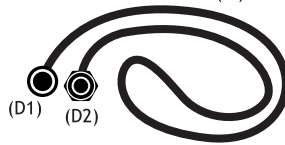


Flow restrictor
1 pcs (E)



Thread seal tape
1 pcs (F)



 Required: Shower arm
Not included. Must be installed before mounting the hand shower.

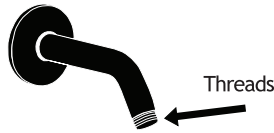

Optional tools (not included): Pliers Wrench



Step 1 - Remove the old showerhead:

Turn the old showerhead counterclockwise by hand to remove it. If you cannot remove it by hand, you may use pliers to get a better grip of the shower arm and then use a wrench to loosen and remove the showerhead by turning it counterclockwise.

Please note that it may be convenient to wrap the pliers' jaws with electrical tape or pliers' jaws covers to avoid damaging the shower arm finish. Alternatively, you may cover the shower arm with a towel. Once removed, clean off any rust, mineral deposits and old sealing tapes.

Step 2 - Wrap the threads:

Wrap the threads of the shower arm with the thread sealing tape (F) in a clockwise direction, 2-3 turns. Press the tape into the threads.

Step 3 - Mounting the shower:

Insert the shower arm into the shower holder (B1) and tighten by hand turning the shower holder (B) in a clockwise direction.

Insert 1 rubber ring (C) into the hexagonal-shaped end (D2) of the hose (D) and connect it to the shower holder (B2) by turning it in a clockwise direction.

Insert 1 rubber ring (C) into the cylinder-shaped end (D1) of the hose (D) and connect it to the hand shower (A) by turning it in a clockwise direction. Check for leaks. In case there are leaks, carefully tighten the connections or use additional sealing tape (F) until there are no leaks.

Step 4 - Using the shower:

This hand shower has 6 different modes. To change the mode, simply rotate the face of the hand shower clockwise or counterclockwise.

Water saving • Power massage • Massage + Rainfall • Wide Rainfall • Rainfall + Mist • Mist

IMPORTANT: U.S. federal regulation limits the water flow to 2.5 gallons per minute (some local jurisdictions may have a lower limit). To comply with this regulation, a flow restrictor (E) is included in this set and already installed in the hand shower. If your water flow is very low, you may remove the flow restrictor (E).

The flow restrictor (E) is located inside the hand shower arm. There is no need to open the hand shower, as it is reachable from the bottom. After locating the flow restrictor (E), remove the black ring with the help of a paper clip and then screw the tip of a coarse threaded screw with a small screwdriver into one of the biggest holes. Then pull the screw to pop out the flow restrictor (E).

Imported and distributed by:
Pluton Inc.
821 Union Pacific Blvd., Laredo, TX 78045 USA