


Equity[®]

KEYWOUND ALARM CLOCK-No Batteries Needed

OPERATING INSTRUCTIONS MODEL# 14073/14074/14075

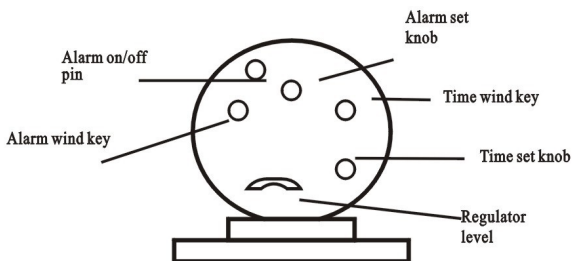

To Set Time: Turn the time set knob to the correct time. Wind the time key fully in the direction the arrow indicates.

To Set Alarm:

- 1) Turn the Alarm set button in the direction the knob indicates to the desired alarm time.
- 2) Wind the alarm winding key fully in the direction the arrow indicates.

To turn Alarm on: The Alarm is AUTOMATICALLY activated once the alarm key is wound. The Alarm pin will automatically be pushed out.

To turn Alarm off: push the alarm on/off pin in.

NOTE: the movement of the alarm on/off pin is very slight.

To Adjust the Time Accuracy: The clock has been regulated at the factory. However, the regulator may have shifted during shipping.

- a) If clock is running fast—move regulator towards the (–) sign.
- b) If clock is running slow—move regulator towards the (+) sign.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

-the product

-a letter explaining the problem

-and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St. S.
La Crosse, WI 54601

Made in China

Printed in China

www.equitybylacrosse.com/support