



MODEL NUMBER 20901

TO START CLOCK

- 1.Remove the battery cover from the back of the clock..
- 2.Insert 1 New “AA” alkaline battery (not included) according to the polarity indicators inside the battery compartment.
- 3.Replace the battery cover.

TO SET TIME:

Turn the time set knob at the back of clock clockwise to the desired time.

TO SET ALARM:

- 1.Turn the alarm set knob at the back of the clock counter-clockwise to desired alarm time.
- 2.Slide the alarm switch to the “ON” position.
- 3.When the alarm sounds, slide the alarm switch to the “OFF” position to deactivate the alarm.

SNOOZE & LIGHT OPERATION :

- 1.Press the top of the clock case to activate the snooze and light.
- 2.The alarm will sound again in 5 minutes.

NOTE:

This clock should be accurate to within a few minutes a year.
Should the timekeeping suddenly fluctuate replace the battery



Please help in preservation of the environment and return used batteries to an authorized depot.
Remove the battery from the clock if you do not intend to use for an extended period of time.

Two Year Warranty(U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship.During this period such defects will be repaired, or the product will be replaced at Equity’s option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY,ARE LIMITED IN DURATION TO THE PERIOD ENDING ONE YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied will last so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your clock isn’t working, send it with a letter explaining the problem and \$5.00 for postage and handling to:

Equity Warranty Dept.,
2817 Losey Blvd. So.
La Crosse WI 54601.