


Model 25302

- (A) Turn knob to set time
- ® Turn knob to set alarm
- O Alarm off/on switch
- Battery compartment.

 Insert battery in proper

 Polarity (+) and (-) as indicated
- Please insert 1 AA battery
 Positive(+) side first to ensure
 proper installation
 Battery is included.

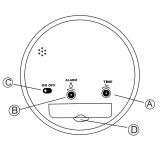

BATTERY INSTRUCTION

- 1. Always purchase the correct size and grade of battery most suitable for the intended use.
- 2.Clean the battery contacts and also those of the device prior to battery installation.
- 3.Ensure the batteries are installed correctly with regard to polarity(+and-).
- $\begin{tabular}{ll} 4. Remove the batteries from equipment which is not to be used for an extended period of time. \end{tabular}$
- 5.Remove used batteries promptly.

Two Year Warranty (U.S.A).

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department 2830 26th St.S. La Crosse,WI 54601

Printed in China www.lacrossetechnology.com/support/

Made in China