




1.4” LED INSTA SET ALARM CLOCK

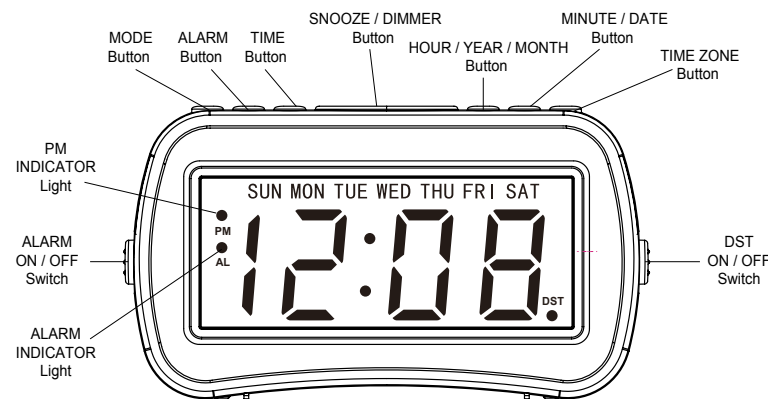

Model: 30022
DC: 012819

POWER UP

1. Insert the 120 volt power cord into an outlet.
2. The clock will automatically show AM/PM, time, weekday, year, month and date. Default time zone is set to Pacific Standard Time (PST).

TIME ZONE SELECTION

Press and release the TIME ZONE button to select one of four Time Zones: **P** = Pacific (PST) • **M** = Mountain (MST) • **C** = Central (CST) or **E** = Eastern (EST)

TIME SETTING

1. Continuously hold down the TIME button while setting your hour and minutes.
2. While holding the TIME button, press the HOUR button to set your hour.
Note: The PM indicator will appear when you advance to PM time.
3. Press the MIN button to set your minutes.
4. Release the TIME button when the correct time is shown on the display.

SETTING DAYLIGHT SAVING TIME (DST)

- Slide the DST ON/OFF Switch to ON. The DST Indicator light will be on. Your clock will move one hour ahead on the Second Sunday in March and move one hour back on the First Sunday in November.

- If you do not observe Daylight Saving Time, slide the DST ON/OFF Switch to OFF. Your clock will not change.

CLOCK DIMMER

- Press the SNOOZE/DIMMER button once for low light.
- Press the SNOOZE/DIMMER button again to go back to bright light.

CALENDAR SETTING

1. Press the MODE button once to view the two digit year. Continuously hold down the MODE button while pressing the HOUR button to set the two digit Year.
2. Press the MODE button to move to Month and Date settings. Continuously hold down the MODE button while pressing the HOUR button to set the Month, and then press the MIN button to set the Date.
- 3.. Release the MODE button when the correct Year, Month and Date are selected.

TIME ALARM

1. Continuously hold down the ALARM button while setting your alarm time.
2. While holding the ALARM button, press the HOUR button to set your alarm hour. **Note:** The PM indicator will appear when you advance to PM time.
3. Press the MIN button to set your alarm minutes.
4. Release the ALARM button when the correct alarm time is shown on the display.

ALARM ON/OFF

ON: Slide the ALARM ON/OFF switch to the ON position to turn the alarm ON. The Alarm Light Indicator will appear.

OFF: Slide the ALARM ON/OFF switch to the OFF position to turn the alarm OFF. The Alarm Light Indicator will disappear.

SNOOZE

- When alarm sounds, press the SNOOZE/DIMMER button to silence alarm for 9 minutes. Snooze function can be repeated many times if desired.

BATTERY BACKUP

- The clock has installed one CR2032 battery to maintain the Pacific Standard Time setting.
- The battery will keep the alarm and time settings until the power is restored. Alarm will not sound and the LED will not light-up.
- To replace the CR2032 battery, insert a screw driver into the slot of the battery holder to remove the old battery. Insert a fresh battery. Positive is face up.



WARNING:

1. This product contains a Button Cell Battery.
2. If swallowed, it could cause severe injury or death in just 2 hours.
3. Seek medical attention immediately.

AVERTISSEMENT:

1. Cet article contient une pile bouton.
2. De graves blessures ou la mort pourraient suivre dans les deux heures suivant l'ingestion.
3. Demander l'aide de professionnels de la santé sur le champ.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
2. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
4. Do not use if compartment is not secure.
5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
6. Tell others about the risk associated with button batteries and how to keep their children safe.



CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period.
- Promptly remove an expired battery.


POWER REQUIREMENTS

Power: 120V power cord • Requires one CR2032 battery for back-up

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution: To prevent electrical shock do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.


ATTENTION: POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ETRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUNVERT



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

SAFETY INSTRUCTIONS

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Water and Moisture - The appliance should not be used near water - for example, near a bathub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
4. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For Example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or place in a built-in installation such as a bookcase or cabinet that may impede the flow of air through the ventilation openings
5. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
8. Power - Cord Protection - Power supply cords should be routed so that they are not likely to be walked on, or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point where they exit from the appliance.
9. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
10. Object and Liquid Entry - Care should be taken so that objects do not falland liquids are not spilled into the enclosure through openings.
11. Damage Requiring Service - The appliance should be services by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
12. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



Please help in the preservation of the enviroenment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:
Your product. A letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St S.
La Crosse, WI 54601
www.lacrossetechnology.com/support

Made in China

Printed in China

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!
The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov