

Equity

2 Inch LCD Alarm Clock



Model: 30041

DC: 020924

Power Up

1. Insert 3 “AA” alkaline batteries (not included) into the bottom of the clock according to polarity symbols.
2. Set Time and Date

Time Setting

1. Slide the Selector Switch to the Time position. The Hour and Minutes will start flashing.
2. Press and release the HOUR button to change the Hour.
3. Press and release the MINUTE button to change the Minutes.
4. Slide the Selector Switch to the Lock position for normal operation.

Date Setting

1. Slide the Selector Switch to the Date position. The Year, Month, and Date will start flashing.
2. Press and release the YEAR button to change the Year.
3. Press and release the MONTH button to change the Month.
4. Press and release the DATE button to change the Date.
5. Slide the Selector Switch to the Lock position for normal operation.

AM/PM Indicators

For both the Time and Alarm Time “AM” will show for morning hours and “PM” will show for evening hours.

12/24 Hour Time Format

Press and release the 12/24 button to select 12-hour or 24-hour time format.

Alarm Setting

1. Slide the Selector Switch to the Alarm position. The Hour and Minutes will start flashing.
2. Press and release the HOUR button to change the Hour.
3. Press and release the MINUTE button to change the Minutes.
4. Slide the Selector Switch to the Lock position for normal operation.

Activate/Deactivate Alarm

1. Slide the ALARM ON/OFF Switch (on the side of the clock) to the ON position to activate the alarm. The Alarm Icon 🛎 will show.
2. Slide the ALARM ON/OFF Switch (on the side of the clock) to the OFF position to deactivate the alarm.

Note: When the alarm time is reached, the alarm will sound for 60 seconds then shut off for 24 hours unless ALARM ON/OFF switch is moved to the OFF position.

Snooze

- When the alarm sounds press and release the SNOOZE/LIGHT button to silence the alarm for 8 minutes. The Snooze Icon Zz will flash on the display.
- When the snooze duration is reached, the alarm will sound for 60 seconds then shut off for 24 hours unless ALARM ON/OFF switch is moved to the OFF position.
- The snooze feature may be repeated.

Backlight

Press and release the SNOOZE/LIGHT button to activate the backlight for 5 seconds.

Night Vision

The Night Vision Sensor Switch is on the bottom of the clock. Select ON and the clock will automatically illuminate in a dark environment.

Specifications

Power: 3-AA Alkaline Batteries (not included)

Battery Life: 12+ months.

Dimensions: 6.22”H x 2.56”W x 3.66”L (15.79 cm H x 6.50 cm W x 9.29 cm L)

Care and Maintenance

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Warranty and Support

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity’s option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may

also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department
2830 26th St S.
La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty
Patents: www.lacrossetechnology.com/pages/patents

Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm.
For more information go to: www.P65Warnings.ca.gov

If you need support, Scan the QR code or visit:
bit.ly/contact_techsupport

