


LOCATION OF CONTROLS

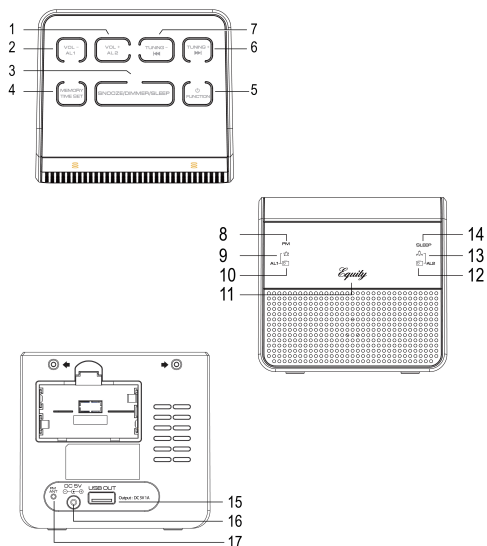

- | | |
|----------------------------|--------------------------|
| 1. VOLUME +/ AL2 | 10. AL1 INDICATOR |
| 2. VOLUME -/ AL1 | 11. DIGITAL DISPLAY |
| 3. SNOOZE / DIMMER / SLEEP | 12. AL2 INDICATOR |
| 4. MEMORY/ TIME SET | 13. ALARM 2 |
| 5. \uparrow / FUNCTION | 14. SLEEP INDICATOR |
| 6. TUNING+ | 15. USB FOR CHARGING THE |
| 7. TUNING - | |
| 8. PM INDICATOR | PHONE OR OTHER DEVICE |
| 9. ALARM 1 | 16. DC INPUT |
| | 17. FM ANTENNA WIRE |

CONNECT POWER! CAUTION

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

BOTTOM OF SET

Battery compartment for 1. 5 volt "AA" batteries (not included) for battery backup to maintain time only.

SET TIME

1. Press and hold "TIME SET" for one second. Press "TUNING +" to select 12 or 24 hour mode.
2. Press "TIME SET": hour digits are blinking. Press "TUNING -" or "TUNING +" to change hours down or up. When using 12 hour mode make sure the PM INDICATOR is lit when setting to PM time.
3. Press "TIME SET": minute digits are blinking. Press "TUNING -" or "TUNING +" to change minutes down or up.
4. Press "TIME SET" to confirm settings and exit the time setting program.

LISTEN TO FM RADIO

For better reception, fully extend and adjust the position of the FM antenna wire.

1. Press " \uparrow / FUNCTION" to turn on the FM radio.
 - [FM frequency] is displayed.
 2. Press and hold "TUNING -" or "TUNING +" for one second.
 - The FM Tuner tunes to a station with strong reception automatically.
- Press and release "TUNING -" or "TUNING +" repeatedly to tune to a particular radio station.

Your PLL Tuner will take one second to properly tune to the requested station before playing the sound.

STORE FM RADIO STATIONS

You can store up to 20 FM radio stations in preset channels automatically or manually.

STORE FM RADIO STATIONS AUTOMATICALLY (AUTO SCAN)

1. Press " \uparrow / FUNCTION" to turn on the radio.
2. Press the "SNOOZE/DIMMER/SLEEP" for two seconds.
 - The received stations are automatically stored to preset numbers.
3. Press "MEMORY" to select the automatically stored station from P 01 to P 20

STORE FM RADIO STATIONS MANUALLY.

1. Tune to a FM radio station.
2. Press "MEMORY" and hold to activate the storage mode.
3. Press "TUNING -" or "TUNING +" to select the preset number.
 - [P 01 ~ P 20] are the preset station numbers.
 - Press "MEMORY" again to confirm the station

number.

- If this position is occupied, the previous stored frequency will be displayed.
- To remove a pre-stored FM radio station, store another station in its place.

LISTEN TO A PRESET FM RADIO STATION

Press "MEMORY" repeatedly to tune to a preset number. Note - The digital display returns to clock display if no buttons are pressed for 5 seconds.

SET ALARM (S)

Make sure that you have set the clock correctly. You can set two separate alarms. For the alarm sound, you can select the FM radio or the buzzer.

NOTE - RADIO MUST BE TURNED OFF TO SET THE ALARM (S)

1. Press " \uparrow / FUNCTION" to enter Clock mode.
2. Press and hold "AL1" or "AL2" for two seconds.
 - [0:00] Hour digits will blink.
3. Press "TUNING -" or "TUNING +" to change hours down or up. Make sure the PM INDICATOR is lit when setting to PM time.
4. Press "AL1" or "AL2": minute digits will blink.
5. Press "TUNING -" or "TUNING +" to change minutes down or up.
6. Press "AL1" or "AL2": "bu2" digits will blink.
7. Press "TUNING -" or "TUNING +" to select the FM radio or the Buzzer. " bu2 Means buzzer, " r Rd " means FM radio.
8. Press "AL1" or "AL2": "4 12" digits will blink.
9. Press "TUNING -" or "TUNING +" to change alarm volume down or up. It can be set from 005 to 012
10. Press "AL1" or "AL2" to confirm the ALARM TIME.

SNOOZE ALARM

When alarm sounds, press SNOOZE to activate the 9 minute snooze feature. The "AL1" or "AL2" indicator blinks during the snooze time.



Equity®

Model 30118

Dual Alarm FM Radio

with 1Amp USB charging port



Instruction Manual

Thank you for buying Equity's product. Read this manual carefully to get the best performance from this unit.

 
SET SLEEP TIMER

This clock radio can turn off automatically after a preset period.

1. Press " / FUNCTION" to radio mode.
2. Press "SNOOZE/DIMMER/SLEEP" 1.1.1. multi-function button repeatedly to select the sleep timer period (in minutes).
 - Sleep indicator will light up.

To deactivate the sleep timer, press "SNOOZE/DIMMER/SLEEP" multi-function button repeatedly until it returns back to timer off mode.

Sleep Timer period cycle is as follows:

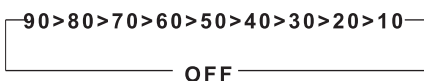

ADJUST VOLUME

While listening, press VOLUME + or VOLUME - to adjust volume.

ADJUST DISPLAY BRIGHTNESS

During standby mode, press and hold DIMMER for 2 seconds repeatedly to select high or low brightness levels.

USB Charging

Use the USB charging port to charge your smartphone or to power USB powered devices such as a USB type lamp or fan.

To connect your cell phone for charging: Use a USB cable (not included) to connect your cell phone to the USB connector or the unit. Your cell phone should start charging.

Remarks:-

Charging function may not be supported for all phones or electronic devices

BATTERY BACK-UP

(For battery backup to maintain time only.) Install 2 "AA" Batteries (not included) according to polarity shown inside the battery compartment. In the event of a power interruption, your set will not work normally from the mains supply but there is now the advantage that your clock will continue to work. The clock display will not light up, as the clock time will be held in the memory. This

also enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used from short temporary power interruption. For longer durations, the battery may become exhausted or there may be some deviation in accuracy. When the battery is exhausted, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery. However, if disconnected from the mains, the clock figures will flash when the mains are re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

Don't throw used batteries in the trash.

Attention should be drawn to the environmental aspects of battery disposal. Electrical products should not be disposal of with household waste. Please recycle where facilities exist.

(Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT

- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This clock radio shall not be exposed to dripping or splashing.

- Do not place any sources of danger on the clock radio (e. g. liquid filled objects, lighted candles).
- There should be a minimum distance of 2.5" around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

Electrical products should not be disposed of with household waste. Please recycle where facilities exist.

(Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

SPECIFICATION

Power Source : 100-240V 50/60Hz
Tuner Range : FM 87.5-108.0MHz
Power Consumption : ≤1W
USB Charging power : DC 5V 1A (standby mode)

Product information is subject to change without prior notice.

FCC Information:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



TWO YEAR LIMITED WARRANTY (U. S. A)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period, such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St. S
La Crosse, WI 54601

Made in China
Printed in China