

Equity

NIGHTVISION® LCD ALARM



1. Hour button
2. Minutes button
3. Time Set button
4. Alarm Set button
5. Alarm ON/OFF switch
6. Light Sensor
7. Snooze/Light button



MODEL: 30330

DC: 051123

POWER UP

Install 3 "AA" batteries (not included) into the clock.

SET TIME

1. Hold the TIME SET button and press the HOUR button to set the hour.
2. Hold the TIME SET button again and press the MINUTES button to set the minutes.


Note: The PM Indicator will appear when you advance to PM time.

SET ALARM TIME

1. Hold the ALARM SET button and press the HOUR button to set the hour.
2. Hold the ALARM SET button again and press the MINUTES button to set the minutes.

Note: The PM Indicator will appear when you advance to PM time.

ACTIVATE/DEACTIVATE ALARM

- Slide the ALARM ON/OFF switch to ON to activate the alarm. The Alarm Icon  will show. The alarm will sound for 60 seconds at the selected time.
- Slide the ALARM ON/OFF switch to OFF to deactivate the alarm. The alarm icon will disappear. The alarm will be off permanently.
- When the alarm sounds, press the SNOOZE/LIGHT button to silence a sounding alarm for 4 minutes. **Zz** will flash while snoozing.
- When the alarm sounds, press the TIME SET or ALARM SET buttons to silence the alarm for 24 hours. The alarm icon will remain on the LCD.

NIGHTVISION® TECHNOLOGY

When the light level is extremely low the Light Sensor automatically illuminates a dim glow behind the display. This allows you to see the time. When the room brightens the Light Sensor will automatically turn off the glow to save battery power.

Press the SNOOZE/LIGHT button to activate the backlight for a brief time.

POWER REQUIREMENTS & DIMENSIONS

Power Requirements: 3 "AA" batteries (not included)

Dimensions: 4.75" L x 3.75" W x 2.40" H (12.06cm L x 9.52cm W x 6.09cm H)



CARE & MAINTENANCE

Battery Replacement Instructions

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, Standard, or Rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.



Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department
2830 26th St S.

La Crosse, WI 54601

For Full Warranty Details, Visit:

www.lacrossetechnology.com/pages/warranty

JOIN THE CONVERSATION

Ask questions, watch setup videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Facebook, Instagram, YouTube, and Twitter.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov