



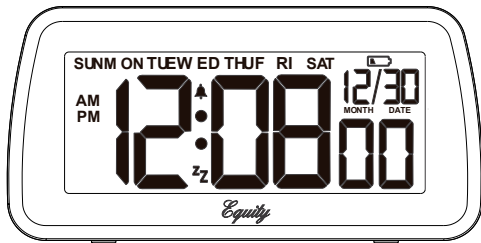

MULTI COLOR ALARM CLOCK

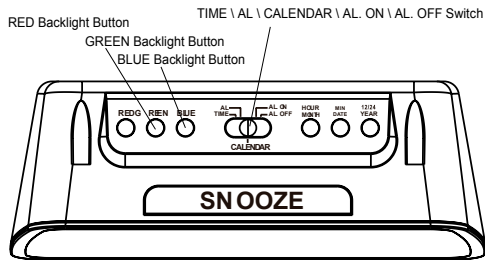

Model: 30451
DC: 053018

POWER UP

1. Insert the 120 volt power cord into an outlet, then into your clock.
Optional: Insert one 9 volt battery for backup.
2. 12:00 will flash as an indication to set the time.

TIME SETTING

1. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to TIME position.
2. Press the HOUR \ MONTH button to set the hour.
The PM indicator will light when the hour is advanced into the PM time.
3. Press the MINUTE \ DATE button to set the minutes.
4. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to AL.OFF after setting your time.

CALENDAR SETTING

1. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to CALENDAR position. The Year, Month, & Date digits will begin to flash on the display
2. Press the HOUR \ MONTH button to set the Month.
3. Press the MINUTE \ DATE button to set the Date.
4. Press the 12/24 \ YEAR button to set the Year.
5. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to AL.OFF position after set the Calendar.

TIME ALARM

1. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to AL position.
2. Press the HOUR \ MONTH button to set the hour. The PM indicator will light when the hour is advanced into the PM.
3. Press MINUTE \ DATE button to set the minutes.
4. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to AL. OFF after setting your alarm time.

ALARM ON/OFF






















1. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to AL.ON position to choose alarm ON. The alarm indicator will light up.
2. Slide the TIME \ AL \ CALENDAR \ AL.ON/AL.OFF set switch to the AL. OFF position to turn the alarm OFF. The alarm indicator will disappear.

SNOOZE


1. Press the SNOOZE button when the alarm sounds will stop the alarm and the alarm will sound again in 5 minutes. The "Zz" icon will appear on the display.
2. The snooze function can be repeated many times.

SELECT DISPLAY COLOR

1. Press the RED, GREEN and BLUE buttons according to the chart to select desired color.

Display Color	Red Button	Green Button	Blue Button
RED			
GREEN			
BLUE			
PURPLE			
YELLOW			
AQUA			
VIOLET			

BATTERY BACKUP

- Insert one “9V” battery into the battery compartment on the back of the clock. The battery will keep the time settings until the power is restored.
- The LED display will not light-up and the alarm will not sound.
- Replace with new battery when the battery symbol appears on the display. 

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution: To prevent electrical shock do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

POWER REQUIREMENTS

Power: 120V power cord

Requires one 9V battery for back-up not included

WARRANTY AND SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity’s option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send: Your product. A letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St S.
La Crosse, WI 54601
www.lacrossetechnology.com/support

⚠ WARNING: This product can expose you to chemicals including styrene, which is known in the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.