

306-645 FAQs

The links below will work in most PDF viewers and link to the topic area by clicking the link. We recommend Adobe Reader version 10 or greater available at: <http://get.adobe.com/reader>

CONTENTS

| | |
|--|---|
| 306-645 FAQs | 1 |
| Restart | 1 |
| Blank display | 1 |
| Missing Segements..... | 1 |
| No Backlight..... | 2 |
| Power Requirements | 2 |
| How do I switch from Fahrenheit to Celsius?..... | 2 |
| MIN/MAX Temperature and Humidity | 2 |
| Set Clock | 2 |
| Daylight Saving Time | 2 |
| Display Modes..... | 3 |
| Positioning..... | 3 |

Restart

- ✓ Please remove all power from the display for 2 hours.
- ✓ With the power removed, press any button 20 times to clear all electricity from the unit. Please do this even if the screen is blank.
- ✓ After 2 hours install fresh a fresh alkaline battery into the display as well as the rechargeable battery for the backlight.
- ✓ Wait at least 15 minutes before pressing buttons.

Blank display

- ✓ Check the plain alkaline battery polarity and voltage.
- ✓ The rechargeable battery does not power the display, only the backlight.

Missing Segments

- ✓ This is generally a power issue (under powered or over powered or surge) or improper restart. Restart with a fresh alkaline battery.
- ✓ Please contact us again and include a description of what portions of the display are not showing completely.
- ✓ Please note if it is certain numbers or letters such as the left side of 3's 5's and 8's on the time display.

No Backlight

- ✓ Place the solar panel in the full sun for 2 days.
- ✓ This solar panel will not charge the rechargeable battery under lamplight.
- ✓ The display will automatically turn on the backlight for night viewing.
- ✓ The backlight turns off at dawn (or when the battery has been depleted – indicated by the appearance of the low battery symbol).

Power Requirements

- ✓ 1 AA alkaline battery for the thermometer.
- ✓ 1-AA NiMH rechargeable battery for the backlight.

How do I switch from Fahrenheit to Celsius?

Mode 1: All temperatures are in Celsius, and the time mode is 24-hour time.

Mode 2: All temperatures are in Fahrenheit, and the time mode is 12-hour (AM/PM) time.

Press and release the +1 button while the temperature is showing to change between Mode 1 and Mode 2 or back.

MIN/MAX Temperature and Humidity

MAX/MIN TEMPERATURES

The Max temperature is updated each day at 8:00AM, and the Min temp is updated each day at 8:00PM.

TEMPERATURE DISPLAY

The middle display shows the current temperature and the lower display minimum and maximum temperature.

The silver pin on the bottom is the temperature probe. Please take care not to break this probe. It has no adjustments, and should not be moved or twisted.

Set Clock

1. Slide the switch to position B or C.
2. When the time appears in the display, press and hold the MODE button to enter the setting mode.
3. The Hour digits in the upper display start flashing. Press and release the +1 button to adjust the Hour. Press and release the MODE button again to confirm.
4. The Minute digits start flashing. Press and release the +1 button to adjust the Minutes. Press and release the **MODE** button to confirm.

Daylight Saving Time

- ✓ Press and hold the +/-1hr button on the back of the thermometer for 5 seconds to enable/disable DST mode.

- ✓ **Note:** When the display is in DST mode, the DST indicator (clock icon) will show.

Display Modes

- ✓ Switch Position A: Current Temperature
- ✓ Switch Position B: Current Temp and Time Alternately displayed
- ✓ Switch Position C: Current Temp, High/Low Temp and Time Alternately displayed

Positioning

- ✓ **Wall:** Garden Thermometer can be wall mounted using the two holes on the back of the display. Tilt the solar panel to receive the most sunlight.
- ✓ **Ground:** Enclosed are rods that screw into the bottom of the display in order to place the Garden Thermometer in the ground in an open area.