

Wireless Weather Station




Model: 308-1711BL
DC:013118

POWER UP

1. Insert 2-AA batteries into your sensor, and 2-AA batteries into your station.
2. Set time, date, etc.
3. Once the sensor is reading to your station, place sensor outside in a shaded location.

Watch sensor mounting video: http://bit.ly/TH_SensorMounting

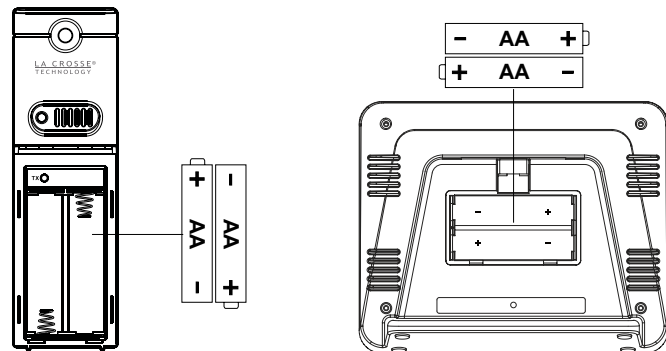

LOW BATTERY INDICATOR

- When battery appears in Outdoor Temperature section, replace batteries in your outdoor sensor.
- When battery appears in Indoor Temperature section, replace batteries in your station.

SETTINGS

- Hold the TIME/DATE button to enter the settings menu.
- Use the ARROW buttons to adjust and TIME/DATE to confirm.

1. Year
2. Month
3. Date
4. 12/24 Hour
5. Hour
6. Minutes
7. Fahrenheit/Celsius

Note: Weekday sets automatically when year, month and date are set.

TEMPERATURE ALERTS

Set Alerts:

- Hold the TEMP ALERTS button to enter set mode.
- Use the ARROW buttons to adjust and TEMP ALERTS to confirm.

Sounding Alerts:

- When alert is ringing, the corresponding alert icon will flash.
- The alert will ring for five seconds every minute, until the temperature is out of alert range.
- Press any button to stop alert. The alert icon will still show.

Arm/Disarm Alerts:

- Press and release TEMP ALERTS button to select alert.
- Press the UP ARROW button to **arm** temperature alerts.
- Press DOWN ARROW button to **disarm** temperature alerts.

OTHER BUTTON FUNCTIONS

Hold TIME/DATE: To enter settings menu. Use the ARROW buttons to adjust. Press TIME/DATE button to confirm.

Hold ALERTS: To enter alert set mode. Use the ARROW buttons to adjust. Press ALERTS to confirm.

Press ALERTS: To toggle between high and low alerts. Press the UP ARROW button to arm an alert. Press the DOWN ARROW button to disarm an alert.

Hold TIME ALARM: To set alarm time. Use the ARROW buttons to adjust. Press TIME ALARM button to confirm.

Press TIME ALARM: Once to view alarm time. Press again to activate or deactivate time alarm. Alarm bell will show when active.

Press TIME ALARM (when alarm sounds): To silence alarm for 10 minutes.

HEAT/DEW BUTTON: Hold to search for sensor. Press & release to view Heat Index & Dew Point readings.


Press DOWN ARROW (MIN): To view minimum temperature readings.

Press UP ARROW (MAX): To view maximum temperature readings.

Note: The MIN/MAX readings automatically reset daily at 12:00 midnight.

MOON PHASE

The Moon Phase feature is based on the lunar calendar, and therefore is controlled by the time and date set on your weather station.

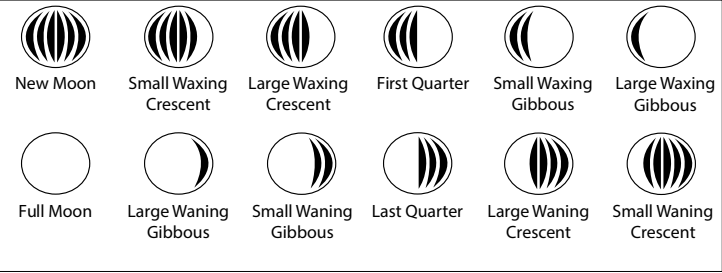

SPECIFICATIONS

Indoor Temperature Range: 32°F to 122°F (0°C to 50°C)
Indoor Humidity Range: 10%-99% RH

Outdoor Temperature Range: -40°F to 140°F (-40°C to 60°C)
Outdoor Humidity Range: 10%-99% RH

Power Requirements: Station-2 AA batteries (not included)
Sensor-2 AA batteries (not included)

Battery Life: Station-over 24 months
Sensor-over 24 months

Dimensions Station- 5.40" L x 1.68" W x 4.40" H
(13.72 cm L x 4.28 cm W x 11.18 cm H)
TX141TH-Bv2- 1.57" L x 0.79" W x 5.12" H
(4.0cm L x 2.0cm W x 13.0cm H)

SENSOR WEATHER SHIELD-Not Included

The Sensor Weather Shield is designed to protect your outdoor sensor from rain and snow. This shield will offer limited protection from the sun's heat. Purchase at: <http://bit.ly/925-1418>



JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



WE'RE HERE TO HELP!

FIND FULL MANUALS, FAQs, AND MORE UNDER THE **SUPPORT** TAB HERE: <http://bit.ly/308-1711BL>

NEED MORE HELP?

If you require additional support, call our friendly customer support representatives based out of our office in La Crosse, Wisconsin.

Phone: 1.608.782.1610

Our knowledgeable customer support team is available: Monday-Friday, 8am-6pm CST.

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit:
www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.