

LA CROSSE®
TECHNOLOGY

Wireless **Thermometer**



 
SET UP GUIDE

MODEL: 308-179ORv3

POWER UP


1. Insert 2-AA batteries into your Outdoor Sensor.
2. Insert 2-AA batteries Into your Thermometer.
3. Enter the Settings Menu to adjust your time.
4. Once the sensor is reading to your thermometer, place the sensor outside in a shaded location.

View our sensor mounting video here: bit.ly/th_sensor_mounting

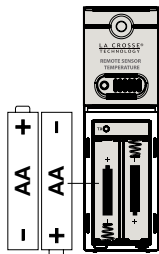

Outdoor Sensor
TX141-Bv4

 Thermometer
308-179ORv3

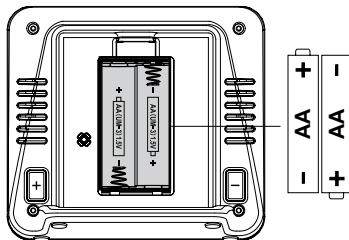

SETTINGS MENU

1. Hold the **SETTINGS** button to enter settings mode.
2. Press the **+** or **-** button to adjust the flashing values. Hold to adjust quickly.
3. Press the **SETTINGS** button to confirm adjustments and move to the next item or exit.

Settings Menu order:

- Beep ON/OFF
- 12/24 Hour Format
- Hour
- Minutes
- Year
- Month
- Date
- Month/Date, Date/Month
- Temperature Fahrenheit/Celsius

Weekday: The weekday will set automatically as the Year, Month, and Date are set.

 
TIME ALARM

Set Alarm Time

1. Hold the **ALARM/SNOOZE** button to enter alarm settings.
2. Press the **+** or **-** button to adjust the flashing values. Hold to adjust quickly.
3. Press the **ALARM/SNOOZE** button to confirm adjustments and move to the next item or exit.

Activate/Deactivate Time Alarm:

- The alarm is active when set.
- Press the **ALARM/SNOOZE** button to deactivate or activate the alarm. The alarm time will show for 2 seconds.
- Alarm Icon 🔔 and ALM ON will show briefly when active.
- ALM OFF will show when inactive.

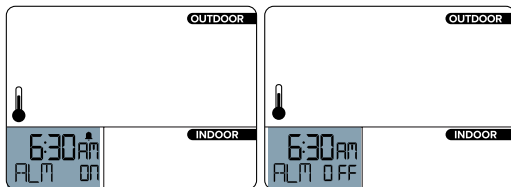

Snooze

- When alarm sounds, press the **ALARM/SNOOZE** button to silence alarm for 10 minutes.
- The Alarm Icon 🔔 will flash. SNZ will show and the remaining Snooze Time will count down.
- Press any button except ALARM to silence the alarm for 24 hours.

HI/LO TEMPERATURE RECORDS

Press and release the **SENSOR** button to toggle through your HI/LO temperature and humidity readings with time/date stamp.

- Outdoor Temperature HI
- Outdoor Temperature LO
- Indoor Temperature HI
- Indoor Temperature LO
- Indoor Humidity HI
- Indoor Humidity LO

Reset: While viewing individual values, hold the **MINUS (-)** button to reset that value to the unit's current reading.

OUTDOOR TEMPERATURE ALERTS

1. Hold the **ALERTS** button to enter the Alerts Menu.
2. Press the **+** or **-** button to activate an alert (OFF to ON), and the **ALERTS** button to confirm and move to the next setting.
3. When ON is selected, the alert value will flash, use the **+** or **-** button to adjust, and the **ALERTS** button again to set and continue.

Note: A corresponding HI or LO Alert Icon will appear when active.



HI Alert Icon



LO Alert Icon

TEMPERATURE TREND ARROWS

The arrows next to the temperature or humidity readings indicate if the reading is rising or falling. Arrows update every 15 minutes.




Temperature or Humidity has risen





Temperature or Humidity has fallen

SEARCH FOR OUTDOOR SENSOR

If you are seeing dashes for any sensor readings, please try the following steps:

1. Hold the **SENSOR** button to search for all sensors.
The Reception Indicator  will begin to animate.
2. If after 3 minutes the sensor still isn't connected, bring the sensor inside next to the display and remove power from the sensor and station.
3. Press any button on the station 20 times and leave the parts sit for a few moments with the power off.
4. Install a new set of alkaline batteries into the sensor, then power up your station again.
5. If your sensor data is still not appearing after these steps, please contact our support staff. For additional help visit: bit.ly/basic_restart

LOW BATTERY INDICATOR

- When the Battery Icon  appears in Outdoor Temperature section, replace batteries in your Outdoor Sensor.
- When the Battery Icon  appears in Indoor Temperature section, replace batteries in your Thermometer.

SPECIFICATIONS

308-179ORv3

 
Temperature Range: 32°F to 122°F (0°C to 50°C)

Humidity Range: 10% to 99% RH

Power Requirements: 2 "AA" LR6 Batteries (not included)

Battery Life: 12+ months with reputable batteries

Dimensions: 4.27 in L x 1.48 in W x 3.88 in H (10.80cm L x 3.80cm W x 9.90cm H)

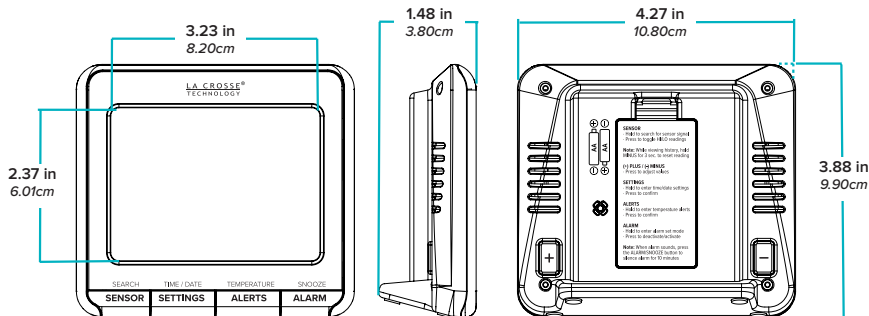

TX141-Bv4

Temperature Range: -40°F to 140°F (-40°C to 60°C)

Transmission Range: over 330 feet (100 meters)

 
in open air RF 433MHz

Power Requirements: 2 "AA" LR6 Batteries (not included)

Battery Life: 24+ months with reputable batteries

Dimensions: 1.58 in L x 0.83 in W x 5.08 in H

(3.99 cm L x 2.1 cm W x 12.99 cm H)

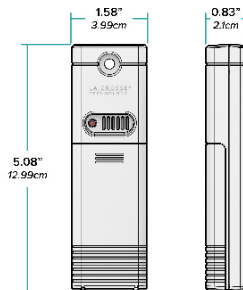

STAY IN TOUCH!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, & X (Twitter).



WE'RE HERE TO HELP

If you require additional support, call our friendly customer support team based out of La Crosse, Wisconsin.

Self Help: bit.ly/308-179orv3_support

Phone: 1.608.782.1610

Online: bit.ly/contact_techsupport

Our knowledgeable customer support team is available: Monday-Friday, 8am-6pm CST.

Scan for
Support



CARE AND MAINTENANCE

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.



WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

WARRANTY

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd., 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

Patents: www.lacrossetechnology.com/patents

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1)** This device may not cause harmful interference, and **(2)** This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

DOUBLE YOUR WARRANTY



Scan Here

Scan the QR Code or visit:

bit.ly/308-179orv3_register

to register your product and double the
standard 1-year warranty for free by opting
to receive occasional product emails.