


Indoor Temperature and Humidity Station



Model: 308-1911v2
DC:011618

POWER UP

1. Insert 2 AAA batteries into the back of the station.
2. Set language, time, calendar, and temperature units.

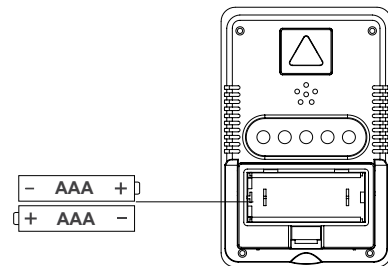

SETTINGS

- Hold the SETTINGS button to enter settings mode.
- Press the + or - button to adjust the values.
- Press the SETTINGS button to confirm adjustments and move to the next item.
- Press the ALERTS button at any time to exit.

Setting menu order:

1. Language (English | Español | Français)
2. Beep ON/OFF
3. Hour
4. Minutes
5. Year
6. Month
7. Date
8. Temp Fahrenheit / Celsius

TIME ALARM

1. Hold the ALARM button to enter alarm time set mode. The hour will flash. Press the + or - button to adjust alarm hour.
2. Press the ALARM button to confirm and move to minutes. Press the + or - button to adjust the alarm minutes.
3. Press the ALARM button to confirm and exit.

Note: When you finish alarm settings, the alarm is active. The bell icon will show.

Activate/Deactivate Alarm:

- From normal time display, press and release the ALARM button to deactivate or to activate the alarm. The alarm time will show for 2 seconds.
- When active, the Bell Icon will show.
- When the icon is not showing, the alarm is not active and will not go off.

CUSTOM WEEKDAY | DATE DISPLAY

- Press and release the SETTINGS button to display either the full Weekday, or three letter Weekday, Month, & Date.
- The station will remain on the date display chosen.

SET HI/LO HUMIDITY ALERT

Set Alerts:

1. Hold the ALERTS button 2 seconds to enter alert setting.
2. HI Humidity Alert OFF will show. Press the + button to **arm** the alert in order to set it.
Note: If you do not wish to arm the alert, press the ALERTS button to move to the LO Humidity alert.
3. When HI ALERT ON is showing, press the + or – buttons to adjust alert value.
4. Press ALERTS to move to the LO Humidity Alert. Press ALERTS button again to exit if you do not want to set a LO Humidity Alert.

Arm/Disarm Humidity Alerts:

1. Hold the ALERTS button 2 seconds to view HI Humidity
2. Press the + button to arm an alert.
3. Press the – button to disarm an alert.
4. Press ALERTS button to move to the LO Humidity alert.
5. Press the + button to arm an alert.
6. Press the – button to disarm an alert.

HI/LO Temperature/Humidity Records

HI/LO temperature/humidity records are since power up. They cannot be reset.

1. From normal display, press the PLUS button to view the HI temperature/humidity records for 5 seconds.
2. From normal display, press the MINUS button to view the LO temperature/humidity records for 5 seconds.

TREND ARROWS

- The Arrows indicate changes in temperature and humidity over the past hour. They update every 15 minutes and compare data from exactly one hour prior.
- Temperature: arrow changes every 1 degree Fahrenheit.
Humidity: arrow changes every 2% RH

SPECIFICATIONS

Power: 2-AAA, IEC, LR3 batteries (not included)

Battery Life: Battery life is over 12 months

Temperature Range: 32°F to 122°F (0°C to 50°C)

Humidity Range: 10% RH to 99%

Dimensions: 4.34" H x 2.84" W x 0.85" D
(11.03 H x 7.23 W x 2.15 D cm)

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



WE'RE HERE TO HELP!

FIND FULL MANUALS, FAQs, AND MORE UNDER THE **SUPPORT** TAB HERE: <http://bit.ly/308-1911v2>

NEED MORE HELP?

If you require additional support, call our friendly customer support representatives based out of our office in La Crosse, Wisconsin.

Phone: 1.608.782.1610

Our knowledgeable customer support team is available:
Monday-Friday, 8am-6pm CST.

WARRANTY INFO

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit:

www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.