

## Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty give you specific legal rights and you may also have other rights which vary from State to State.

### If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :


Equity by La Crosse  
Warranty Department  
2830 26th St. S.  
La Crosse, WI 54601

Made in China

Printed in China

Equity®

## 0.9" 12 Volt RED LED ALARM CLOCK Model 30902

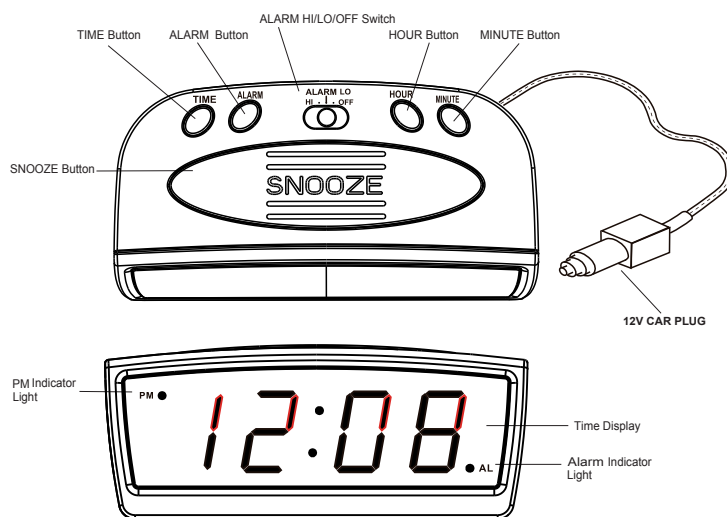

### Features

- 0.9" LED display
- Hi/Lo Beep Alarm
- Repeat 9 Minute snooze
- Requires one 9V battery for back-up
- DC12V car plug

Please read this before operating your clock

### Power Supply

- \* Begin by plugging in the 12V car plug into a standard 12V car outlet. The display will flash indicating the time is ready to be set.

### Setting The Time

- \* Hold down the **TIME** button and then press **HOUR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- \* Hold down the **TIME** button and then press **MINUTE** button to set the correct minute.
- \* Release the **TIME** button when the correct time is shown on display.

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

### Setting The Alarm

- \* Hold down the **ALARM** button and then press the **HOUR** button to set the correct hour. The PM indicator light will light when the hour is advanced into the PM time.
- \* Hold down the **ALARM** button and then press the **MINUTE** button to set the correct minute.
- \* Release the **ALARM** button when the correct alarm time is shown on the display.

### Using The Alarm

- \* Slide the **ALARM HI/LO/OFF** switch to the **HI** position for the loudest alarm. up to 90 dbs. The alarm indicator light will appear on the lower right side of the display.
- \* Slide the **ALARM HI/LO/OFF** switch to the **LO** position for normal alarm. The alarm indicator light will appear on the lower right side of the display.
- \* Slide the **ALARM HI/LO/OFF** switch to the **OFF** position to deactivate the alarm.

### Using The Snooze

- \* Press the **SNOOZE** button when the alarm sounds will stop the alarm and the alarm will sound again in nine minutes.
- \* The snooze function can be repeated many times.

### Battery Backup

- \* Insert one "9V" battery into the battery compartment at the back of the clock. The battery will keep the alarm and time settings until the power is restored. The LED display will not light-up but the alarm will sound at the preset alarm time. If there is no battery installed but the power is interrupted, once power is restored, the display will reset at 12:00 and the time and alarm need to be set again.

### Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) when inserting battery.

### FCC INFORMATION:

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and the receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Safety Instructions

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
4. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
5. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. Grounding or Polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
8. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
9. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. The power -supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
11. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)