

Equity

DIGITAL LCD ALARM CLOCK



MODEL: 31003
DC: 053024

POWER UP

Insert 1-AA battery according to polarity.

TIME SETTING

1. Hold the T-SET button. While holding the T-SET button, press HOUR button to set your hour. **Note:** The PM Indicator will appear when you advance to PM time. Press MIN button to set your minutes.
2. When the correct time is shown on the display, release the T-SET button.

ALARM TIME SETTING & OPERATION

1. Hold the AL-SET button. While holding the ALARM button, press HOUR button to set your hour. **Note:** The PM Indicator will appear when you advance to PM time. Press MIN button to set your minutes.
2. When the correct time is shown on the display, release the AL-SET button.

ALARM ON/OFF

1. Slide the ALARM switch to ON to activate the alarm. Slide the ALARM switch to OFF to deactivate the alarm.
2. When the alarm time is reached, the alarm will sound for 1 minute if not turned Off.

SNOOZE


When alarm sounds, press the SNOOZE/LIGHT button to silence alarm for 4 minutes. Snooze function can be repeated many times if desired.

BACKLIGHT

Press the SNOOZE/LIGHT button to illuminate the time briefly.

STAY IN TOUCH

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).

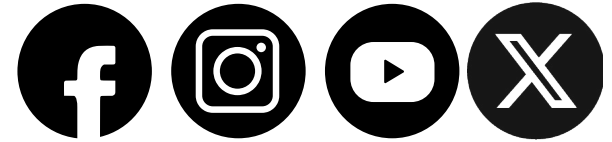

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.

WARRANTY & SUPPORT

This Equity product is warranted for 1 year for defects in material and workmanship. In accordance with the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department
2830 26th St S.

La Crosse, WI 54601

For Full Warranty Details, Visit:

www.lacrossetechnology.com/support

MAINTENANCE AND STORAGE

Store the clock without battery and use the original package when not in use. Clean with a soft cloth or paper towel. Do not use any corrosive cleaners on the clock. Keep your clock clean and dry to avoid any problems.

Remove battery from the clock if you do not intend to use it for an extended period of time. Removed used batteries promptly.

For best performance, it is recommended to replace the battery once per year to maintain running accuracy. Ensure the battery used is new and the correct size.



Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.