


# Equity®

## LCD TRAVEL ALARM CLOCK

### Model 31300

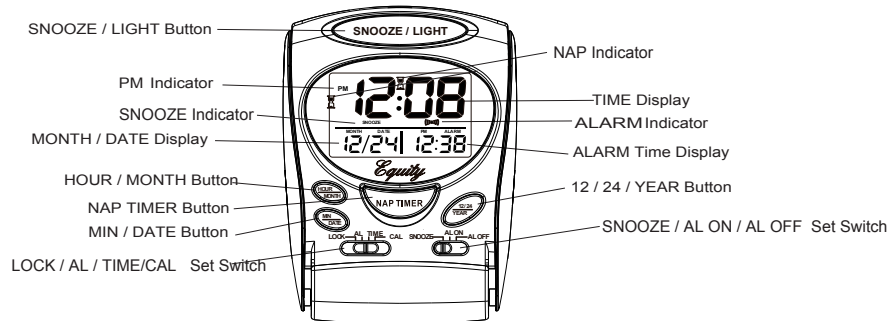

#### Battery Installation

Please read this before operating your clock

- \* The battery compartment is located on the bottom of the clock. Remove the battery cover and insert two "AAA" batteries according to the polarity indication inside the battery compartment. Replace the battery cover. (Batteries not included)

#### Setting The Time

- \* Slide the **LOCK / AL / TIME / CAL** set switch to **TIME** position.
- \* Press **HOURL / MONTH** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- \* Press **MIN / DATE** button to set the correct minute.
- \* Slide the **LOCK / AL / TIME / CAL** set switch to **LOCK** after set your time.

#### Setting The Alarm Time

- \* Slide the **LOCK / AL / TIME / CAL** set switch to **AL** position.
- \* Press **HOURL / MONTH** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- \* Press **MIN / DATE** button to set the correct minute.
- \* Slide the **LOCK / AL / TIME / CAL** set switch to **LOCK** after set your alarm time.

#### Setting The Calendar

- \* Slide the **LOCK / AL / TIME / CAL** set switch to **CAL** position. The Year / Month Date digits will being to flash.
- \* Press **HOURL / MONTH** button to set the correct month.
- \* Press **MIN / DATE** button to set the correct date.
- \* Press **12/24 / YEAR** button to set the correct year.
- \* Slide the **LOCK / AL / TIME / CAL** set switch to **LOCK** after set your calendar.

#### Using The Alarm

- \* Slide the **SNOOZE / AL ON / AL OFF** set switch to **AL ON** position. The alarm indicator (🔔) will light up.
- \* Slide the **SNOOZE / AL ON / AL OFF** set switch to the **AL OFF** position to turn the alarm OFF. The alarm indicator (🔔) will disappear.

#### Using The Snooze

- \* Slide the **SNOOZE / AL ON / AL OFF** set switch to **SNOOZE** position. The snooze indicator **SNOOZE** will light up.
- \* Press the **SNOOZE / LIGHT** button when the alarm sounds will stop the alarm and the alarm will sound again in 5 minutes.
- \* Slide the **SNOOZE / AL ON / AL OFF** set switch to the **AL OFF** position to turn the alarm OFF. The snooze indicator **SNOOZE** will disappear.

#### 12/24 Hour Formats

- \* Slide the **LOCK / TIME / AL** set switch to **LOCK** position when changing the format of clock.
- \* Pressing the **12/24** button to change your desired hour display format, a **AM** or **PM** indicator will appear on display in 12 hour mode.

#### Using The NAP TIMER

- \* Press the **NAP TIMER** button to set the nap timer from 15 minutes to 4 hour by 15 minutes increment. The nap indicator (🕒) will light up to confirm nap timer is activated after 3 seconds.
- \* During nap timer operation, press **NAP TIMER** or **SNOOZE / LIGHT** button to stop the nap timer. The nap indicator (🕒) will disappear.
- \* To activate nap timer again, press **NAP TIMER** button and will start from last setting.

#### Using The Backlight

- \* Press the **SNOOZE / LIGHT** button to activate the display backlight. The backlight will stay on for 5 seconds each time it is pressed.

#### Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) when inserting battery.

#### FCC INFORMATION:

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

#### If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :  
Equity by La Crosse  
Warranty Department  
2830 26th St. S.  
La Crosse, WI 54601

Made in China

Printed in China