




MODEL 40001

OPERATING MANUAL

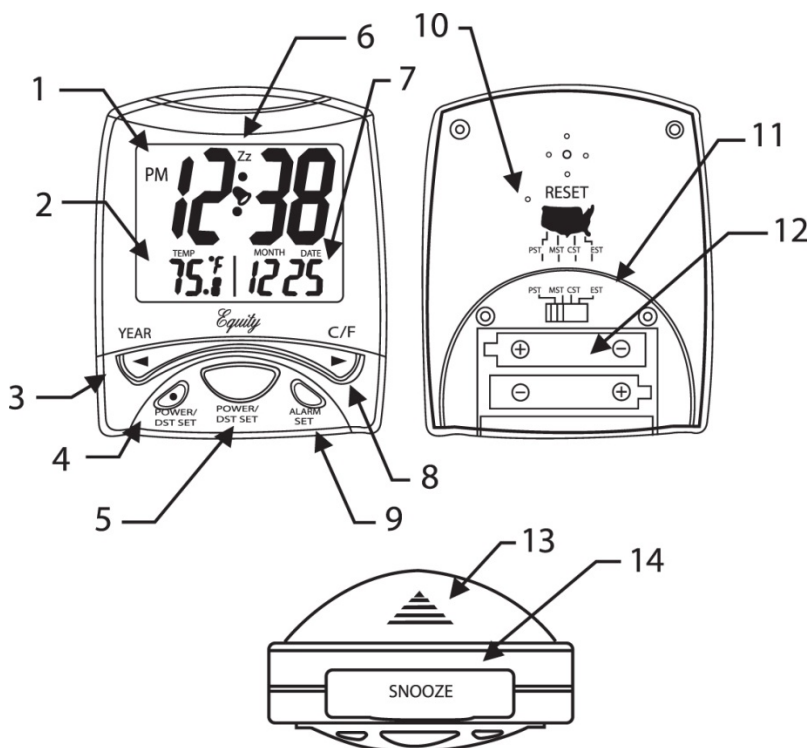

- | | |
|--------------------------------|-----------------------------|
| 1. PM indicator | 8. FORWARD button |
| 2. TEMPERATURE IN C/F | 9. ALARM SET button |
| 3. BACKWARD button | 10. RESET hole |
| 4. POWER/DST SET button | 11. TIME ZONE switch |
| 5. ALARM ON/OFF button | 12. 2xAAA Batteries |
| 6. ALARM and SNOOZE indicator | 13. Battery door |
| 7. MONTH and DATE | 14. SNOOZE button |

To operate the clock: To power on the clock, hold the POWER/DST SET button for 2 seconds, the correct time, month, and date (e.g. "12 31" means Dec 31) will be displayed. The clock will automatically indicate the AM/PM time.

Select the time zone: Slide the **TIME ZONE** switch (inside battery compartment) to display the time in the desired time zone. The default time zone is Eastern Standard Time (EST).

Select Daylight-saving Time (DST): The clock is set at the DST Auto (don) position as the default. This setting is correct unless you are in Arizona or parts of Indiana. Press the DST SET button once will show the current setting. To change the DST status, press the DST SET button again, this will toggle between "don" (DST is ON) or "doF" (DST is OFF). In a few seconds the time will be displayed.

Don DST scheme 2007 adjustment automatically
DST Starts: Second Sunday in March
DST Ends: First Sunday in November
Dof Automatic DST function Disabled

Display the Year: To display the year, press “◀” button

Setting the Alarm: To set the alarm, press the **ALARM SET** button once, press either “◀” or “▶” button to the correct hour (Be sure that the AM/PM is correct). Press the Alarm button once again and press either “◀” or “▶” button to the desired minute. In a few seconds the time will be displayed.

Operating the Alarm and Snooze: Press the **ALARM ON/OFF** button to display the bell icon. The alarm will sound at the alarm set. When the alarm sounds, press the snooze to get an extra 9 minutes of sleep (flashing “Zz”). The Snooze may be repeated many times. Press the “Alarm Set” button to stop the alarm sound and repeat at next day. To shut the alarm off, press the **ALARM ON/OFF** button to disable the alarm.

Displaying the Alarm Time: To show the alarm setting time, press “SNOOZE” button once. In a few seconds the time will be displayed.

Displaying the Temperature by °C/°F: Change the temperature readout to C or F by pressing the “▶” forward button. The reading range of temperature is -10°C to 60°C (14 °F to 140 °F), the resolution is 0.1 °C/°F and the accuracy is +/- 0.0 °C (+/- 2 °F).

Auto-Time Incorrect: If for some reason the Auto-Set time is incorrect or lost, press and hold the **ALARM SET** button for -5 seconds, and the year will begin to blink, then press the “◀” or “▶” button to set the year. Press the **ALARM SET** button again to set the date, again to set the hour (be sure the AM/PM is correct), again to set the minute, and one more to secure all in the memory.

No time Displayed when the power is turned on: If the display is blank or abnormal when the power is turned on, remove the 2xAAA batteries or press reset. In a few seconds, the display will be ON and show 12:00. Now repeat the procedure to reset the real time memory above and the time will be automatically stored in the clock.

2xAAA Batteries replacement: The real time stays in memory if the clock is without batteries for less than 30 seconds. However, if you do lose the Auto-Set Time during battery replacement, please repeat the procedure to reset the real time memory above.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

If your product is not working properly, please send:

- The Product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity Warranty Dept.

2817 Losey Blvd. S

La Crosse, WI 54601

For Customer Support, visit:

www.equitybylacrosse.com/support

Equity® by La Crosse™

2 Year Limited Warranty

La Crosse, WI 54601

www.equitybylacrosse.com