WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd

2830 S. 26th St.

La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

- · Do not mix old and new batteries.
- . Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- · Always purchase the correct size and grade of battery most suitable for intended use.
- · Clean the battery contacts and also those of the device prior to battery installation.
- · Ensure the batteries have with correct polarity (+ / -).
- · Remove batteries from equipment that will not to be used for an extended period.
- · Promptly remove expired batteries.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Increase separation between equipment & receiver.
- · Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 \wedge

WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov



18" INDOOR | OUTDOOR ATOMIC WALL CLOCK



Model: 404-1246

DC: 083020

For information about WWVB, Atomic Time Signal visit: bit.ly/AtomicTime

Page | 4 Page | 1

POWER UP

- 1. Remove the round Battery Cover to access the Movement.
- Insert 1 AA battery into the Center Battery Compartment.
 Optional: Insert batteries into the Extra Battery Compartments.
 IMPORTANT: Be sure all batteries are of the same voltage level.
- 3. The hands will move to either the 4, 8, or 12 o'clock position and stay there while it searches for the WWVB Atomic Time Signal.

 Allow up to 5 nights for the clock to receive this transmission.
- 4. For the best reception, place the clock on an exterior wall near a window with the front or back of it facing Fort Collins, CO.
- Once the Atomic Time Signal is received, the clock will set to Pacific Time. Firmly press and hold your correct Time Zone Button until the hands begin to spin. The time will then set correctly.
- 6. If you live in an area that does not follow Daylight Saving Time, while the hands are spinning to the correct time, press the Daylight Saving Time Button once to turn the DST setting to OFF.


Note: In certain areas, this clock may not be able to receive the WWVB reception due to signal strength or interference. In this case, your clock can be set manually until the Atomic Time Signal can be received.

LET'S BE SOCIAL!

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!





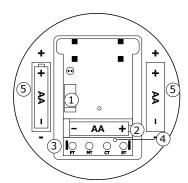

- 1 Manual Set Tab
- (2) Center Battery
- (3) Time Zone Buttons
- (4) Daylight Saving Time Button (Default is DST ON)
- (5) Optional: Extra Battery Compartments

MANUALLY SET TIME

- 1. Remove all batteries from the clock.
- 2. Press the Manual Set Tab at least 20 times and wait 15 minutes.
- 3. Insert at least one battery into the Center Battery Compartment.
- 4. Allow the hands to spin around and stop in either the 4, 8, or 12 o'clock position.
- 5. Hold the Manual Set Tab until your correct time is achieved.

Note: The Atomic Time Signal will override your manual setting if the transmission is received in the future.

SPECIFICATIONS

Battery Requirements: 1 AA (IEC LR6) required in movement Optional: 2 AA (IEC LR6) for added battery life All batteries sold separately.

Battery Life: 1 Battery - 12 months, 3 Batteries - 36 months

Page I 3