

## Warranty and Support

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of 2 years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company  
Warranty Department  
2830 South 26th Street.  
La Crosse, WI 54601  
[www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

LA CROSSE  
CLOCK CO.

## 14" Plastic Wall Clock




Model: 404-3036BW  
DC: 111617

## Power up

1. Insert 1 fresh AA, battery into your clock according to the polarity marking.
2. Rotate the time set wheel to set your time.

**Note:** The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

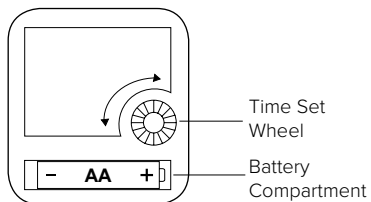

## Position

Mount your clock on a wall using the hanging hole on the back of your clock.

## Let's Be Social!

Follow us on our social media outlets for the latest promotions, product support, and awesome giveaways.



## Specifications

**Battery Requirements:** 1 AA (IEC LR6) required in movement (Alkaline recommended)

**Battery life:** 1 battery; over 12 months

## Care and Maintenance

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.