

Warranty and Support

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of 2 years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company
Warranty Department
2830 South 26th Street.
La Crosse, WI 54601
www.lacrossetechnology.com/support

⚠ WARNING: This product can expose you to chemicals including styrene, which is known in the State of California to cause cancer. For more information go to: <https://www.p65warnings.ca.gov/>

Made in China - Printed in China


19.7- Inch Indoor/Outdoor Wall Clock



Model: 404-4450
DC: 080718

Power up

1. Simply pull the battery cover to remove it.
2. Insert 1 fresh AA battery into your clock according to the polarity markings.
2. Turn the Time Set Wheel to set your time.

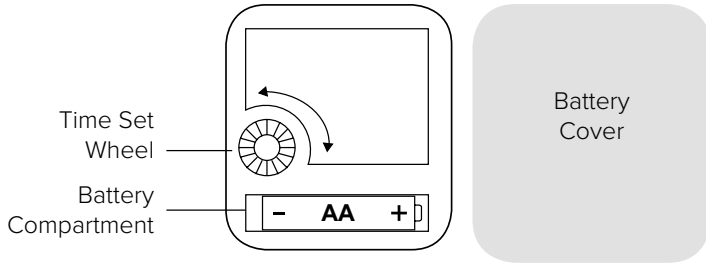

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

Thermometer and Hygrometer

- Your thermometer and hygrometer have been pre-calibrated and are not adjustable.

Position

- Mount your clock on a wall using the hanging hole on the back of your clock.

Specifications

- **Battery Requirements:** 1 AA (IEC LR6) required in the movement (Alkaline recommended)
- **Battery life:** 12 months
- **Temperature:** -10°F to 105°F (-23.33°C to 40.55°C)
- **Humidity:** 0-100% RH

Care and Maintenance

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.