

WARRANTY & SUPPORT

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company, Warranty Department, 2830 South 26th Street.
La Crosse, WI 54601

For Online support visit: www.lacrossetechnology.com/support

Patents: www.lacrossetechnology.com/pages/patents

CARE & MAINTENANCE

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

⚠ WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

Made in China - Printed in China

LA CROSSE
CLOCK CO.


26.2" INDOOR | OUTDOOR
WALL CLOCK
WITH TEMPERATURE AND HUMIDITY



Model: 433-3267TH
DC: 111323

REMOVE COVER FROM MOVEMENT

1. Open: Pull up on the square cover to access the battery compartment.
2. Close: Replace the cover over the movement and press down.

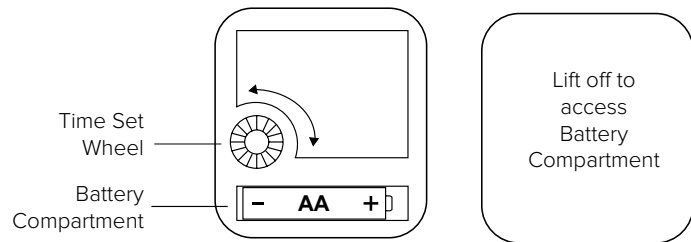

POWER UP

1. Insert 1 fresh AA alkaline battery, according to polarity, into the Battery Compartment.
2. Rotate the Time Set Wheel to set the time.
3. Mount on a wall and enjoy!

Learn more from our video: bit.ly/wallclock_setup

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

MOUNTING

1. Be sure the Cover is in the closed position.
2. Use the top Hanger Hole to mount the clock.

THERMOMETER/HYGROMETER

- Your thermometer and hygrometer have been pre-calibrated and should not need adjustment.
- Before manually adjusting either sensor, allow the clock to sit for at least 2 hours in the same location.
- To manually adjust either sensor, gently turn the sensor adjustment on the back of the clock until desired setting is reached.

STAY IN TOUCH!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).



SPECIFICATIONS

Battery Requirements: 1 AA (IEC, LR6, 1.5V) required in the Movement (Alkaline recommended)

Battery Life: 12+ months

Temperature Range: -20°F to 120°F

Humidity Range: 10%RH to 90%RH

Dimensions: 26.2 in x 2.56 in (66.5cm x 6.5cm)

Movement: Step

Lens: Glass