

WARRANTY & SUPPORT

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company
Warranty Department
2830 South 26th Street.
La Crosse, WI 54601

For Online support visit:
www.lacrossetechnology.com/support

⚠ WARNING: This product can expose you to chemicals including styrene, which is known in the State of California to cause cancer. For more information go to: <https://www.p65warnings.ca.gov/>

Made in China - Printed in China

LA CROSSE
CLOCK CO.


14-Inch Weaver Indoor/Outdoor Wall Clock



Model: 433-3833
DC: 082420

REMOVE COVER FROM MOVEMENT

1. Open: Pull up on the square cover to access the battery compartment.
2. Close: Replace the cover over the movement and press down.

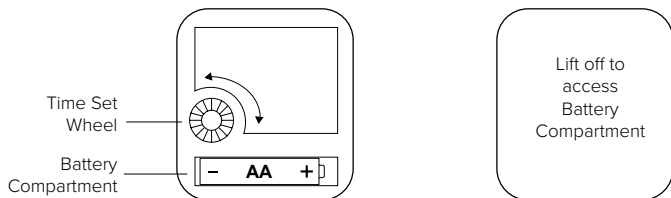

POWER UP

1. Insert 1 fresh AA alkaline battery, according to polarity, into the snug Battery Compartment.
2. Rotate the Time Set Wheel to set the time.
3. Mount on a wall and enjoy!

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

Learn more from our video: bit.ly/wallclock_setup

THERMOMETER

- The Thermometer is self-adjusting and does not need a battery to operate.
- Allow 24 hours for proper automatic adjustment.

MOUNTING

1. Be sure the Cover is in the closed position.
2. Use the top Hanger Hole to mount the clock.

SPECIFICATIONS

Battery Requirements: 1 AA (IEC, LR6, 1.5V) required in the Battery Compartment (Alkaline recommended)

Battery Life: 12 months

Temperature Range: - 60°F to 120°F

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.
- The specifications for this wall clock may change without prior notice.
- Improper use or unauthorized opening of movement or clock housing will void any warranty.