

513-148 / 513-55657 FAQs

We are weather enthusiasts like you and know proper running equipment is important. These FAQs provide valuable information on setup, positioning, and troubleshooting your clock. We recommend Adobe Reader version 10 or greater available at: <http://get.adobe.com/reader>

CONTENTS

513-148 / 513-55657 FAQs.....	1
Contents	1
General Information.....	1
Batteries: What do I need to know about batteries?	1
What do the battery icons mean?	2
What are the power requirements?	2
Button Functions.....	2
How do I setup my clock?.....	2
Does my clock have Atomic Time?.....	2
How do I manually set the time?	3
Does this clock have 12 hour and 24 hour time options?	3
How do I Switch from Fahrenheit to Celsius?	4
How do I factory reset my clock?.....	4
How do I view My Time, Alarm or Temp/Humidity?.....	4
What is the smiling/frowning face?.....	4
How do I set the time alarm?	4
Where do I place my clock?.....	5

GENERAL INFORMATION

BATTERIES: WHAT DO I NEED TO KNOW ABOUT BATTERIES?

- Good fresh batteries are important for best performance in your thermometers and as backup in your clock.
- Batteries with an expiration date of 2029, were manufactured in 2019.
- We recommend batteries with an expiration date no more than 6 years in advance of the current year for best performance.
- A minimum voltage of 1.48 v per battery is required for best performance.
- Lithium batteries may be used in outdoor thermometers. Alkaline batteries for the clock.

WHAT DO THE BATTERY ICONS MEAN?

When Low Battery Icon shows by the time, replace batteries in the clock.



WHAT ARE THE POWER REQUIREMENTS?

513-148 / 513-55657 2-AAA batteries

Battery life up to 12 months.

BUTTON FUNCTIONS

There are two buttons.  **Set/Alarm**  **Plus**

Button:

Normal Time Display-

- Press to select Time or Alarm or Indoor Temperature/Humidity Display
- Hold to enter Settings Menu (Time or Alarm Time).

Settings Mode:

- Press and release to confirm setting and move to next item or exit.

Button:

Normal Time Display-

- Press to view HI/LO Temperature/Humidity Records midnight to 11:59pm

Settings Mode-

- Press to increase the values by one.
- Hold to quickly adjust values.





HOW DO I SETUP MY CLOCK?

1. Insert 1-AA batteries into your clock.
2. Adjust time and date settings.

DOES MY CLOCK HAVE ATOMIC TIME?

No. The time needs to be set manually on your clock.












HOW DO I MANUALLY SET THE TIME?

1. Press and release the  button to view Time.
2. Hold the  button 3 seconds to enter Settings Menu.
3. Press the  button to adjust the flashing values. Hold to adjust quickly.
4. Press the  button to confirm adjustments and move to the next item or exit.

Settings order:

1. 12/24
2. Hour
3. Minutes
4. Fahrenheit / Celsius
5. Smiley Face Icon ON/OFF

Settings:

1. Hold  button. 12HR will flash. Press the  button to choose 24Hr time.
2. Press  to confirm and move to the hour. The **HOUR** will flash. Press the  button to choose the hour.
3. Press  to confirm and move to the minutes. The **MINUTES** will flash. Press the  button to choose the minutes.
4. Press  to confirm and move to the temperature unit. **°F** will flash. Press the  button if you prefer °C (Celsius).
5. Press  to confirm and move to Smiley Face Icon feature. **The Smiley Face Icon** will show. Press the  button if to change from ON to OFF, when OFF the Smiley face would not appear and will be hidden on all modes.
6. Press  to confirm and exit.

Note: If no buttons are pressed in a 10 second period, set mode will time out and return to live display mode, reflecting whatever adjustments were made by user before timed out

DOES THIS CLOCK HAVE 12 HOUR AND 24 HOUR TIME OPTIONS?

Yes, you can select 12 hour or 24 hour time format in the [program menu](#) of your clock.

HOW DO I SWITCH FROM FAHRENHEIT TO CELSIUS?

You can select Fahrenheit or Celsius in the program menu.


HOW DO I FACTORY RESET MY CLOCK?

- Basically, this is a great way to return your clock to “out of the box” condition.
- All history records will be removed, so write down anything you want to keep.

To factory reset your clock:

1. Remove power from clock for 15 minutes. With power removed press any button 20 times.
2. Insert battery into the clock.

HOW DO I VIEW MY TIME, ALARM OR TEMP/HUMIDITY?

Press and release the  button until the Time, Alarm Time or Temp/Humidity shows. Your clock will stay on the selection.

WHAT IS THE SMILING/FROWNING FACE?


The comfort Indicator is based off the Indoor Humidity reading. This feature can be hidden in the Settings Menu.



1% to 35%



36% to 55%

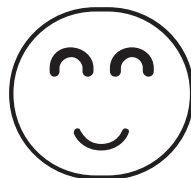







56% to 75%




76% to 99%


HOW DO I SET THE TIME ALARM?

1. Press and release the  button until Alarm Time shows. There will be an “A” in the lower right corner.
2. Hold the  button 2 seconds to enter Alarm Settings Menu. The Alarm Hour will flash. Press the  button to adjust the flashing values. Hold to adjust quickly.
3. Press the  button to confirm adjustments and move to the Alarm Minutes. Press the  button to adjust the flashing values. Hold to adjust quickly.
4. Press the  button to confirm adjustments and exit. Alarm will be active when set.

Note: When the alarm sounds, it continues for 2 minutes and then shuts off completely. Press any button to stop the alarm for 24 hours.

Activate/Deactivate Alarm:

Press the  button until Alarm Time shows. There will be an “A” in the lower right corner.

Press the  button to activate or deactivate alarm, The Alarm Icon  will show when active.

WHERE DO I PLACE MY CLOCK?

Wall Mounting: Use the center hanging hole on the back.

Refrigerator: Use the two magnets on the back to attach to your refrigerator or metal shelf.

Counter/Desk: Place on any flat surface.