
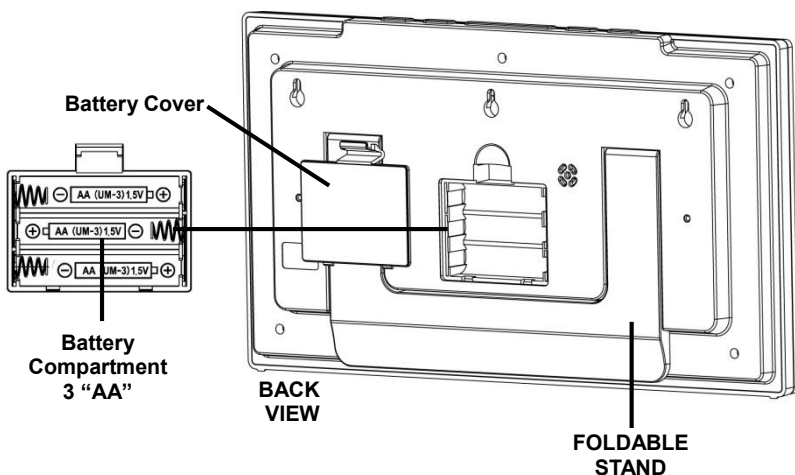


MULTIFUNCTIONAL ATOMIC CLOCK
STOPWATCH | TIMER | EVENT COUNTDOWN

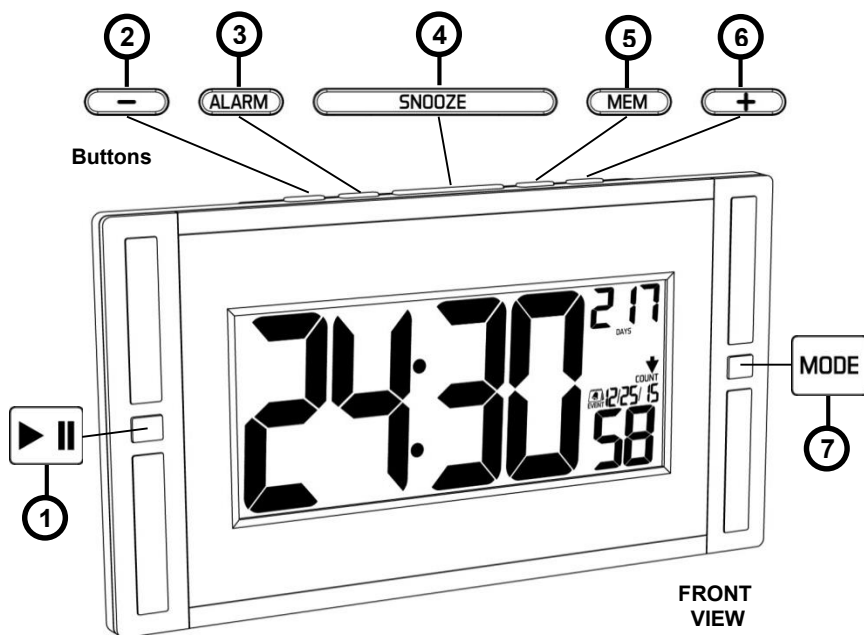

GET STARTED

Step 1: Insert 3 *new* AA Alkaline batteries (not included) into the clock. Observe the correct polarity.

Restart: If the time (12:00) is not displayed after 30 seconds, first, check the battery polarity. Second, remove batteries from the clock and press any button 20 times. After 15 minutes, return to **Step 1** above.

SET TIME

1. Hold button 7 (**MODE**) to enter time set mode.
2. Press button 2 or 6 (**DOWN or UP**) to adjust values.
3. Press button 7 (**MODE**) to confirm adjustments and move to the next item.

TIME SET ORDER:

1. WWVB time signal (On/Off)
2. Time Zone - 7 time zones
3. DST (Daylight Saving Time On/Off)
4. 12/24 hour time format
5. Hour
6. Minutes
7. Seconds
8. Month
9. Date
10. Year

TIME ZONE	
AST	Atlantic
EST	Eastern
CST	Central
MST	Mountain
PST	Pacific
AKT	Alaska
HAT	Hawaiian

Note: When you select WWVB **OFF**, Time Zone and DST disappear from the time setting order.

Press button 7 (**MODE**) to exit, or wait 30 seconds without pressing buttons to return to the normal time display.

TIME ALARM ("AL" will show in place of seconds)

1. Hold button 3 (**ALARM**) to enter alarm time set mode.
2. Press button 2 or 6 (**DOWN or UP**) to adjust ALARM TIME.
3. Press button 3 (**ALARM**) to confirm adjustments and move to the next item.

ALARM TIME SETTING ORDER: Hours, Minutes

Activate/Deactivate Time Alarm

- Press button 3 (**ALARM**) once to view alarm time.
- Press button 3 (**ALARM**) again to activate the alarm. Once activated the bell icon appears.
- Press button 3 (**ALARM**) again to deactivate the alarm. The bell icon will disappear.



Alarm
Bell Icon

Snooze (silences alarm temporarily)

- When alarm sounds, press button 4 (**SNOOZE**) to silence the alarm for 10 minutes. The snooze icon **Zz** and the alarm icon will flash.
- In snooze mode, press any button to stop alarm for one day.

Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shuts off completely.

STOPWATCH (Count up, tracks duration of events)



The Timer icon with arrow pointing up will be displayed,
Once the timer start the arrow will flash

1. Press button 7 (**MODE**) to switch to Timer Mode.
2. Press button 1 (**START/STOP**) to begin count up.
3. Hold button 1 (**START/STOP**) to reset and start again from zero.

Note: This clock has count up capacity of 9 years, 364 days, 23:59:59.

- At 24 hours, a DAY indicator will show
- At 365 days a YEAR indicator will show



COUNTDOWN TIMER (cooking, exercising, preset times)



The Timer icon with arrow pointing down will be displayed,
Once the timer start the arrow will flash

Note: The timers will continue to run if you change modes, allowing full clock and time alarm function.

The countdown timer is programmable up to 23 hours, 59 minutes and 59 seconds.



Set Timer:

1. Press button 7 (**MODE**) to switch to timer mode.
2. Hold button 7 (**MODE**) to enter timer set mode.
3. Press button 2 or 6 (**DOWN or UP**) to adjust countdown timer.
4. Press button 7 (**MODE**) to confirm adjustments and move to the next item.

TIMER SETTING ORDER: Seconds, Minutes, Hours

1. Press button 1 (**START/STOP**) to start or stop the timer.
2. Hold button 1 (**START/STOP**) to clear the timer numbers.

Timer Alarm

- When the timer reaches zero, the alarm will sound for 20 seconds.
- The timer icon will flash.
- The clock will start counting **up** and display the **+** icon.
- Press any button to stop the alarm.

Countdown Timer Memory

- In timer mode, press button 5 (**MEM**) to select from 5 preset values from 5 minutes to 30 minutes: (*MEM*1: 5 min, *MEM* 2: 10min, *MEM* 3: 15 min, *MEM* 4: 20 min, *MEM* 5: 30 min).
- Press button 1 (**START/STOP**) to start or stop the timer.



Change any preset memory value:

1. Press button 5 (**MEM**) to select timer memory.
 2. Hold button 7 (**MODE**) to enter timer set mode.
 3. Press button 2 or 6 (**DOWN or UP**) to adjust countdown timer.
 4. Press button 7 (**MODE**) to confirm adjustments and move to the next item.
- TIMER SETTING ORDER: Seconds, Minutes, Hours

EVENT TIMER (holiday/appointment countdown, up to 5 events)

The event timer is programmable up to 9 years, 364 days, 23 hours 59 minutes and 59 seconds.

1. Press button 7 (**MODE**) to switch to event timer.
2. Hold button 7 (**MODE**) to enter event timer set mode.
3. Press button 2 or 6 (**DOWN or UP**) to adjust event timer.
4. Press button 7 (**MODE**) to confirm adjustments and move to the next item.

EVENT TIMER SETTING ORDER: Month, Date, Year, Hours, Minutes, Seconds



- **Note:** The date information (month date, year) will show next to the event icon

1. Press button 1 (**START/STOP**) to start or stop the event timer.
2. Hold button 1 (**START/STOP**) to clear the event timer.

Event Alarm

- When the event timer reaches zero, the alarm will sound for 20 seconds.
- The event icon will flash.
- The clock will start counting **up** and display the **+** icon.
- Press any button to stop the alarm.

Event Timer Memory

The event timer does not have preset values. When you set events, they will store into memory for easy recall with button 6 (**MEM**).

The first event will store in **MEM 1**. The next events will store MEM 2, MEM 3, MEM 4, and MEM 5. Then the next time an event is saved it will replace MEM 1 and start the sequence again.

MEM and a number (MEM 1) will display above the event timer, when you use a preset event timer memory.

Note: Multiple timers (event, stopwatch or countdown) can run at the same time. The timers will continue to run in the background, when the clock is displayed.

MANUAL WWVB RADIO-CONTROLLED TIME SEARCH

- Press button 6 (+ **UP**) button to start or stop a manual signal search.
- WWVB Icon will flash

For information about WWVB, visit:

www.nist.gov/pml/div688/grp40/wwvb.cfm



**WWVB
Icon**

LOW BATTERY ICON

- Low battery icon indicates low battery for the clock.
- If the icon is displayed replace batteries.



**Low Battery
Icon**

SPECIFICATIONS

Operating Temperature:	32°F to 122°F (0°C to 50°C)
Power:	3-AA, IEC, LR6 batteries (not included)
Battery Life:	Battery life is over 24 months when using reputable battery brands.
Dimensions:	11.81"L x 6.49"H (29.97cm x 16.51cm)

CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents.
- The product is not a toy. Keep it out of reach of children.
- The product is not to be used for medical purpose or for public information. It is intended for home use only.
- The specs of this product may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.

WARRANTY AND SUPPORT INFORMATION

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

View full warranty details online at:

www.lacrossetechnology.com/warranty_info.pdf

For warranty work, technical support or other information contact:

La Crosse Technology, Ltd
2817 Losey Blvd. S.
La Crosse, WI 54601

Contact Support:
1-608-782-1610

Product Registration:

www.lacrossetechnology.com/support/register

Online Product Support:

www.lacrossetechnology.com/519-1416



Scan for full
manual online



Protected under U.S. Patents: 5,978,738, 6,076,044, 6,597,990

FCC STATEMENT

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.