

1.76" LED ALARM CLOCK

with Dual Alarms and USB Charging




Model: 602-249
DC: 020419

FIND FAQs, AND MORE UNDER THE **SUPPORT** TAB HERE:
bit.ly/602-249

POWER UP

1. Insert the provided Stand into bottom of clock.
2. Insert the 5.0 volt power cord into an outlet, then into your Alarm Clock.

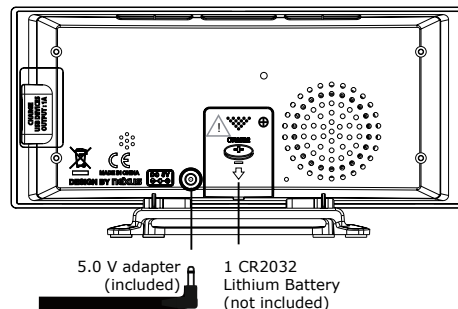

INSTALL CR2032 BATTERY

Your clock requires one CR2032 lithium battery (not included) to provide backup power in the event of a temporary power interruption.

1. Place your unit face down on a flat and soft surface.
2. Use screw driver to open the battery compartment door. Slide the battery cover down to remove it.
4. Insert one new CR2032 battery into the battery compartment with the "+" side facing up as indicated.
5. Close the battery compartment door and tighten the battery door screw.

SETTINGS

1. Hold the SET button to enter the Settings Menu.
2. Press the + or DST/- buttons to adjust the values. Hold to adjust quickly.
3. Press the SET button to confirm and move to the next item.

Settings Menu Order:

- Hours • Minutes
- 12/24 Hour
- Snooze Duration (05 to 60 minutes)

TIME ALARMS

1. Hold the AL1-2 button to enter alarm set mode.
2. Press the + or - buttons to adjust the values. Hold to adjust values quickly.
3. Press the AL1-2 button to confirm and move to the next item.
4. Press SET button anytime to exit alarm set mode.

Alarm setting order:

- Alarm 1 Hour
- Alarm 1 Minutes
- Alarm 2 Hour
- Alarm 2 Minutes



Alarm 1 Icon, shows when alarm is active



Alarm 2 Icon, shows when alarm is active

Stop the Alarm (s) for one day:

- When an alarm sounds the related Alarm Icon will flash.

- Press the AL1.2 button to stop the alarm for one day. The Alarm Icon will remain solid on the display.

Activate | Deactivate Time Alarms:

- Press the AL1.2 button once to activate Alarm 1. The Alarm 1 Icon will show.
- Press the AL1.2 button a second time to activate Alarm 2. The Alarm 2 Icon will show.
- Press the AL1.2 button a third time to activate both Alarm 1 and Alarm 2.
- Press the AL1.2 button a fourth time to deactivate both alarms. Both the Alarm 1 and Alarm 2 icons will disappear.

Snooze:

- When an alarm sounds, press the AUTO DIM SET button to silence the alarm for the 5 minutes or the Snooze Duration selected in the settings menu.

- The Alarm 1 Icon or Alarm 2 Icon will flash.


Note: If the Second Alarm sounds, it will override the Snooze function on the First Alarm. The First Alarm will sound again the next day.


DAYLIGHT SAVING TIME ADJUSTMENT

When observing Daylight Saving time: Hold the DST/- button for three seconds to move your time ahead 1 hour. The letter “D” will show in front of the time when DST is active.

When observing Standard time: Hold the DST/- button for three seconds to move your time back 1 hour.

AUTO DIM BACKLIGHT

- 1. Hold the AUTO DIM SET button until OFF and the Auto Dim Icon  shows. Press the + or DST/- buttons to turn ON.
- 2. Press the AUTO DIM SET button to select the Auto Dim Start Time (10:00pm will flash). Press the + or DST/- buttons to adjust.
- 3. Press the AUTO DIM SET button to select the Auto Dim Stop Time (6:00am will flash). Press the + or DST/- buttons to adjust.
- 4. Press the AUTO DIM SET button to confirm and exit.

When the Auto Dim Icon  is displayed, your backlight will automatically dim at the start time and brighten again at the stop time selected.


ADJUSTABLE BACKLIGHT HI-LO-OFF

Press the AUTO DIM SET button to adjust the brightness (HI/ LO/OFF) of your clock.

USB CHARGING PORT

Note: This is a power-output charging port. It does not provide power to the alarm clock.

- Connect your external device’s USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- USB Power Output: 1A maximum current.
- Charge 1A devices or devices that are self- regulating.

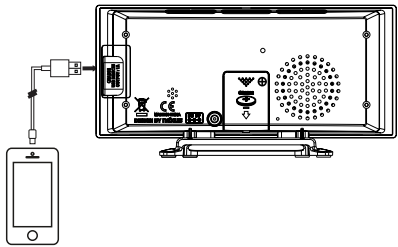

Note: iPad and Notepad charging is not applicable.

WE’RE HERE TO HELP!

If you require additional support, call our friendly customer support team based out of La Crosse, Wisconsin.

Phone: 1.608-782-1610

Or fill out our online support request form here: bit.ly/contact_techsupport

Our knowledgeable customer support team is available:
Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



SPECIFICATIONS

Power Requirements: HX13-0501200AU-001 5 volt adapter (included)
CR2032 battery (not included)

Battery Life: Over 12 months
USB output: 1A maximum current.
Alarm duration: 2 minutes
Snooze duration 5-60 minutes programmable.
Dimensions: 6.74” L x 1.52” W x 3.43” H
(17.12cm L x 3.86cm W x 8.71cm H)

BUTTON CELL BATTERY WARNING



WARNING:

- 1. This product may use a Button Cell Battery.
- 2. If swallowed, it could cause severe injury or death in just 2 hours.
- 3. Seek medical attention immediately.

AVERTISSEMENT:

- 1. Cet article contient une pile bouton.
- 2. De graves blessures ou la mort pourraient suivre dans les deux heures Suivant l’ingestion.
- 3. Demander l’aide de professionnels de la santé sur le champ.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- 1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chem-ical burns and potential perforation of the oesophagus.
- 2. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- 3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
- 4. Do not use if compartment is not secure.
- 5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- 6. Tell others about the risk associated with button batteries and how to keep their children safe.

WARRANTY INFORMATION

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd
2830 S. 26th St.
La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov