 





Projection Time Alarm

FRONT

12:34

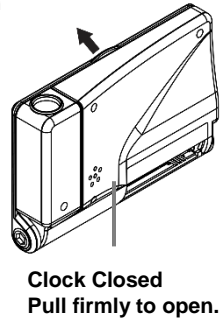

   BUTTONS

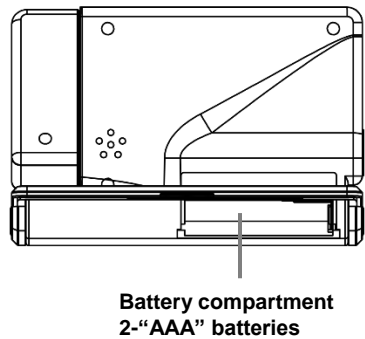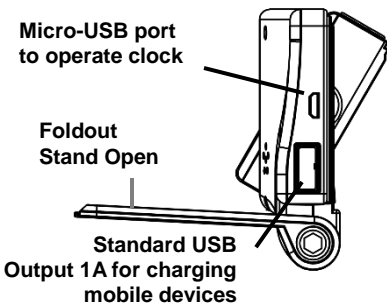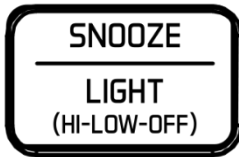

GET STARTED

Step 1: With the cover/stand closed, insert 2 new “AAA” batteries (not included) into the back of projection alarm. Observe correct polarity.

Step 2: Looking at the top of the clock, firmly pull the cover/stand open to view the clock.

Step 3: Optional Micro-USB power cord (included) for constant, adjustable backlight and projection. Insert the Micro-USB end of the cord into the clock and the USB end into your computer USB port or a USB outlet.

Restart: Unplug the Micro-USB cord and remove batteries from the projection alarm, press a button 20 times. After 15 minutes, return to **Step 1** above.

SET TIME AND DATE

1. Hold the **MODE/SET** button to enter time set mode.
2. Use the **▲UP** or **▼DOWN** buttons to adjust values. Press and hold for those buttons for fast adjustment.
3. Press the **MODE/SET** button to confirm adjustments and move to the next item.

Time and Date setting order:

1. 12/24 Hour Time Format
2. Hour
3. Minutes
4. Year
5. Month
6. Date



Note: Day of the week sets automatically when year, month and date are set.

Press the **MODE/SET** button to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

SET TIME ALARM

1. Press the **ALARM** button to view the alarm time, in alarm mode.
2. In alarm mode, hold the **ALARM** button to enter alarm time set mode.
3. Use the **▲UP** or **▼DOWN** buttons to adjust values.



4. Press the **ALARM** button to confirm adjustments and move to the next item.



Alarm Time setting order:

1. Hours
2. Minutes

 
ACTIVATE/DEACTIVATE TIME ALARM

- Press the **ALARM** button once to view alarm time.
- Press the **ALARM** button again to activate the alarm. Bell icon appears.
- Press the **ALARM** button again to deactivate the alarm. The bell icon disappears.



SNOOZE (Silences alarm temporarily)

- Press the **SNOOZE/LIGHT** button to silence alarm for 10 minutes.
- **Zz** will show above the time.
- When in snooze mode, press **SNOOZE/LIGHT** to stop alarm for one day.



Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely.

CALENDAR OR ALARM TIME DISPLAY

 
- Press the **MODE/SET** button to select Alarm Time or Calendar to be displayed.



BACKLIGHT BRIGHTNESS-MICRO-USB POWER

Press and release the **SNOOZE/LIGHT** button to adjust the brightness of the backlight:

- ON Bright
- ON Dim
- OFF



Note: When the Micro-USB cord is NOT in use, the High/Low/Off features are not available.

When operating on battery power only, press the **SNOOZE/LIGHT** button for a 10 second backlight and projection. The projection will not stay on with battery power only.

PROJECTION (rotate, projection arm)

Battery Power: Press and release the **SNOOZE/LIGHT** button to show the projection for 10 seconds.

SNOOZE
LIGHT
(HI-LOW-OFF)

Micro-USB Cord: Projection is displayed constantly.

Note: Projection will not display constantly when operating on battery power.

Rotate Projection:



- Press the **▲UP** button to rotate the projection image 90 degrees.
- Press the **▲UP** button again to rotate another 90 degrees.
- Continue until the projected image is right side up.

Projection Arm: The projection arm will move forward or backward so you can project on the wall or ceiling.

USB CHARGE PORT

Charge your mobile device when the clock is plugged into a USB outlet with the Micro-USB cord. You cannot charge mobile devices when operating the clock on battery power only.

Option 1:

- Use the included Micro-USB cord to connect the clock to a USB power outlet or your computer.
- Connect your mobile device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.



Option 2:

- Use your mobile device's charge cord to connect to an AC/DC outlet and to the Micro-USB port on the clock to power the clock.
- Then use the included USB cord to connect to the standard USB port to charge your mobile device.

IMPORTANT: Charging ability will depend on the power output of your devices charge cord. There is no guarantee this configuration will charge your mobile device while powering the clock.

CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+and -).
- Remove batteries from equipment when is not to be used for an extended period of time.
- Remove used batteries promptly.
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents or scouring agents.
- The product is not a toy. Keep it out of reach of children.
- The product is not to be used for medical purpose or for public information. It is intended for home use only.
- The specs of this product may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.
- If the product is not working properly, change the batteries.

SPECIFICATIONS

USB Charging Port	
USB Output:	1.0 Amp maximum current
Power:	
Optional Micro-USB cord	Micro-USB to USB outlet(included)
Batteries	3-AAA, IEC, LR3 batteries (not included)
Battery Life:	
Projection Alarm	Battery life is over 12months with reputable battery brands.
Dimensions:	
Projection Alarm Open:	4.5" L x 3" W x 3" H (114.3 x 76.2 x 76.2 mm)
Closed	4.5"L x 0.94" W x 3"H (114.3 x 24 x 76.2mm)

WARRANTY AND SUPPORT

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

View full warranty details online at:
www.lacrossetechnology.com/warranty_info.pdf

Before returning a product, please contact our friendly customer support with questions or visit our online help (manuals and FAQs):

La Crosse Technology, Ltd
2830 South 26th St
La Crosse, WI 54601

Contact Support:
1-608-782-1610

Online Product Support:
www.lacrossetechnology.com/support

Product Registration:
www.lacrossetechnology.com/support/register

