LA CROSSE® TECHNOLOGY

THREE SIDED ALARM INSTRUCTION GUIDE



MODEL: 617-106 / 617-106B DC: 050420

 
For more product information visit: bit.ly/laxtech_support

POWER UP

- 1. Insert power adapter into a wall outlet, then into your clock.

 Optional: Insert a 9 volt battery (sold separately) for backup.
- 2. Adjust time and date settings on the clock.





SETTINGS

- 1. Hold the SET button to enter the Settings Menu.
- 2. Press the + or button to adjust the flashing values. Hold to adjust quickly.
- 3. Press the SET button to confirm adjustments and move to the next item.
- 4. Press the SNOOZE/LIGHT button at any time to exit.

Settings Menu Order:

- 12/24 Hour
- Hour
- Minutes
- Year
- Month
- Date
- Temperature Fahrenheit/Celsius

DUAL ALARM SETTINGS

Set Alarm 1:

- 1. Hold the Dutton to enter the Alarm 1 Settings.
- 2. Press the + or button to adjust the flashing values. Hold to adjust quickly.
- 3. Press the to button to confirm and move to the next item.
- 4. Press the SNOOZE/LIGHT button at any time to exit.

Set Alarm 2:

Repeat steps 1-4 above with the **2** button.

Activate/Deactivate Alarm 1 or Alarm 2:

When alarm 1 or alarm 2 are set they are active.

- Press to deactivate or activate alarm 1.
- Press to deactivate or activate alarm 2.
- The associated bell icon A A will show on the screen when an alarm is active.

Snooze:

- When the alarm sounds, press the SNOOZE/LIGHT button to slience the alarm for 10 minutes.
- The alarm bell icon will flash.
- Press any button except SNOOZE/LIGHT to silence the alarm for 24 hours.

These are crescendo alarms, which will increase in frequency and volume for up to 5 minutes if no button is pressed.

- Press SNOOZE/LIGHT to snooze a sounding alarm
- Press to deactivate alarm 1.
- Press **2** to deactivate alarm 2

ADJUSTABLE BACKLIGHT

 
Press the SNOOZE/LIGHT button to adjust the brightness of your clock's LCD.

- 100% Brightness (default)
- 50% Brightness
- 12% Brightness
- 0% OFF

USB CHARGING PORT

Connect your external device's USB charging cable (not included) to the USB Charging Port.

- This is a power output charging port. It does not provide power to the alarm clock.
- Charging times will vary.
- USB Power Output: 1 Amp maximum current.
- Charge 1 Amp devices or devices that are self-regulating.



Page 2 Page 3 Page 4

THREE CUSTOM DISPLAYS

Your clock has three unique displays to provide the Time, Date, Temperature and Alarm, information you need.

Main Front Display: Press the SET button to change the display.

• Press 1: Time Mode (Default)

• Press 2: Temp/Humidity Mode

• Press 3: Date Mode

• Press 4: Alarm 1 Set Time

• Press 5: Alarm 2 Set Time

Left Side Display: Press the **©** button to change the display.

• Press 1: Time Mode

• Press 2: Temp/Humidity Mode

• Press 3: Date Mode (Default)

• Press 4: Alarm 1 Set Time

• Press 5: Alarm 2 Set Time



Right Side Display: Press the **②** button to change the display.

• Press 1: Time Mode

• Press 2: Temp/Humidity Mode (Default)

• Press 3: Date Mode

• Press 4: Alarm 1 Set Time

• Press 5: Alarm 2 Set Time



BATTERY BACKUP

- Insert one "9V" battery into the battery compartment on the back of the clock. The battery will keep the alarm and time settings until the power is restored.
- The LED display will not light-up but alarms will sound at their preset alarm time.
- If there is no battery installed but the power is interrupted, the display will flash at 12:00 and the time and alarm need to be set again.

SPECIFICATIONS

Indoor:

Temperature Range: 32°F to 99°F (0°C to 37°C)

Humidity Range: 10% to 99 % RH

Power Requirements: Power Adapter (included)

AC6: XSC-0501500H

Optional 9 Volt battery to backup time (sold separately)

Battery Life:

Over 24 months with reputable batteries

Dimensions: 5.62" L x 2.24" W x 2.16" H

(13.3cm L x 5.7cm W x 5.5cm H)

WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, Wisconsin.

Phone: 1.608.782.1610

Online: bit.ly/contact_techsupport

Our knowledgeable customer support team is available:

Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!





WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer.

For more information go to: www.P65Warnings.ca.gov

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- \bullet Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- · Always purchase the correct size and grade of battery most suitable for intended use.
- · Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- · Promptly remove expired batteries.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the oublisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

Page i 5 Page i 7 Page i 8