

LA CROSSE®  
TECHNOLOGY

# **BUZZ Digital Alarm Clock** with Vibration and Loud Sound



**SET UP GUIDE**

Model: 617-147

# Table of Contents

BASICS		ALARM		APPENDIX	
<a href="#">Power Up</a>	03	<a href="#">Set Alarm Time</a>	05	<a href="#">Specifications</a>	07
<a href="#">Set Time</a>	03	<a href="#">Activate/Deactivate</a>	06	<a href="#">Warranty</a>	08
<a href="#">Buttons</a>	04	<a href="#">Snooze</a>	06	<a href="#">Cautions/Statements</a>	08-09
<a href="#">Backlight</a>	07			<a href="#">Care &amp; Maintenance</a>	09
<a href="#">Low Battery Indicator</a>	07			<a href="#">Recycling &amp; Disposal</a>	09
SUPPORT					
<a href="#">We're Here to Help</a>	10				
<a href="#">Stay in Touch</a>	10				

Move the red stand to the top of the clock.



Slide the battery cover down to access the battery compartment.



## BASICS

### Power Up

1. Move the red stand to the top of the clock.
2. Slide the battery cover down to remove it.
3. Insert 3 “AA” alkaline batteries into the back of your clock.
4. Slide the battery cover up until it clicks into place.
5. Pull the red stand down until it locks into place at the bottom of your clock.
6. Set time.

### Set Time

1. Hold the **ALARM/TIME SET** button until the display changes to enter the Time Settings.
2. Press and release the **+** or **-** button to adjust values. Hold to adjust quickly.
3. Press and release the **ALARM/TIME SET** button to confirm settings and move to the next menu item.
4. Press and release the **BACKLIGHT/SNOOZE** button at anytime to exit the settings menu.

#### Time Settings Order:

- 12/24 Hour Format
- Hour
- Minutes

# Buttons



1 **ALARM**  
TIME SET

2 **BACKLIGHT**  
SNOOZE

3 - 4 +



## 1. ALARM/TIME SET

Hold to enter Time Settings.  
Press and release to set the Alarm Time.

## 2. BACKLIGHT/SNOOZE

Press and release to activate the backlight briefly. When alarm sounds, press to silence the alarm temporarily.

## 3. MINUS

Press and release to adjust by one setting. Hold to adjust quickly.

## 4. PLUS

Press and release to adjust by one setting. Hold to adjust quickly.

## 5. SOUND ALARM SWITCH

Slide to ON to activate the alarm. Slide to OFF to deactivate the alarm.

 
 
## 6. VIBRATION ALARM SWITCH

Slide to ON to activate the alarm. Slide to OFF to deactivate the alarm.

# Time Alarm

## Set Alarm Time(s)



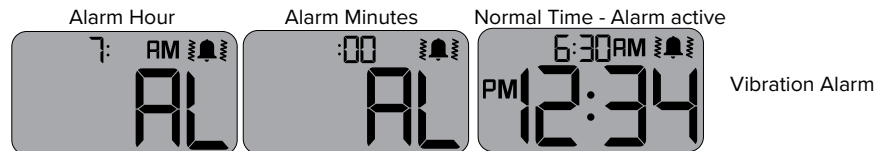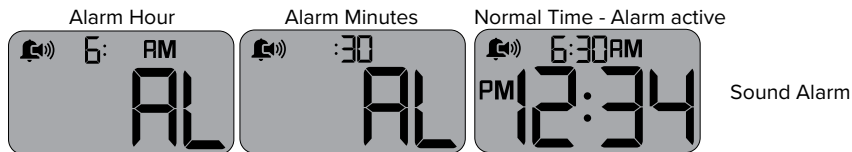

- Slide the Sound Alarm Switch and/or the Vibration Alarm Switch to the ON position.
- Press and release the **ALARM/SET** button until “AL” shows. The Alarm Hour will flash.
- Press and release the + or – button to adjust. Hold to adjust quickly.
- Press and release the **ALARM/SET** button to move to the Alarm Minutes.
- Press and release the the + or – button to adjust. Hold to adjust quickly.
- Press and release the **ALARM/SET** button to confirm and exit.




**Note:** Press or hold one button at a time during setup.

## ALARM
 
### Deactivate / Activate the Alarms

1. Slide the Sound Alarm  and/or Vibration Alarm  to the OFF position to deactivate.
2. Slide the Sound Alarm  and/or Vibration Alarm  to the ON position to activate

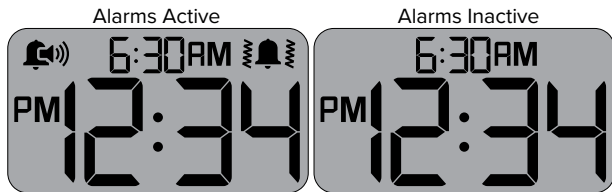

- When an alarm triggers, the backlight will flash for about 10 seconds, and the alarm(s) will engage.
- The sound and/or vibration will activate for 2 minutes and then shut off if no buttons are pressed.

**Note:** The vibration alarm may cause your clock to “walk off” the nightstand.

### Snooze

- Press the **SNOOZE/BACKLIGHT** button to snooze Alarm for 10 minutes.
- The Snooze Icon **ZZ** will flash.
- When the snooze time ends the alarm will sound or vibrate and the backlight will flash.
- The Snooze feature may be repeated.

06

## BASICS

### Backlight

- Press the **SNOOZE/BACKLIGHT** button to activate the backlight for about five seconds.

### Low Battery Indicator

- When the Low Battery Indicator  appears, replace the batteries in the clock.

## APPENDIX

 
### Specifications

**Power Requirements:** 3-AA alkaline batteries (not included)

**Battery Life:** 24+ months

**Alarm Sound:** 80dB

**Dimensions:** 3.08 in L x 1.09 in x W x 2.88 in H (7.82 cm L x 2.77 cm W x 7.31 cm H)

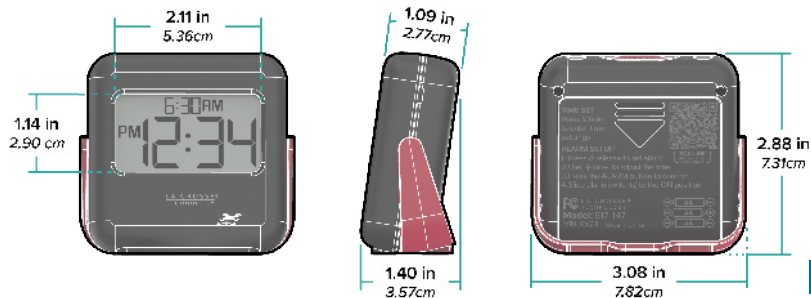

07

## Warranty

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product, relating to manufacturing defects in materials and workmanship.

For Full Warranty Details, Visit: [www.lacrossetechnology.com/pages/warranty](http://www.lacrossetechnology.com/pages/warranty)

Patents: [www.lacrossetechnology.com/pages/patents](http://www.lacrossetechnology.com/pages/patents)

La Crosse Technology, Ltd • 2830 S. 26<sup>th</sup> Street • La Crosse, WI 54601

## Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

**All rights reserved.** This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

## California Residents

### WARNING:

This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

## Recycling & Disposal

Please consider the environment when deciding to dispose of this product. Although household electronics are generally safe to use on a daily basis, incorrect disposal can cause negative and potentially irreversible impacts on our environment.

Check with local donation centers to see if your product can be donated for future use. If disposal is the only option, federal agencies, local governments, and certified retailers may have electronic recycling programs in place. Programs may vary based on location.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

### Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Having Trouble? We're here to help.

---

**If you need additional assistance, contact our friendly customer support team:**

Our representatives are available  
M-F, 8am-6pm CT

**Self-Help:** [bit.ly/617-147\\_support](https://bit.ly/617-147_support)

**Email:** [bit.ly/contact\\_techsupport](mailto:bit.ly/contact_techsupport)

**Phone:** 1.608.782.1610

Scan Here



## Stay in Touch

---

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).

