

FUNCTION:

- Displays month, date, alarm, & time
- 2. 5 minute Repeating snooze
- LED back-light
- 12 hour or 24 hour format

INSTALL THE BATTERIES

- 1. Remove the battery compartment cover (A) on the back of the clock
- 2. Insert 2 PCS "AA" (1.5V) ALKALINE batteries noting the polarity as indicated inside the Battery compartment.
- 3. Replace the battery compartment cover

SETTING THE CALENDAR

- Slide the ALARM/TIME/CALENDAR/LOCK switch (G) to the CALENDAR position and the year/day/date digits will begin to flash.
- 2. Press the 12-24HR/YEAR button (C) to set the year.
- 3. Press the MINUTE/DATE button (D) to set the date.
- 4. Press the HOUR/MONTH button (E) to set the month
- After the CALENDAR has been set, slide the ALARM/TIME/CALENDAR/LOCK switch (G) to the LOCK position.

SETTING THE TIME

- 1. Slide the ALARM/TIME/CALENDAR/LOCK switch (G) to the TIME position and the hour/minute digits will begin to flash.
- 2. Press the HOUR/MONTH button (E) to set the hour. Please make sure AM/PM is set correctly, the AM/PM indicator will appear on the display for AM or PM time. (in 12 hour format)
- 3. Press the MINUTE/DATE button (D) to set the minute.
- 4. After setting the correct time, slide the ALARM/TIME/CALENDAR/LOCK switch (G) to the LOCK position.

SETTING THE ALARM

- 1. Slide the ALARM/TIME/CALENDAR/LOCK switch (G) to the AL. SET ALARM position.
- 2. Press the HOUR/MONTH button (E) to set the hour. Please make sure AM/PM is set correctly, the PM indicator will appear on the display for PM time. (in 12 hour format)
- 3. Press the MINUTE/DATE button (D) to set the minute
- 4. Aff the alarm has been set, move the slide switch ALARM/TIME/CALENDAR/LOCK (G) to the LOCK position.icon.

ACTIVATING THE ALARM AND SNOOZE

After setting the alarm to the desired alarm time .you may activate the alarm by moving the ALARM ON/OFF switch (F) to the ON position A " Zzz" icon will appear to indicate the alarm has been activated. The alarm will activate at the set time and sound for 60 seconds. The alarm sound can be stopped and repeated again five (5) minutes later when the SNOOZE/LIGHT (B) is depressed at the time alarm sounds. The snooze function can be repeated again and again .You may also shut off the alarm completely by sliding ALARM ON/OFF switch (F) to the OFF position.

BACK-LIGHT

The display can be illuminated at any time by pressing the Top SNOOZE/LIGHT BUTTON (B)

12 HOUR / 24 HOUR FORMATS

Press 12/24 HR button (C)) to change your desired hour display format .In 12 hour format, an AM or PM indicator will appear on the display.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity by La Crosse

Warranty Department

2830 26th St. S.

La Crosse, WI 54601



Please help in preservation of the environment and return used batteries to an authorized depot.

Remove the batteries from the clock if you do not intend to use for an extended period of time.