

Equity®

Model# 70940


FEATURES

1. Large display with backlight
2. Resetting alarm
3. Snooze repeats every 8 minutes
4. PM indicators
5. Color backlight
6. Requires two "AA" batteries (not included)
7. One year limited warranty

BATTERIES

This clock operates on two "AA" batteries (not included). Remove the Battery Door (H) and insert two new "AA" batteries in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly.

If the clock does not operate, or steadily loses time, or if the alarm sounds weak, the battery is low and should be replaced.

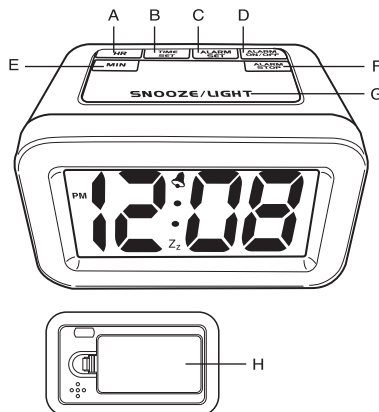

SETTING THE TIME

Press and hold the "TIME SET" button (B) and press the "HR" button (A) to set the hours. Press and hold the "TIME SET" button (B) and press the "MIN" button (E) to set the minutes. Be sure to correctly set the time in AM or PM mode.

SETTING THE ALARM

Press and hold the "ALARM SET" button (C) and press the "HR" button (A) to set the alarm hours. Press and hold the "ALARM SET" button (C) and press "MIN" button (E) to set the alarm minutes. Be sure to correctly set the alarm in AM or PM mode.

RESETTING ALARM AND SNOOZE

To activate the alarm, press the "ALARM ON/OFF" button (D) once. The alarm symbol (🔔, Z_z) will appear on the display. At the pre-set time, the alarm will sound. After the alarm is activated, press the "SNOOZE/LIGHT" button (G) to activate the snooze function. The snooze icon (Z_z) will flash to indicate that this function is on. After eight (8) minutes, the alarm will reactivate. This snooze function can be repeated again and again.

To activate the resetting alarm simply press the "ALARM STOP" button once after the alarm sounds. This will automatically reset the alarm for the same time the following day.

COLOR BACKLIGHT

The display can be illuminated at any time by pressing the "SNOOZE/LIGHT" (G), and will stay illuminated for five (5) seconds, then automatically fade. The display will also illuminate if you press the "SNOOZE/LIGHT" (G) at the time the alarm sounds.

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Replace **all** batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity(+ and -).
5. Remove the batteries from equipment which is not to be used for an extended period of time.
6. Remove used batteries promptly.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product.
- a letter explaining the problem.
- and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St.S.
La Crosse, WI 54601

Made in China

Print in China

www.equitybylacrosse.com/support