


Equity®

## COLOR CUBE ALARM CLOCK

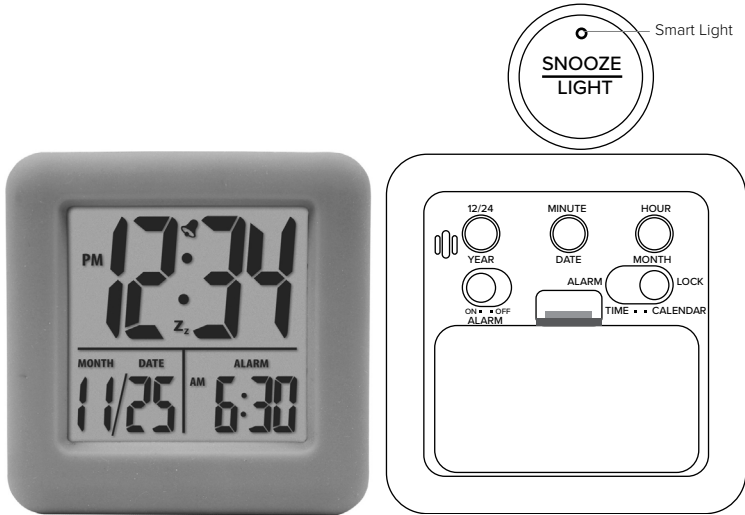

MODEL: 73002 / 73003 / 73004 / 73005  
DC: 022224

For more product information visit: [bit.ly/laxtech\\_support](http://bit.ly/laxtech_support)

### POWER UP

1. Insert 2 “AA” batteries (Not Included). Your clock will beep several times.
2. Set Time and Date.

### TIME SETTING

1. Slide the LOCK switch to the Time position. Hour and Minutes will flash.
2. Press the HOUR button to change the Hour.
3. Press the MINUTE button to change the Minutes.
4. Slide the LOCK switch back to the Lock position for normal operation.

### CALENDAR SETTING

1. Slide the LOCK switch to the Calendar position. Year, Month and Date will flash.
2. Press the YEAR button to change the Year.
3. Press the MONTH button to change the Month.
4. Press the DATE button to change the Date.
5. Slide the LOCK switch back to the Lock position for normal operation.

### 12-HOUR OR 24-HOUR

- Press the 12/24 button to change between a 12-hour and 24-hour time display.
- The AM and PM indicators will not show when using a 24-hour clock.

### ALARM SETTING

1. Slide the LOCK switch to the Alarm position. Hour and Minutes will flash.
2. Press the HOUR button to change the Hour.
3. Press the MINUTE button to change the Minutes.
4. Slide the LOCK switch back to the Lock position for normal operation.

### ACTIVATE/DEACTIVATE ALARM

1. Slide the ALARM ON/OFF switch to the ON position to activate the alarm. The Alarm Icon 🛎 will show.
2. Slide the ALARM ON/OFF switch to the OFF position to deactivate the alarm.
3. When the alarm is active, the Alarm Icon will show.

**Note:** When the alarm time is reached, press any button (except SNOOZE/LIGHT) to stop the alarm for 24 hours. If no button is pressed, the alarm will sound for 60 seconds then shut off for 24 hours.

### SNOOZE

- When the alarm sounds, press the SNOOZE/LIGHT button to silence the alarm for 5 minutes.
- The Alarm 🛎 and Snooze **Zz** Icons will show. The snooze icon will flash.
- When the snooze duration is reached, the alarm will sound for 60 seconds then shut off for 24 hours unless ALARM ON/OFF switch is moved to OFF.
- Snooze may be repeated.

## BACKLIGHT

Press the SNOOZE/LIGHT button to activate a bright backlight for 5 seconds.

## SMART LIGHT

- Your clock has a “Smart Light” sensor built into the SNOOZE/LIGHT button.
- When in a dark room, the clock will automatically provide a dim backlight to easily read the time, yet not disturb your sleep.
- You may press the SNOOZE/LIGHT button at any time to view the bright backlight for 5 seconds. After this, dim backlight will resume as long as the room is dark.

## CARE & MAINTENANCE

### Battery Replacement Instructions

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use.
- Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

## POWER REQUIREMENTS & DIMENSIONS

**Power:** 2 “AA” batteries (not included)

**Battery Life:** Over 12 months

**Dimensions:** 3.14” L x 2.44” W x 3.14” H (8.0 cm L x 6.2 cm W x 8.0 cm H)

## WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity’s option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department  
2830 26<sup>th</sup> St S.  
La Crosse, WI 54601

Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.



## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



**WARNING:** This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)