


Equity®

JUMBO BLUE LED ALARM CLOCK WITH USB PORT

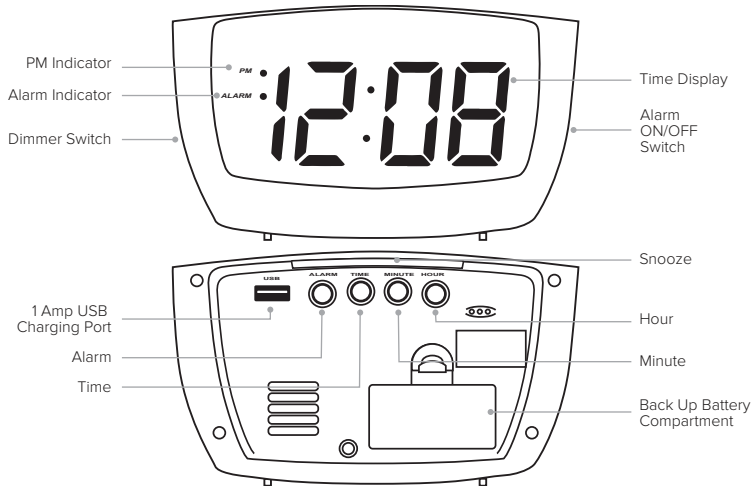

MODEL: 75904
DC: 031220

For more information and support visit: http://bit.ly/75904_alarm

POWER UP

1. Insert the 120 volt power cord into an outlet.
Optional: Insert 1 "9V" battery (not included) for backup.
2. The Time Display will show 12:00AM.

TIME SETTING

Continuously hold down the TIME button while setting your hour and minutes.

1. While holding the TIME button, press the HOUR button to set your hour.
Note: The PM Indicator will appear when you advance to PM time.
2. While holding the TIME button, press the MINUTE button to set your minutes.
3. When the correct time is shown on the display, release the TIME button.

ALARM TIME SETTING & OPERATION

Continuously hold down the ALARM button while setting your alarm hour and minutes.

1. While holding the ALARM button, press the HOUR button to set your alarm hour. **Note:** The PM Indicator will appear when you advance to PM time.
2. While holding the ALARM button, press the MINUTE button to set your alarm minutes.
3. When the correct alarm time is shown on the display, release the ALARM button.
4. Move the Alarm ON/OFF Switch to the ON position to turn the alarm on. **Note:** The ALARM Indicator will appear when the alarm is on.
5. To turn off a sounding alarm, move the Alarm ON/OFF Switch to the OFF position.

SNOOZE

When alarm sounds (beeps), press the SNOOZE button to silence alarm for 8 minutes. Snooze function can be repeated many times if desired.

DISPLAY BRIGHTNESS


Use the Dimmer Switch on the side of the clock to adjust your LED brightness, HI or LO.

USB CHARGING PORT

Connect your external device's USB charging cable (not included) to the USB Charging Port.

Notes:

- Charging times will vary.
- USB Power Output: 1 Amp maximum current.
- Charge 1 Amp devices or devices that are self-regulating.
- This is a power-output charging port. It does not provide power to the alarm clock.

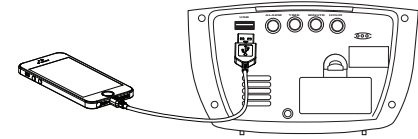

BATTERY BACKUP

- Insert 1 "9V" battery (not included) into the Battery Compartment on the back of the clock. This will keep your time and alarm settings saved until power is restored.
- The LED display will not light-up, but the alarm will still sound at the preset alarm time.

Note: If there is no battery installed and the power is interrupted, the display will show 12:00AM and the time and/or alarm will need to be set again.

POWER REQUIREMENTS & DIMENSIONS

Power: 120V Power Cord

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Battery Backup: "9V" battery (not included)

Dimensions: 7.25" L x 2.00" W x 3.90" H (18.42 cm L x 5.08 cm W x 9.91 cm H)

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department
2830 26th St S.




La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: To prevent electrical shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT

 <p>The Lightning Flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	 <p>CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
--	--	---

SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Water and Moisture:** The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
4. **Ventilation:** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or place in a built-in installation such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
5. **Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. **Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. **Grounding or Polarization:** Precautions should be taken so that the grounding or polarization means of an appliance are not defeated.
8. **Power Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on, or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point where they exit from the appliance.
9. **Cleaning:** The appliance should be cleaned only as recommended by the manufacturer.
10. **Object and Liquid Entry:** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. **Damage Requiring Service:** The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
12. **Servicing:** The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov



Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired

CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.