LA CROSSE® TECHNOLOGY

WI-FI PROJECTION **WEATHER STATION** AND CLOCK

QUICK START GUIDE




MODEL#: C82929v2 DC: 091520

Find your full manual and product information here: bit.ly/laxtech_support

POWER UP WEATHER STATION

- Insert the power cord into an outlet, then into your Station.
- Remove the battery insulation tab installed on the bottom of the station.

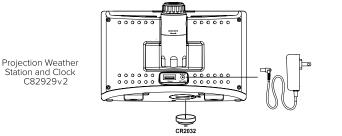

Standalone: When first powered up, your station will show the default Nap Time, Comfort Statement, and Moon Phase

Connected: Once connected to the La Crosse View[™] app, these will change to display your AccuWeather: Outdoor Temperature, Daily HI and LO Temperatures, Forecast Icons, and Chance of Precipitation values.



Standalone



Connected to La Crosse View[™] App

CONNECT TO THE LA CROSSE VIEW™ APP



DOWNLOAD

Visit the App Store or Google Play Store to download the free La Crosse View[™] app onto your mobile device.





LAUNCH AND FOLLOW

Open the La Crosse View[™] app and follow the on-screen instructions.

GET YOUR STATION READY

Ensure your station's Wi-Fi Indicator 🗢 is flashing. If it is not, press and hold the Plus (+) and Minus (-) button down together until it begins flashing. This tells you that your station is ready to connect.

HAVING TROUBLE CONNECTING?

Make sure your mobile device is connected to your router's 2.4GHz Wi-Fi network, and that you've correctly entered your Wi-Fi password.

For more troubleshooting tips and support visit:

BENEFITS OF CONNECTING TO LA CROSSE VIEW™

| reature | Standalone | Connected |
|-------------------------------|------------|-----------|
| Customizable Projection Image | ✓ | ✓ |
| Programmable Snooze | ✓ | ✓ |
| Remote Alarm Setting | | ✓ |
| Nap Timer | ✓ | ✓ |
| Home Conditions | ✓ | ✓ |
| Comfort Level | ✓ | |
| Moon Phase | ✓ | |
| Internet Time & Calendar | | ✓ |
| Outdoor Temperature | | ✓ |
| Advanced Forecast Icons | | ✓ |
| Daily Forecast HIs & LOs | | ✓ |
| % Chance of Precipitation | | ✓ |
| Ability to Add Sensors | ✓ | ✓ |
| Data Stream Technology | | ✓ |
| | | |

ACCUWEATHER FORECASTS

Eniov colourful Weather Icons and Chance of Precipitation values when connected with La Crosse View™. These icons will indicate future weather conditions for your location in place of the original Moon Phase feature.



Partly Sunny

Thunderstorm

STEP 3 (OPTIONAL): STANDALONE BASIC SETTINGS

SETTINGS MENU


- 1. Hold the SET button for 3 seconds to enter the Settings Menu.
- 2. Press the + or button to adjust the values.
- 3. Press the SET button to confirm and move to the next item.

Note: Press the SNOOZE/LIGHT button at any time to exit settings. Settings menu order:

BEEP ON I OFF • 12/24 hour format • Hour • Minutes • Year • Month Date • Temperature Fahrenheit | Celsius

Note: If you have connected to the La Crosse View™ app time & date will automatically update from the internet.

 BUTTONS AND FUNCTIONS



| ALARM | Press to activate/deactivate alarm. Hold to set alarm. |
|--------------|---|
| EXTRA SENSOR | Press to see options. Hold to add sensors. |
| * | Press to adjust projection brightness. |
| PROJ INFO | Press to see options. Hold to alternate. |
| + or - | Press either to adjust value. Hold both to search for Wi-Fi signal. |
| SET | Press to view Wi-Fi Status. Hold for basic settings. |
| NAP | Press to start Nap countdown. Hold to set Nap time. |
| SNOOZE/LIGHT | Press to adjust backlight. Hold to set Auto Dim time. |
| ALARM + NAP | Hold both to Factory Reset Station. |
| | |

www.lacrossetechnology.com/lacrosseviewsupport

Page i 2 Page : 3 Page: 4 Page : 5

Feature

TIME ALARM

- 1. Hold the ALARM button until the Alarm Hour begins to flash.
- 2. Press the + or button to adjust values, hold to adjust quickly.
- 3. Press ALARM button to confirm and move to the Alarm Minutes. Use the + or button again to adjust.
- 4. Press ALARM to confirm and move to your Snooze Duration.
- 5. Use the + or button to adjust Snooze Duration in 5 minute intervals up to 120 minutes.
- 6. Press the ALARM button to confirm and activate the alarm.

Note: This station uses a crescendo alarm, which will increase in volume over time. If no buttons are pressed within 2 minutes, it will shut off automatically.

 
ACTIVATE/DEACTIVATE TIME ALARM

 
- 1. Press the ALARM button to view your alarm time, with alarm time showing, press the ALARM button again to activate or deactivate your Time Alarm.
- 2. Your Alarm Indicator # will show when active and disappear if inactivate.
- Alarm icon will flash when alarm sounds.
- Press any button except the SNOOZE/LIGHT button to stop a sounding alarm for one day.

 
- When alarm sounds, press the SNOOZE/LIGHT button to activate the Snooze function. "SNOOZE" and your selected duration will show and begin to count
- Press any button besides the SNOOZE/LIGHT button to exit out of Snooze mode.

LCD ICONS

Wi-Fi Indicator: Will flash when your station is ready to connect to the Internet, and be solid on screen when connected.







PROJECTION OPTIONS

PROJECTION SELECTION

Press the PROJ INFO button to select projected data. Projection Options:

- Current Time (Default)
- Indoor Temperature and Humidity
- Outdoor Temperature (when connected)

 
• Extra Sensor Info (if an extra sensor is connected to your station)

adjust projected image location. **Projection Rotation:** Rotate the bottom of the Projection Arm to

Projection Angle: Tip the Projection Arm forward or backward to

customize the rotation angle of your projected image up to 270°

Projection Intensity: Press and release the button to adjust the Projection Intensity (HI-MED-LO-OFF). Projection level will show



briefly on the display.

ADD-ON SENSORS

Whether you choose to connect with the La Crosse View app or not, this clock has the ability to display data for up to 4 additional sensors. A list of compatible sensors can be found under the PARTS tab here: bit.ly/C82929

- starts to animate.
- 2. Install batteries into your sensor, if it has a TX button press it to force a signal.
- 3. Your sensor should connect within the next 3 minutes, displaying its ID and type. The Sensor Reception Indicator will show solid when a sensor is connected.
- 4. Press the EXTRA SENSOR button to cycle through the data you'd like displayed.
- 5. To add sensors to your La Crosse View app, watch this video: bit.ly/add_devices

Note: When first powering up, or after a factory restart, extra sensors should automatically connect with your display.

WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

Phone: 1.844.200.8752 Online: bit.ly/contact_techsupport

Our knowledgeable customer support team is available: Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



WEATHER STATION SPECS

Indoor Temperature Range: 32°F to 99°F (0°C to 37°C)

Indoor Humidity Range: 10% to 99%RH

Power Requirements: 5.0V AC Adapter (included) Battery Backup: 1 CR2032 Battery (included)

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

USB Charging Port: 1 Amp (charging cord sold separately)

Dimensions: 6.04 IN W × 2.42 IN D × 4.10 IN H (15.34 CM × 6.15 CM × 10.41 CM)

WI-FI NETWORK REQUIREMENTS

- Broadcast Frequency: 2.4GHz (802.11 b/g/n)
- Network Name/Password: Must Not Exceed 45 Characters
- Network Speed: Must Be Greater than 1 Mbps

Note: If you have a multiple band router, be sure your mobile device is connected to the 2.4 GHz frequency when connecting your station to the app.

MOBILE REQUIREMENTS

Apple phones require iOS with cellular or Wi-Fi service. Android phones require Android OS with cellular or Wi-Fi service

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended
- Clean the battery contacts and also those of the device prior to battery
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

WARNING: 🛕 📛

- 1. This product contains a button battery.
- 2. If swallowed, it could cause severe injury or death in just 2 hours.
- 3. Seek medical attention immediately.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- 1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- 2. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- 3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
- 4. Do not use if compartment is not secure.
- 5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- 6. Tell others about the risk associated with button batteries and how to keep their children safe.



WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/

LA CROSSE TECHNOLOGY™ PATENTS

Visit www.lacrossetechnology.com/patents for patent information.

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship. Before returning this product, please contact our friendly customer support team with questions or visit our online support site. Phone: 1.844.200.8752

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- -Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized

Page : Page: 8 Page: 9 Page 10 Page : 6