

DIGITAL WALL CLOCK

WITH INDOOR TEMPERATURE & TIMER




MODEL: M80307

DC: 012924

For more product information visit: bit.ly/laxtech_support



POWER UP

1. Insert 3-AAA batteries into your Wall Clock.
2. Configure your basic settings.

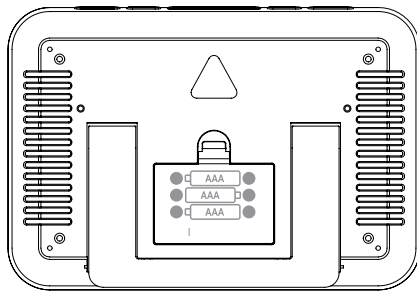

CUSTOM DISPLAY

Press the MODE button to select you custom display.

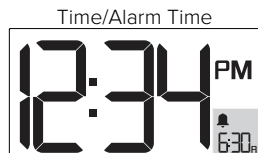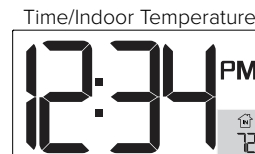

SETTINGS

1. Hold the TIME SET button to enter the Settings Menu.
2. Press the + or - button to adjust values.
3. Press the TIME SET button to confirm and move to next item.
4. Press the SNOOZE button any time to exit.

Settings Menu Order:

- Hour
- Minutes
- Fahrenheit/Celsius


ALARM

1. Hold the ALARM button to enter the Alarm Settings.
2. Press the + or - button to adjust values.
3. Press the ALARM button to confirm and move to next item.
4. Press the SNOOZE button at any time to exit.


Alarm Settings Order:

- Hour
- Minutes

Activate/Deactivate:


- Press the ALARM button to activate or deactivate the alarm or silence a sounding alarm.
- The Alarm Icon  will show when active.

Snooze:

- Press the SNOOZE button to silence an alarm for 10 minutes.
- Alarm Icon  will flash while snoozing.
- Snooze may be repeated.

TIMER

Countdown Timer:

1. Hold the TIMER button to set Countdown Timer.
2. Press the + or - button to adjust the values.
(1 minute to 19 hours 59 minutes)
3. Press the TIMER button to confirm and start the countdown. The Timer Icon  will show.

Note: The Timer will replace your time display while active.

Sounding Timer:

- When the Timer reaches zero, the clock will beep 5 times every 15 seconds for up to 1 minute.
- Timer and Arrow will flash.

Stop/Reset Timer:

- Press the TIMER button to stop and reset the timer to zero.
- Press any button besides TIMER to exit back to the normal time display.

Count Up Timer:

- Press the TIMER button to reset the Timer to zero.
- Press the TIMER button again and the timer will start counting up from 00.
- When 20 hours is reached on count up, the timer will stop and return to the normal time display.
- Press the TIMER button to stop and reset timer to zero.

Timer Arrows:

The Up Arrow  will show when timer is counting up.

The Down Arrow  will show when timer is counting down.

WE'RE HERE TO HELP!

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self Help: bit.ly/m80307_support

Online: bit.ly/contact_techsupport

Phone: 1.608.782.1610

Our knowledgeable customer support team is available:
Mon-Fri 8am-6pm CST



SCAN HERE

STAY IN TOUCH

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).



LOW BATTERY INDICATOR

When the Low Battery Indicator  appears replace batteries in your Wall Clock.

SPECIFICATIONS

Temperature Range: +32°F to 122°F (0°C to 50°C)

Power: 3 “AAA” (LR3, IEC) batteries Not Included)

Battery Life: Over 24 months

Dimensions: 7.15” L x 0.85” W x 4.90” H (18.16cm L x 2.16cm W x 12.44cm H)

WARRANTY AND PATENTS

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship. La Crosse Technology, Ltd., 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/pages/patents



WARNING: This product can expose you to chemicals including acrylonitrile, 1,3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to: www.P65Warnings.ca.gov

CARE AND MAINTENANCE

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.