

# Replace Wind Cups or Directional Vane on Cyclone and Glide Sensors

Cyclone Sensor



Glide Sensors




**Wind Cups Model:** WCLTV-WSDR1 (Fits Glide and Cyclone sensors)

**Wind Directional Vane Model:** WVLTW-WSDR1 (Fits Cyclone Sensors)

## Replace Wind Vane - Cyclone Sensors

**Tool Required:** Mini screwdriver with Phillips head (not included).

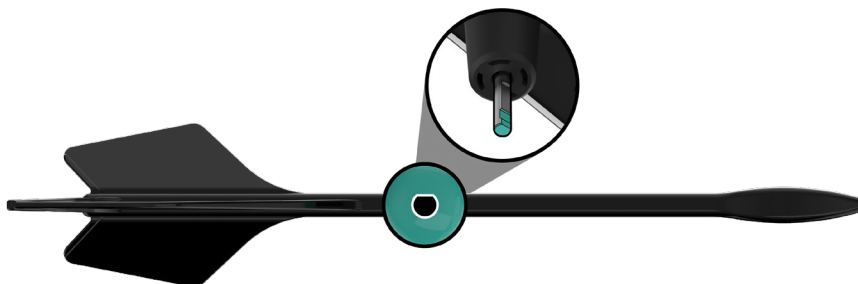

1. Remove the old wind vane with the screwdriver. Take note of the flat edges located on the post of the Sensor and inside of the Wind Vane. Align the flat edges and place the new Wind Vane on the the post of the Sensor.




2. Carefully tighten the screw on the side of the vane using a mini screwdriver. The screw should tighten into the flat edge of the post. When the screw is tight, gently pull on the vane to ensure it is secure.

## Replace Wind Cups (Same instructions for both types of sensors)


**Tool Required:** Mini screwdriver with Phillips head (not included).




1. Remove the old wind cups with the screwdriver. Take note of the flat edges located on the post of the Sensor and underside of the Wind Cups.

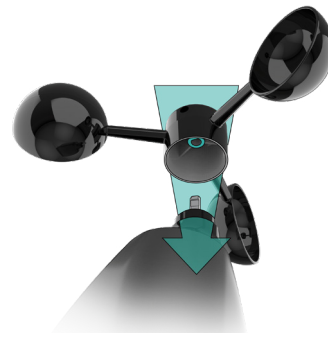

2. Align the flat edges and place the new Wind Cups on top of the Sensor.

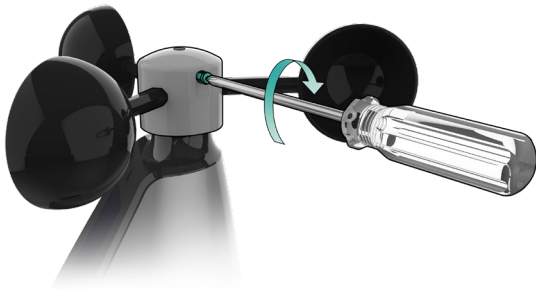

3. Carefully tighten the screw on the side of the cups using a mini screwdriver. The screw should tighten into the flat edge of the post.

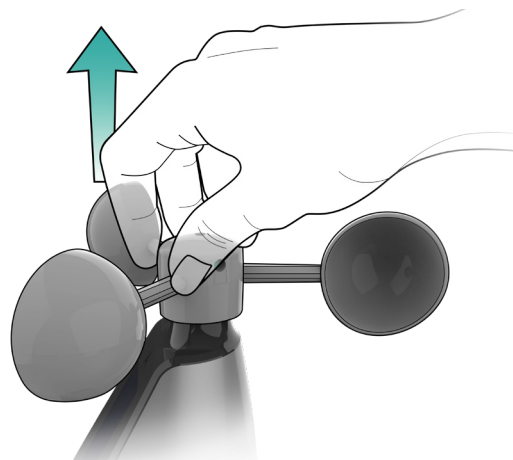

4. When the screw is tight, gently pull up on the cups to ensure they are secure. If they pull off, start again with step two.