 
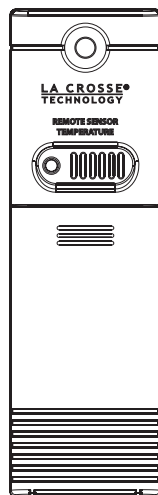 




## Wireless Thermometer

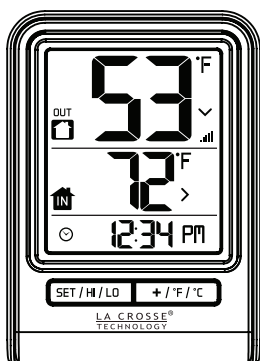

For online video support: <http://bit.ly/LaxTechTalk>

### **Get Started**

 
 
1. Insert 2 AA batteries into the TX141-Bv2 sensor. Check polarity.

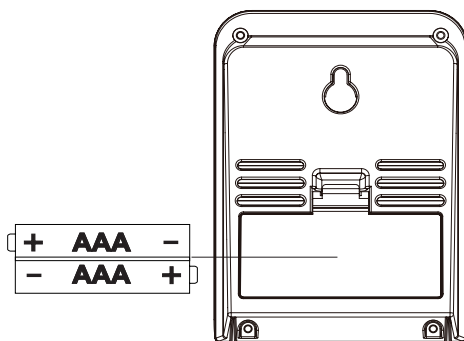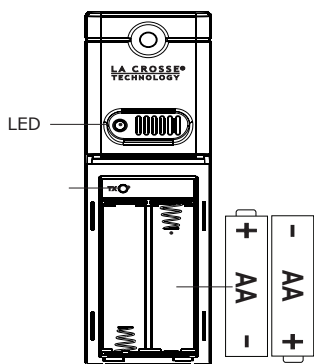

2. Insert 2 AAA batteries into the station. Check polarity.
3. Allow sensor and station to remain 5-10 feet apart for 5 minutes to lock in the sensor signal.
4. Set time.
5. After 5 minutes place sensor outside in a shaded location.

# Fahrenheit/Celsius

  - Press and release the **+ / °F / °C** button to switch between Celsius or Fahrenheit temperature display.

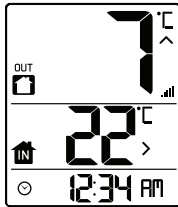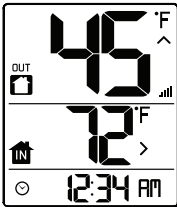

## Set Time

1. Press and hold the **SET** button for 2 seconds to enter setting mode. 12H will flash, press **+ / °F / °C** to select. Press **SET** to confirm.
2. Hour will flash, press **+ / °F / °C** to set. Press **SET** to confirm.
3. Minutes will flash, press **+ / °F / °C** to set. Press **SET** to confirm.



Time Format



 
 
Hour



Minutes

## HI/LO Temperature Readings

- Press **SET/HI/LO** button to view the LO records.
- Hold the **SET/HI/LO** button for 2 seconds to manually clear the LO records in memory.
- Press **SET/HI/LO** button again, to view the HI records.
- Hold the **SET/HI/LO** button for 2 seconds to manually clear the HI records in memory.
- The records will automatically reset at 12:00AM.

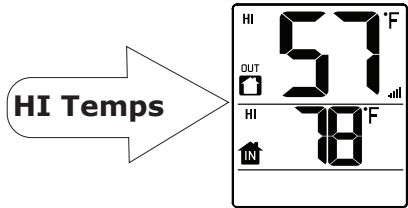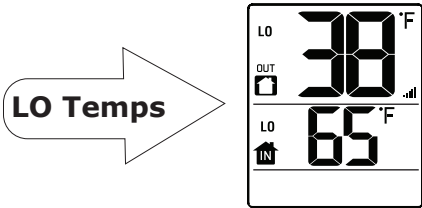

## Temperature Trend Arrows

The temperature (2°F / 1°C) trend indicators update every 15 minutes or less .

- Temperature has risen ^
- Temperature has not changed >
- Temperature has fallen v

Visit Us on Social Media



Latest video content  
[http://bit.ly/LaxTech\\_YouTube](http://bit.ly/LaxTech_YouTube)



For personalized interaction  
[http://bit.ly/LaxTech\\_Facebook](http://bit.ly/LaxTech_Facebook)



Join the conversation  
[http://bit.ly/LaxTech\\_Twitter](http://bit.ly/LaxTech_Twitter)



Pin and share  
[http://bit.ly/LaxTech\\_Pinterest](http://bit.ly/LaxTech_Pinterest)

Outdoor Sensor Search



- Hold **+ / °F / °C** for 3 seconds to search for the outdoor sensor.
- If the signal is lost, station will display the LAST DATA recorded for 10 minutes, after that 10 minutes, the station will display dashes "--".
- After 30 minutes, station starts looking for the sensor automatically.

Low Battery Icons



- Battery icon near outdoor temperature, change batteries in the outdoor sensor.
- Battery icon near indoor temperature, change batteries in the temperature station.

Position Outdoor Sensor

- Mount the Outdoor Sensor on a north-facing wall or in any well shaded area. Under an eave or deck rail is preferred.
- The maximum wireless transmission range to the station is over 300 feet (91 meters) in open air, not including walls or floors.
- Be sure the outdoor sensor is mounted vertically.

Specifications

<b>Indoor Temp Range:</b>	32°F to 122°F (0°C to 50°C)
<b>Outdoor Temp Range:</b>	-40°F to 140°F (-40°C to 60°C)
<b>Distance:</b>	Over 300 ft. (91 meters) RF 433MHz (open air)
<b>Interval:</b>	About every minute
<b>Power Station:</b>	2-AAA, IEC, LR3 batteries (not included)
<b>Power TX141-Bv2:</b>	2-AA, IEC, LR6 batteries (not included)
<b>Battery Life Station:</b>	over 12 months with reputable batteries
<b>Battery life TX141-Bv2:</b>	over 24 months with reputable batteries
<b>Dimensions Station:</b>	2.64" W x 1.38" D x 3.66" H (66 W x 35 D x 93 H mm)
<b>Dimensions TX141-Bv2:</b>	1.57"W x 0.82" D x 5.11" H (40 W x 20.8 D x 129.8mm H)

## **Warranty and Support**

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

Before returning a product, please contact our friendly customer support with questions or visit our online help:

Phone: 1-608-782-1610    [www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

View full warranty details online at:

[www.lacrossetechnology.com/warranty\\_info.pdf](http://www.lacrossetechnology.com/warranty_info.pdf)

Protected under U.S. Patents: 5,978,738 | 6,076,044 | RE43903

## **Care and Maintenance**

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period.
- Remove expired batteries promptly.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

**Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **Caution!**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

## **Canada Statement**

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.